


orangebox



 
 

Assembly

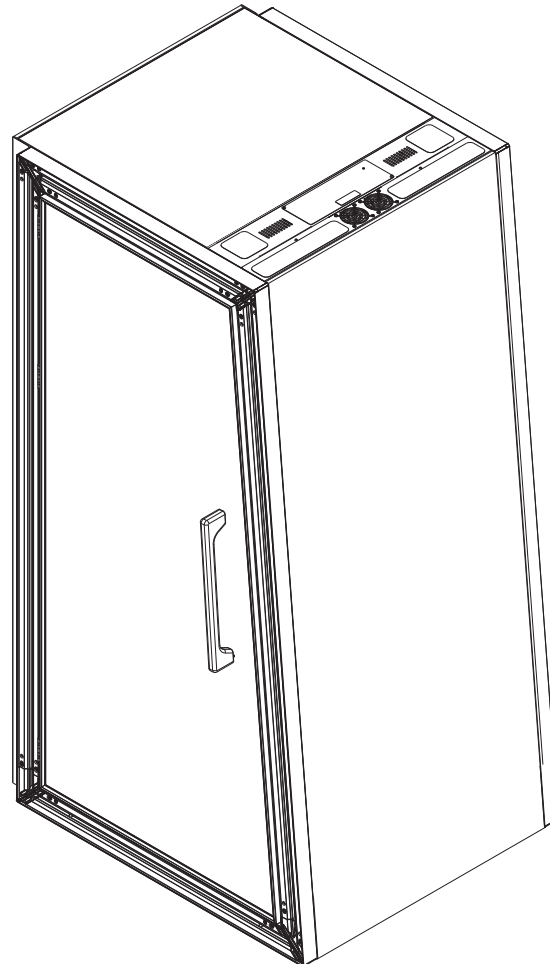

Directions



Orangebox - On the Qt Americas Assembly Instruction

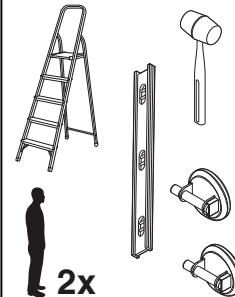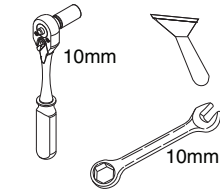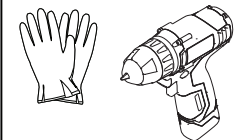

2x

© 2022 Steelcase Inc.
Grand Rapids, MI 49501 U.S.A.
Printed in U.S.A.



English Pages 1 to 47
Español Pages 48 to 94
Français Pages 95 to 141
Doc # 161179 Rev A

Table of Contents

Part list	3
Hardware Kits.....	4
Seismic Brackets	6
Level Base.....	8
Felt Panel	9
Rear Wall	11
Window.....	12
Front Wall.....	13
Roof Subassembly	14
Indicator Light.....	16
PDU	18
Hardwire Options	19
Roof Felt Panel	21
Electrical Module.....	22
Roof Cassette	26
Sprinkler Location	27
PIR and Outlet Bezel	28
Door	29
Optional shim	32
Gap Extrusion.....	35
Cover Caps.....	37
Exterior Cladding.....	39
Manifestations	44

orangebox



*LH Option Shown, RH Option Mirrored

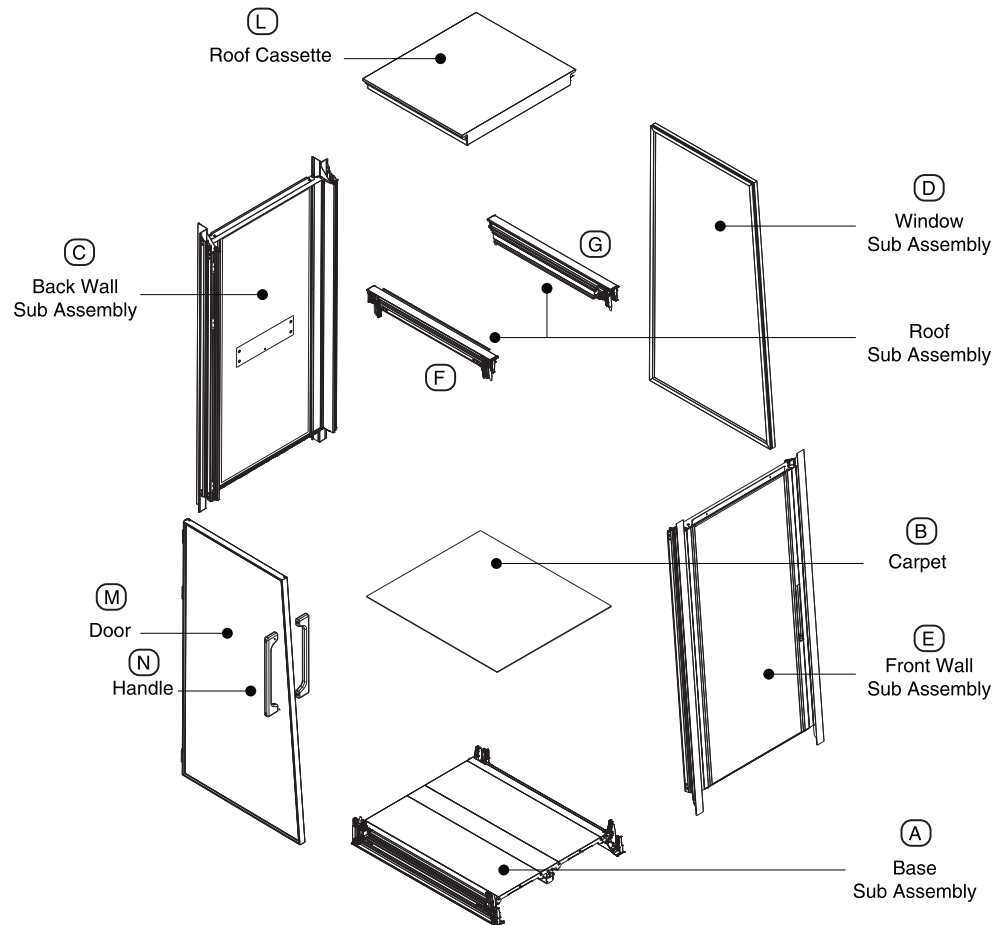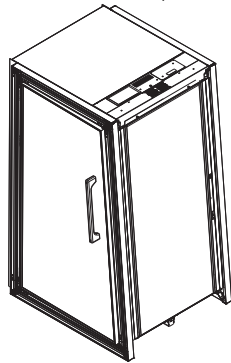






Hardware Kits Defined

 

Kit - Hardware, Pod

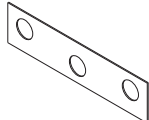(R)	M6x16mm		16x		T-30	
(Q)	M5x16mm		13x		#2	
(BB)	M5x10mm		24x		#2	
(W)						
(TT)				6x		
(FF)				6x	(GG)	

  

Kit - Hardware, Electrical

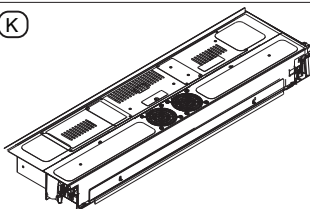(V)		(X)	
(Y)		(Z)	  2x
(AA)	 	M6	2x
(J)			
(S)			
(O)			
(K)			

 

Kit - Hardware, Seismic

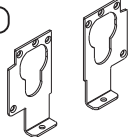(U)	M6x20mm		4x		4mm	(KK)		2x
(JJ)	M6x30mm		4x		4mm	(LL)		2x

  Kit - Handle


(T)	M6x75mm		2x		5mm	(M)		2x	(N)		2x	(OO)		2x	(PP)		2x	(QQ)		4x
-----	---------	---	----	--	-----	-----	---	----	-----	--	----	------	---	----	------	---	----	------	--	----

Kit - Gap

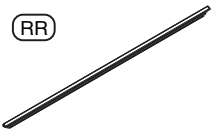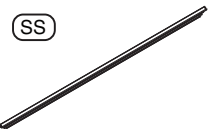
(RR)		(SS)	
------	---	------	---

orangebox

Electrical Components
Bill of Material


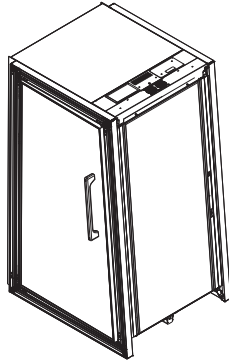


NOTE: LH power option shown, RH mirrored.

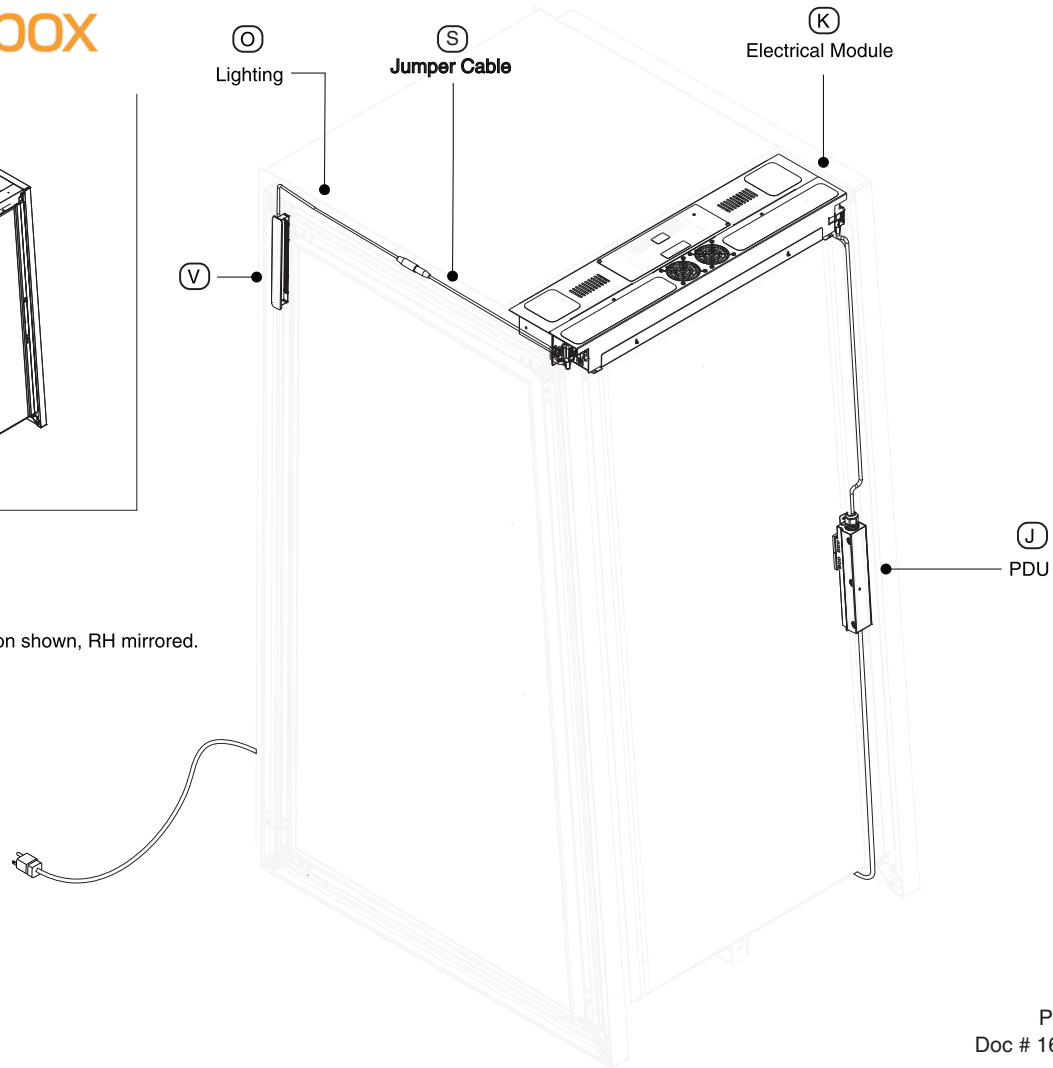

1 Install Seismic Brackets (Optional) KK


- The Building's Engineer of Record (EOR) must be consulted to determine if anchoring is needed to meet seismic or other Building Code requirements.
- The EOR will need to verify the adequacy of the building construction to resist the forces and weights imposed on the structure.
- Secure brackets to the building with hardware specified by the EOR and per the hardware manufacturer's instructions.

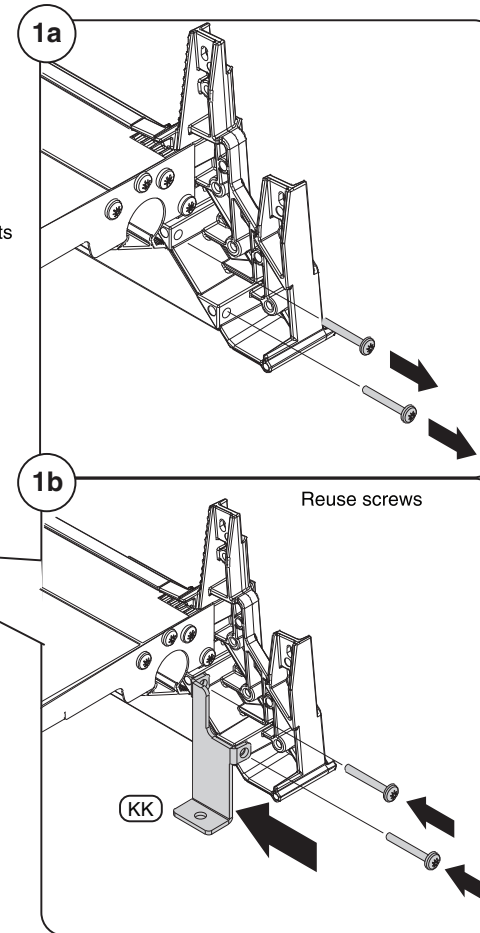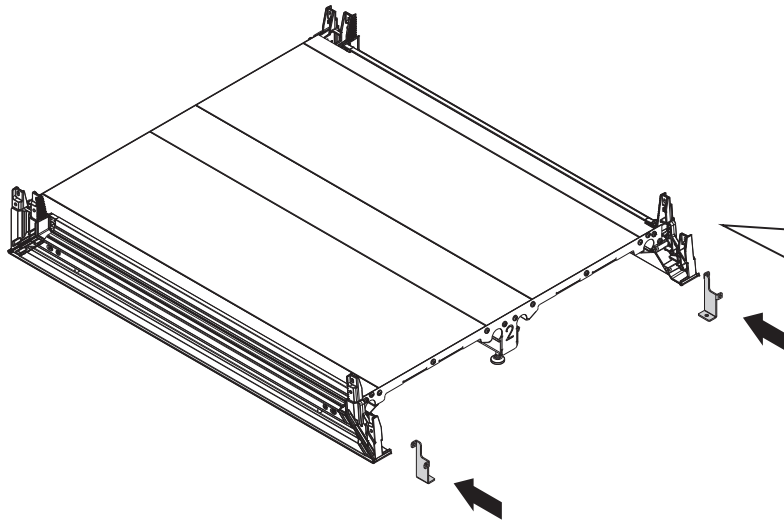


Seismic Brackets Install (continued)

U
JJ
LL

U M6x20mm
4x
4mm

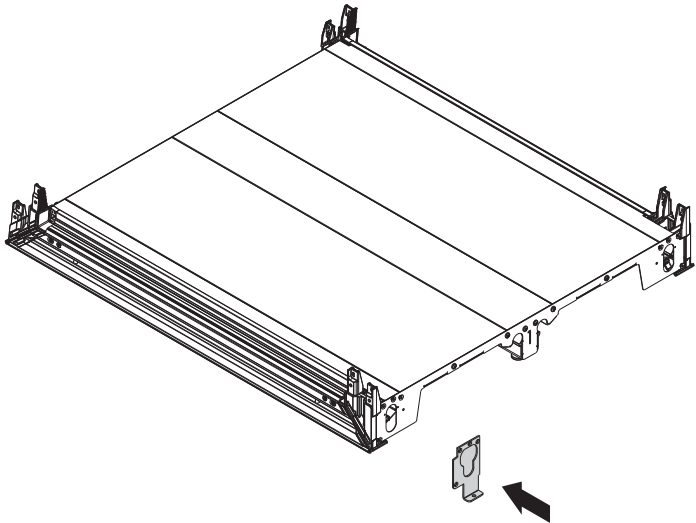


JJ M6x30mm
4x
4mm

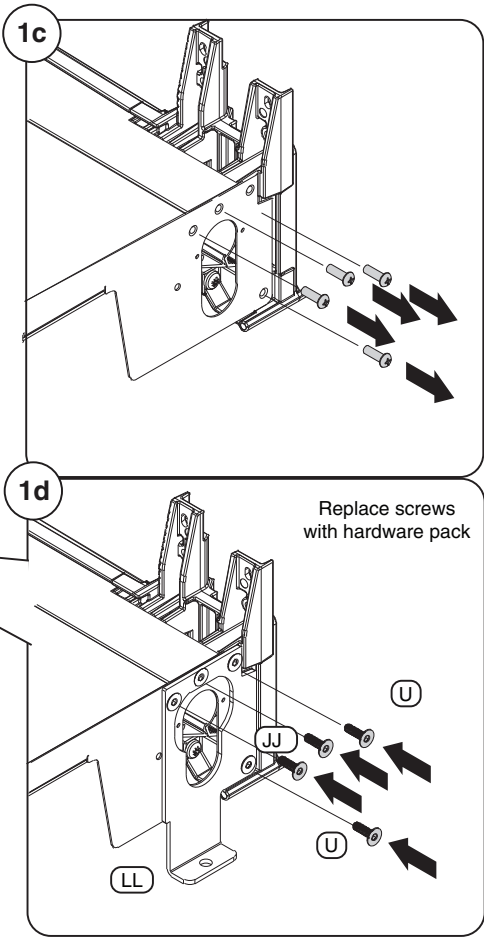


orangebox

2 Level Base Assembly (A)

NOTE: Unit must be 4" away from all building recepticals.

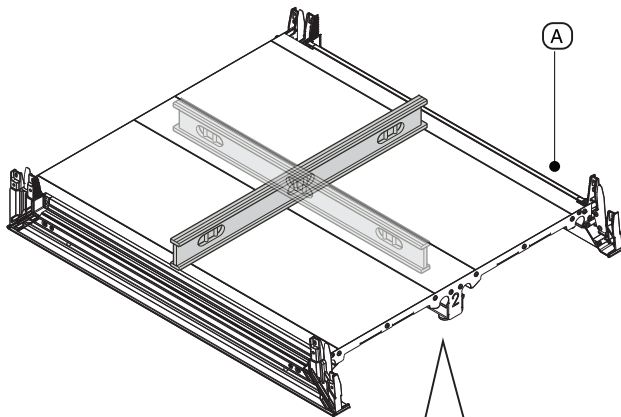


NOTE: If power is being hardwire to the building, adjust glides so that base of unit is 3/4" above floor.

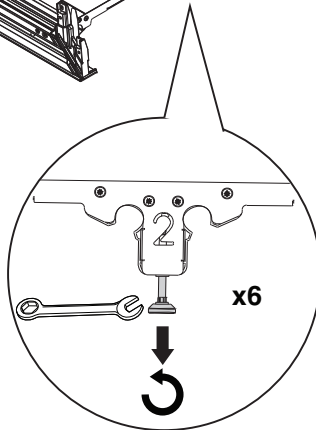


3 Carpet Flooring (A) (B)

NOTE: If installed incorrectly, unit needs to be disassembled to correct.

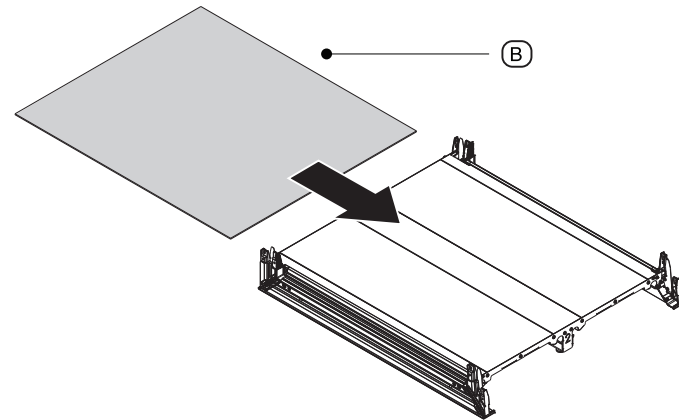


OR

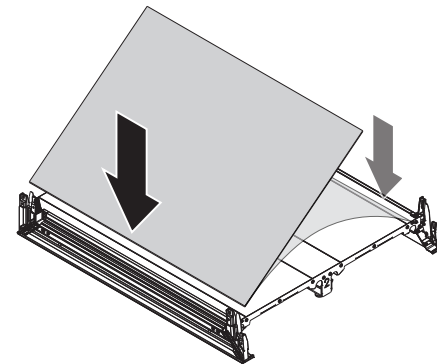

orangebox


4 Install Felt Panel

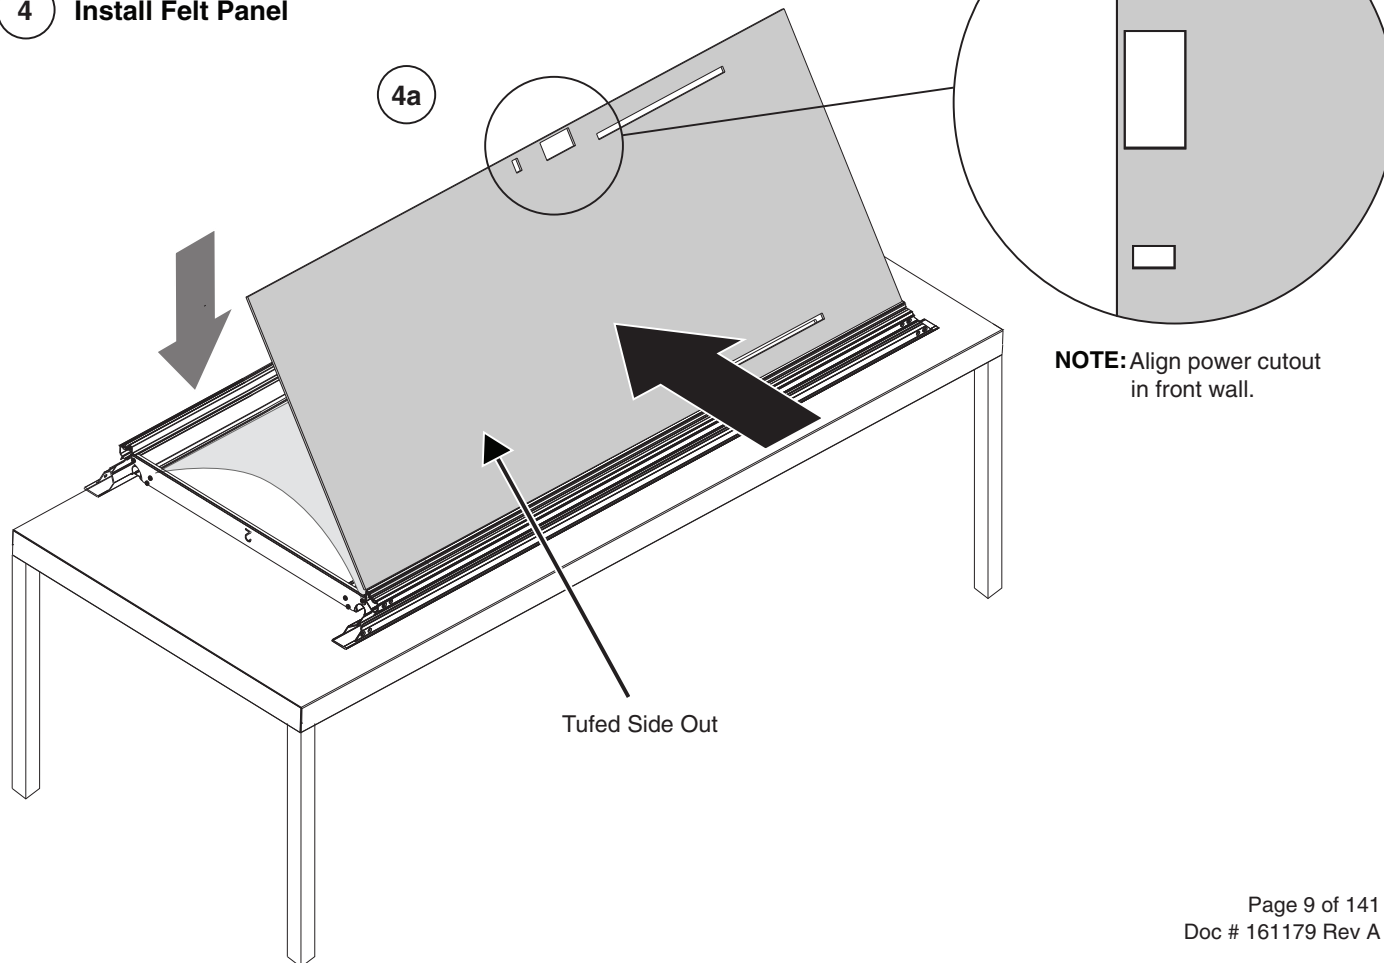

orangebox

Install Fell Panel
(continued)

4b

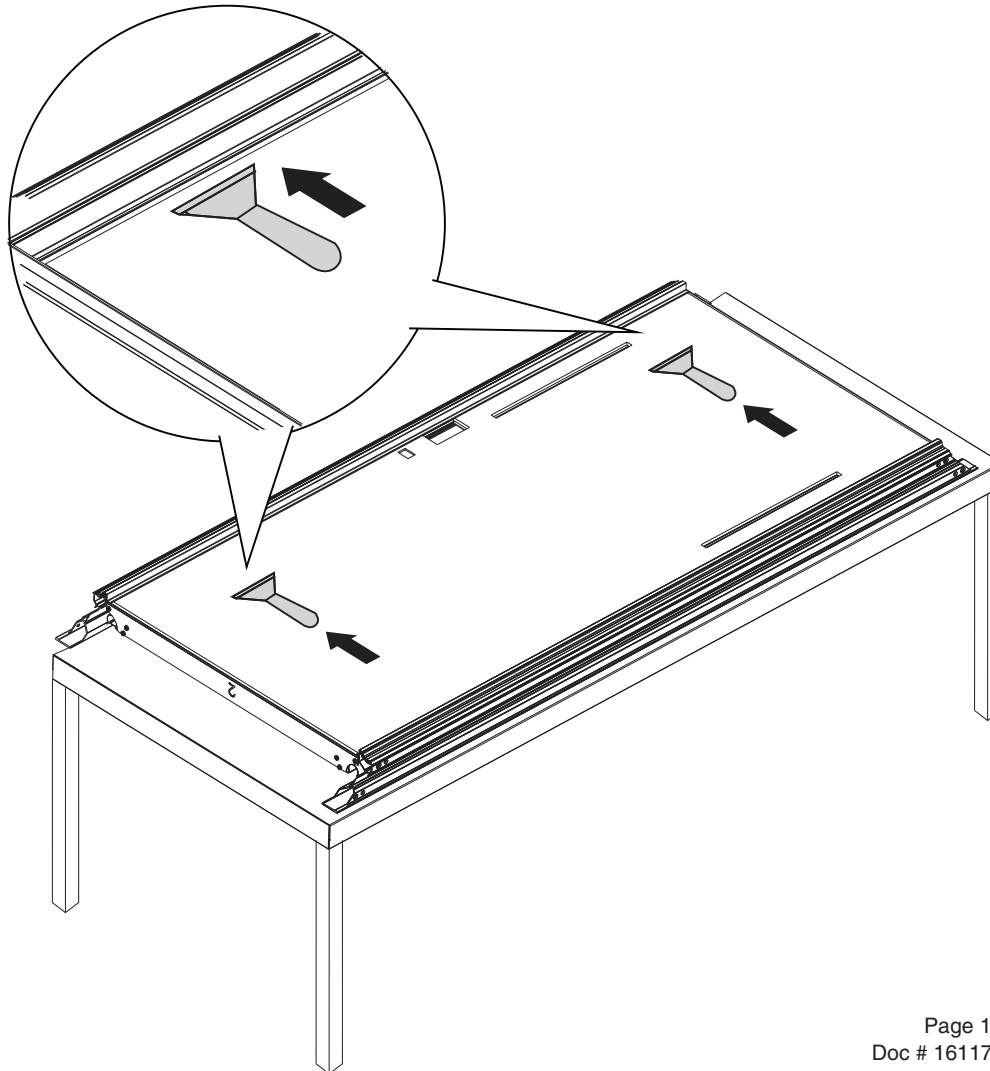


orangebox

5

Install Rear Wall





(C) (A)

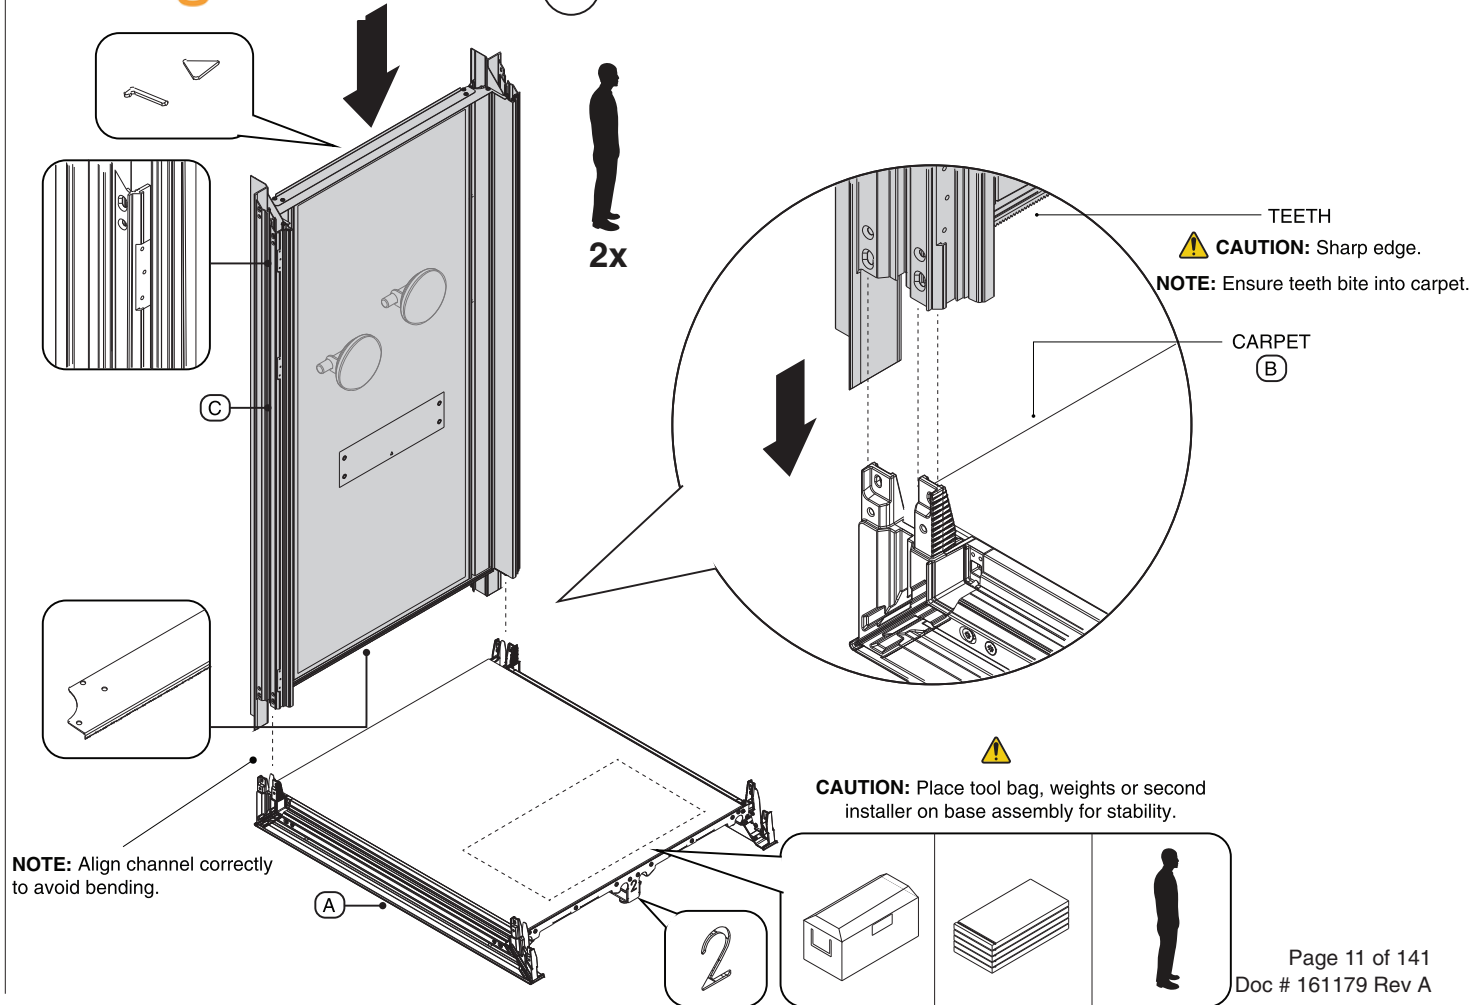

orangebox

6 Install Window


(D) (A) (C)

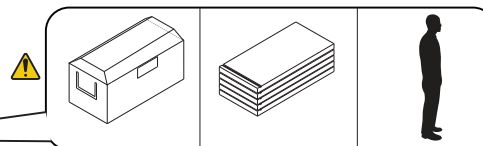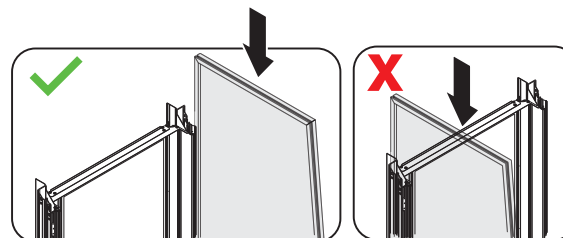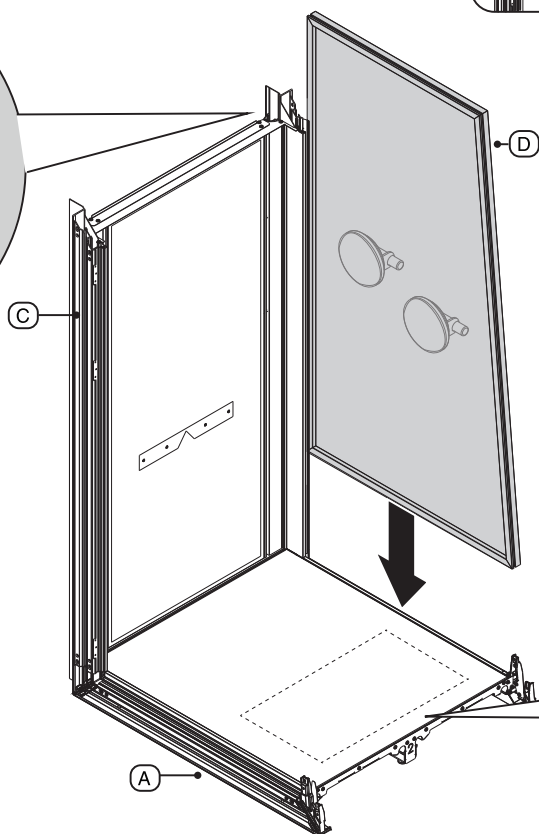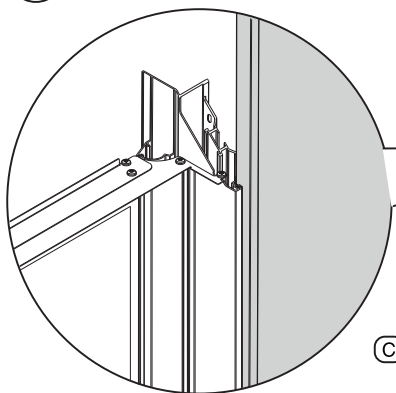


CAUTION: Place tool bag, weights or second installer on base assembly for stability.

7 Install Front Wall


(E) (A) (D)

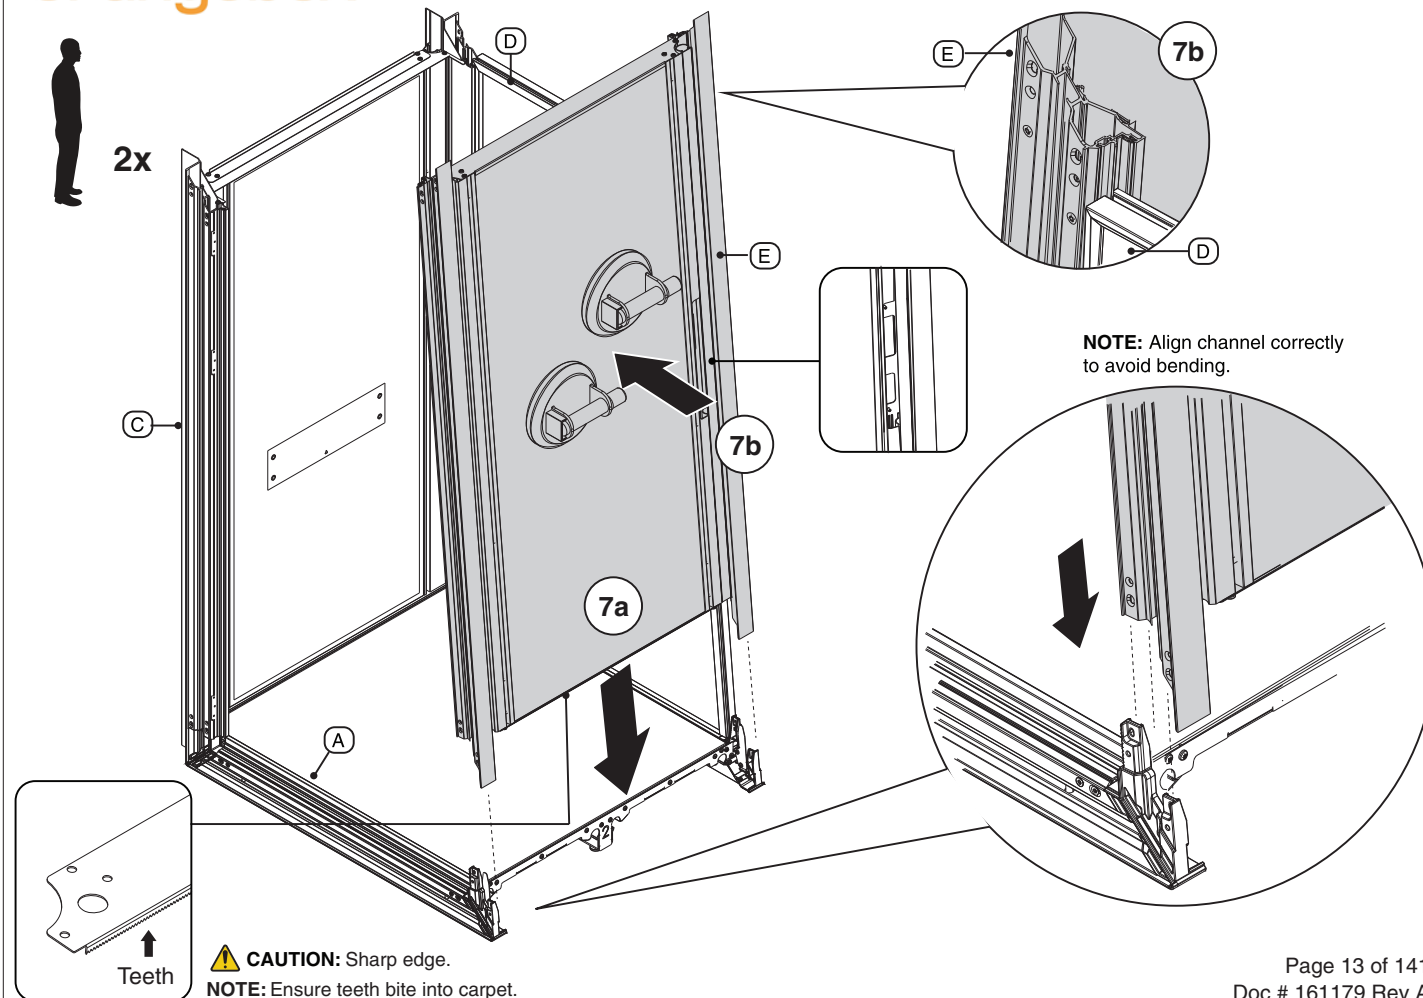

orangebox

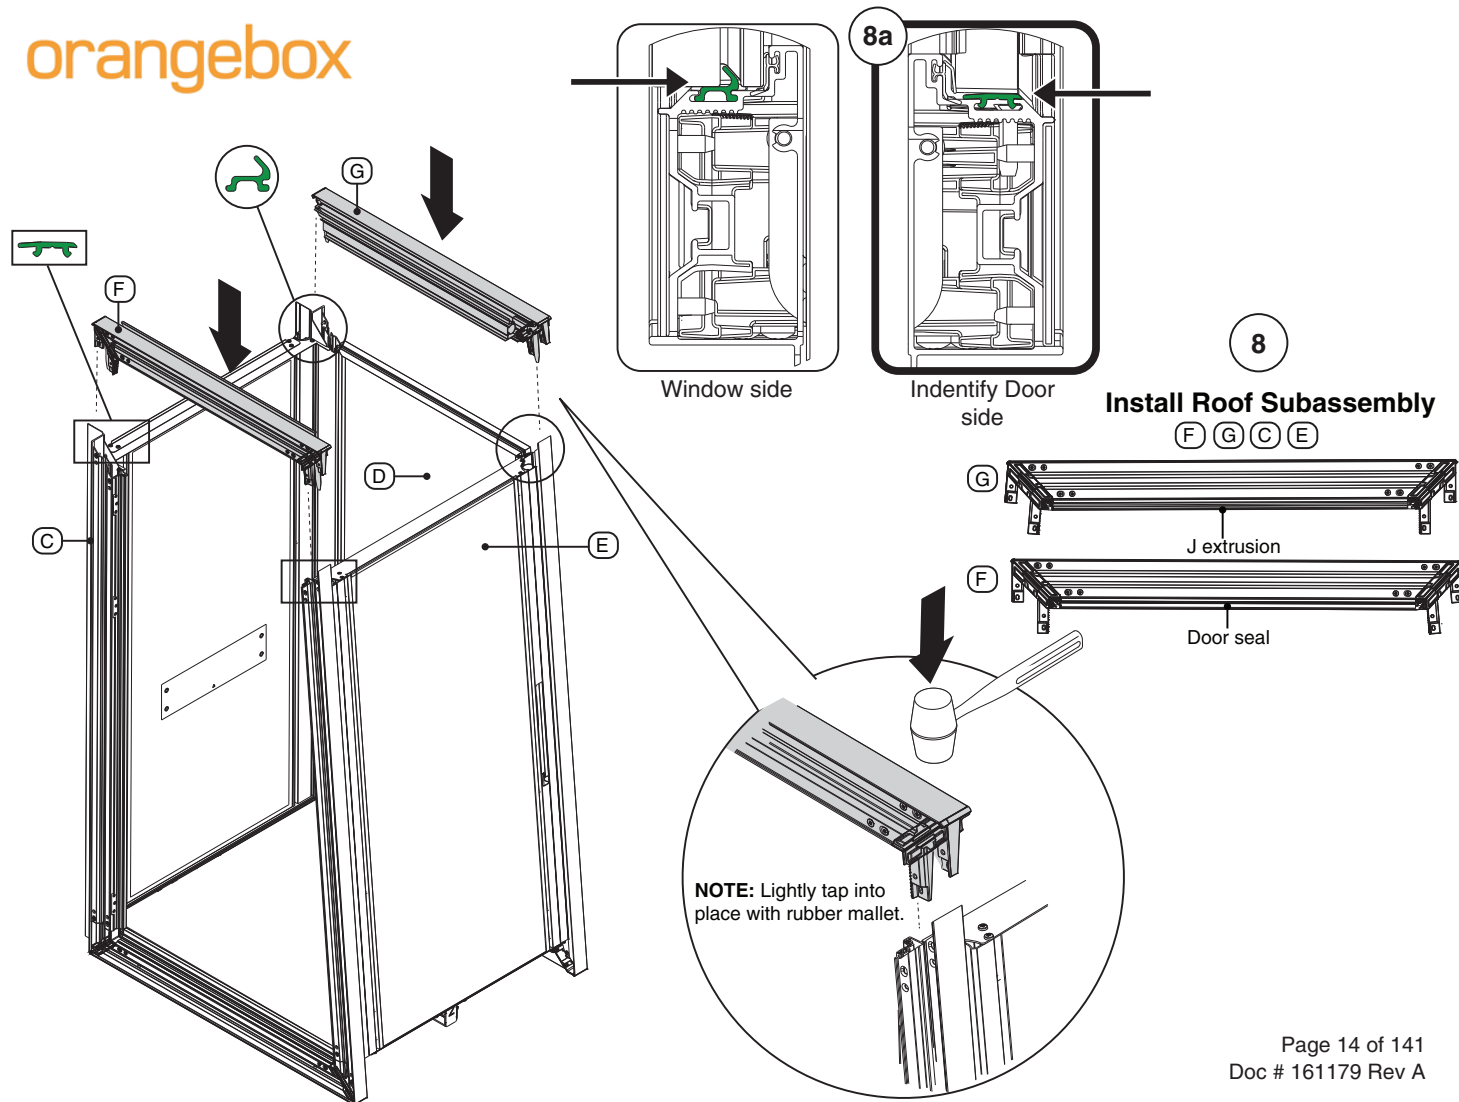


10 Install Indicator Light (O) (V) (S)

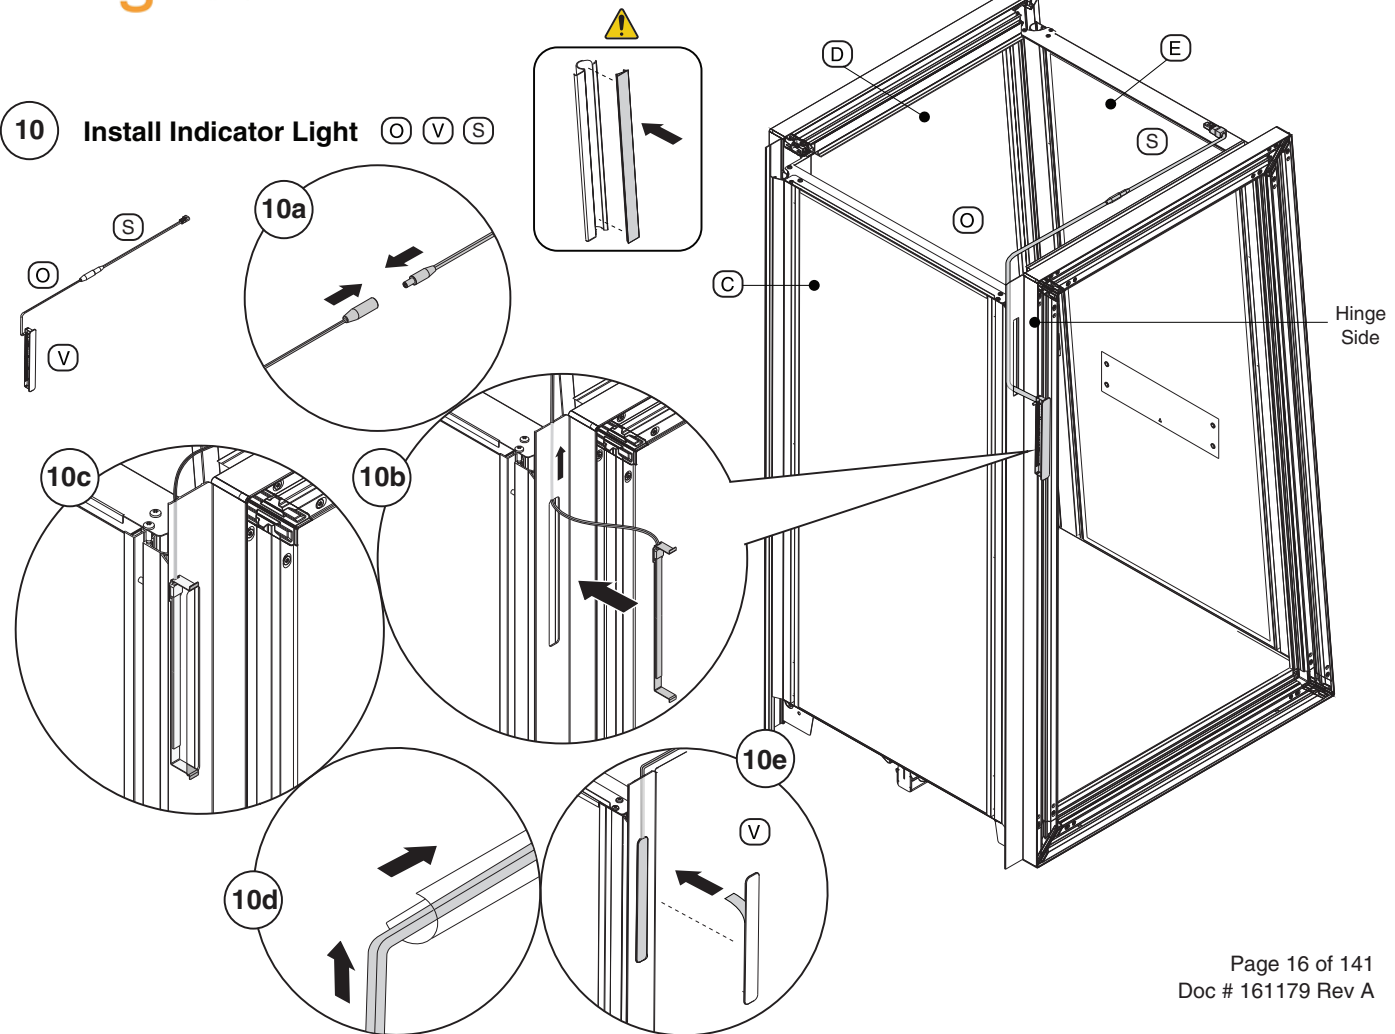


orangebox

Indicator Light
(continued)

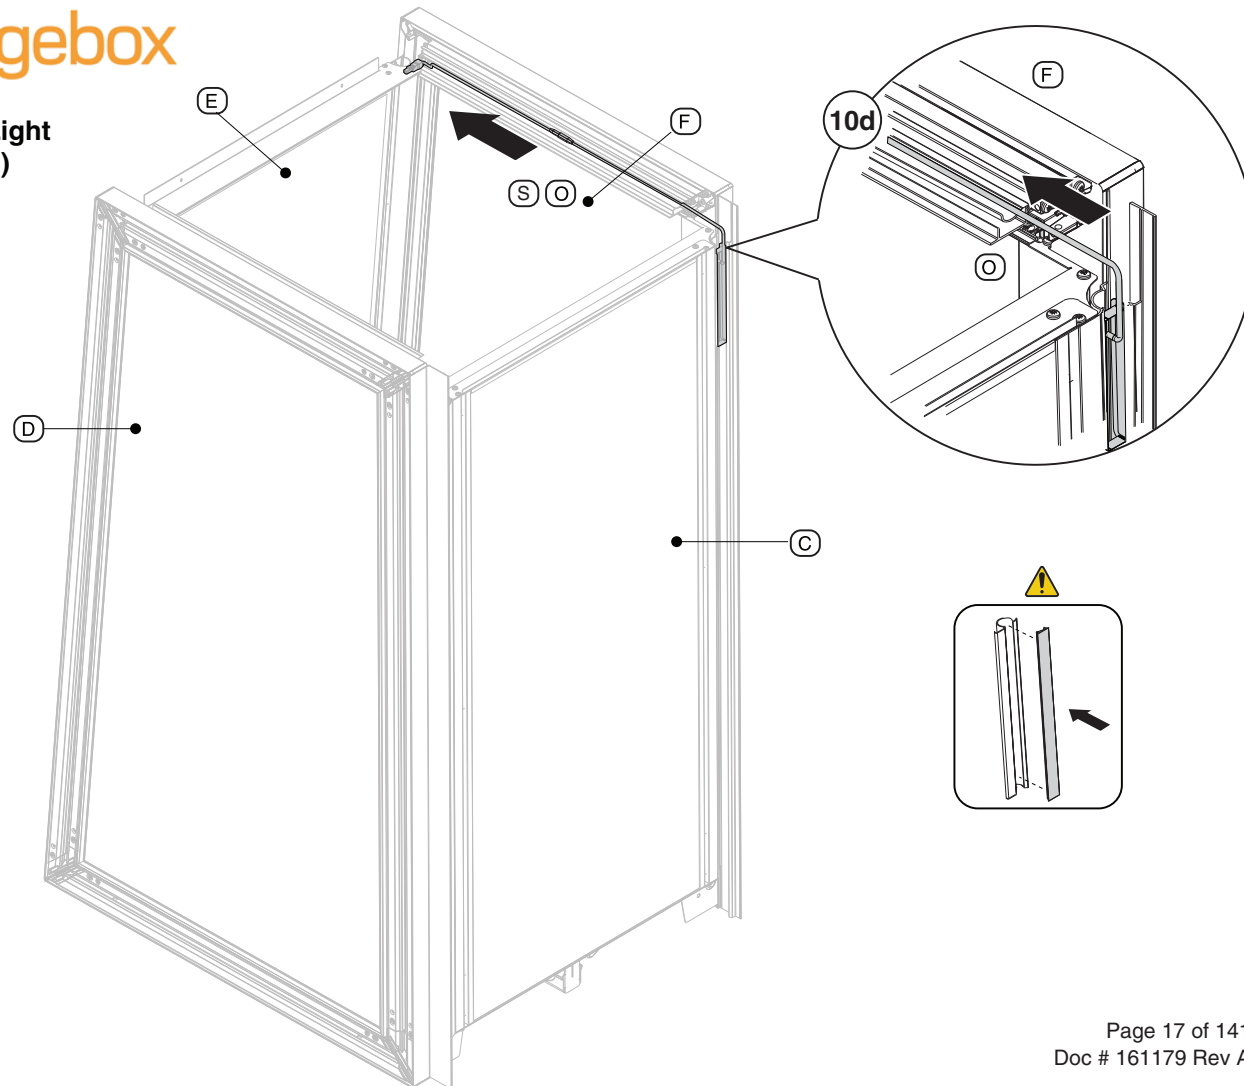

orangebox


11 Install PDU J

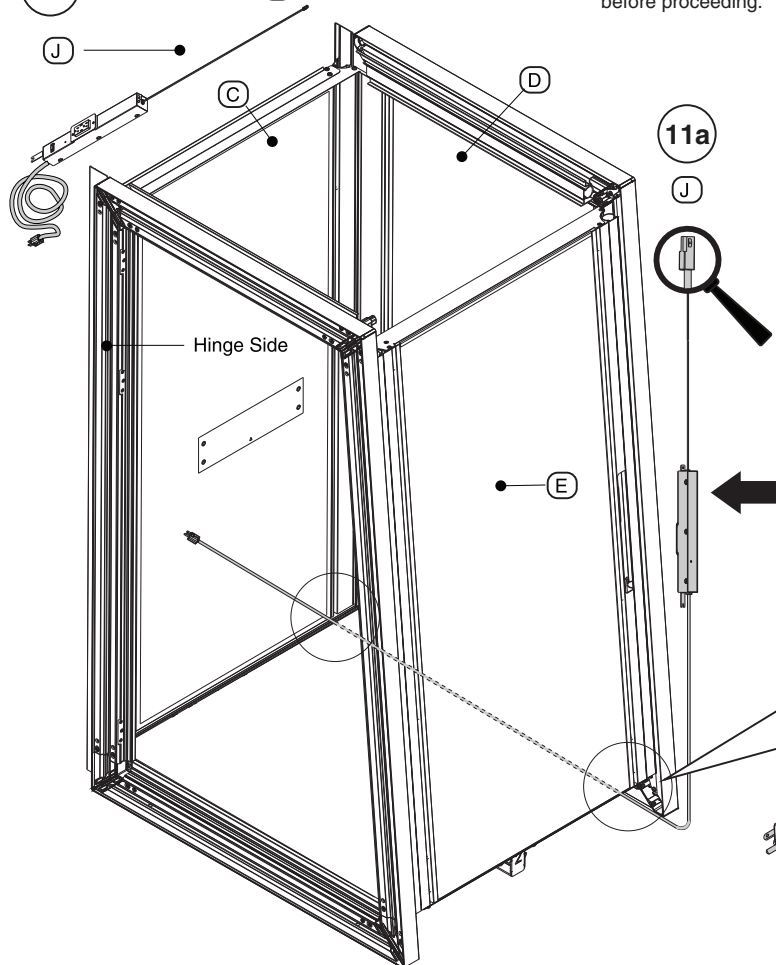

NOTE: If hardwiring power, reference hardwire pages 19-20, before proceeding.




AA

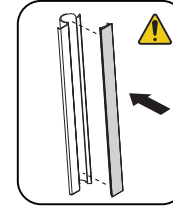

11a

J

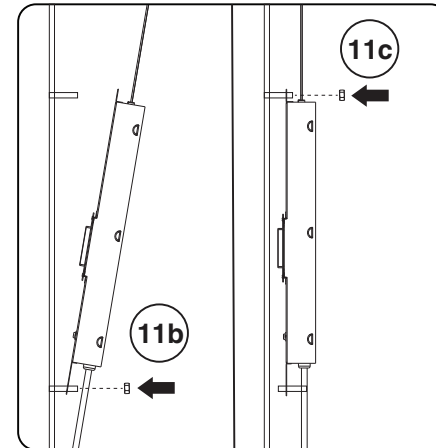


11b

11c

11d

11e

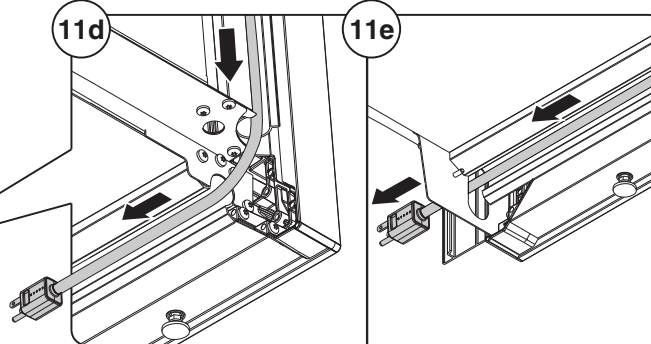




Hardwire Options

Power supplied from floor
Legend For Termination

		
Ground (Green)	Neutral (White)	Hot (Black)

It is the responsibility of a qualified electrician to use a NRTL listed termination box to be installed no further than 1' from the base of the booth and to supply and install conduit from the termination box to the building supply in compliance with national and local code.

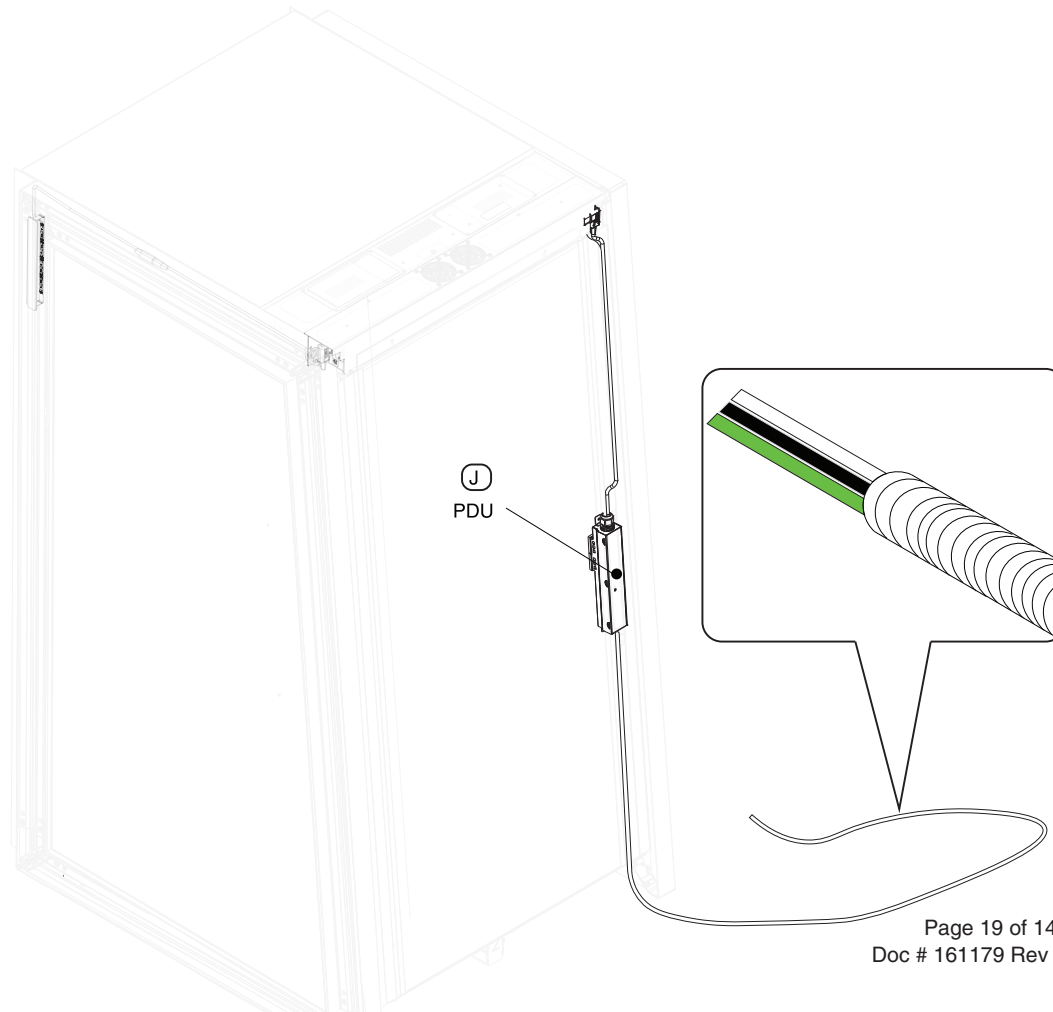





It is the responsibility of a qualified electrician to use a NRTL listed termination box to be installed no further than 1' from the base of the booth and to supply and install conduit from the termination box to the building supply in compliance with national and local code.

Hardwire Options Continued

Power supplied from ceiling


Legend For Termination

		
Ground	Neutral	Hot
(Green)	(White)	(Black)


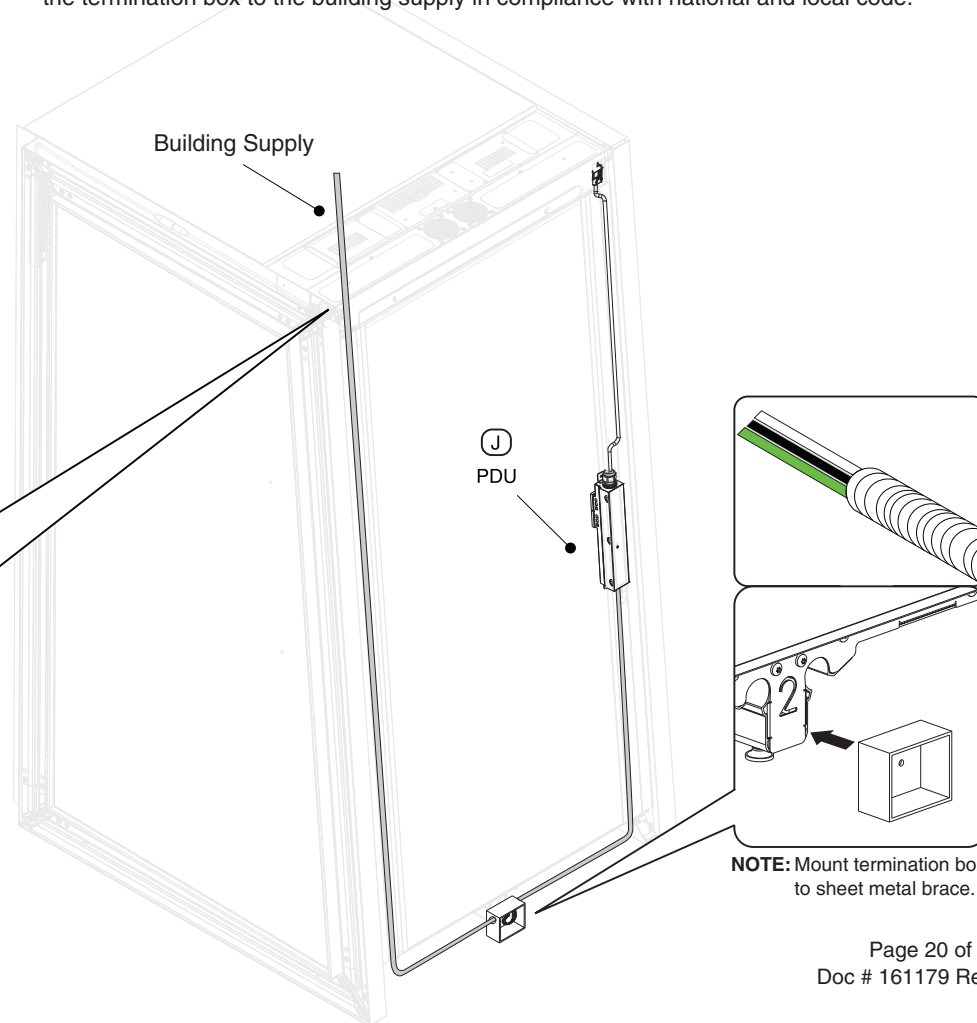
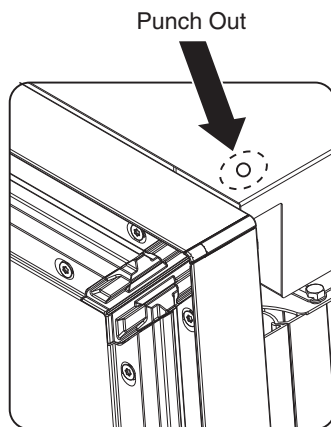


orangebox

12 Install Roof Felt Panel

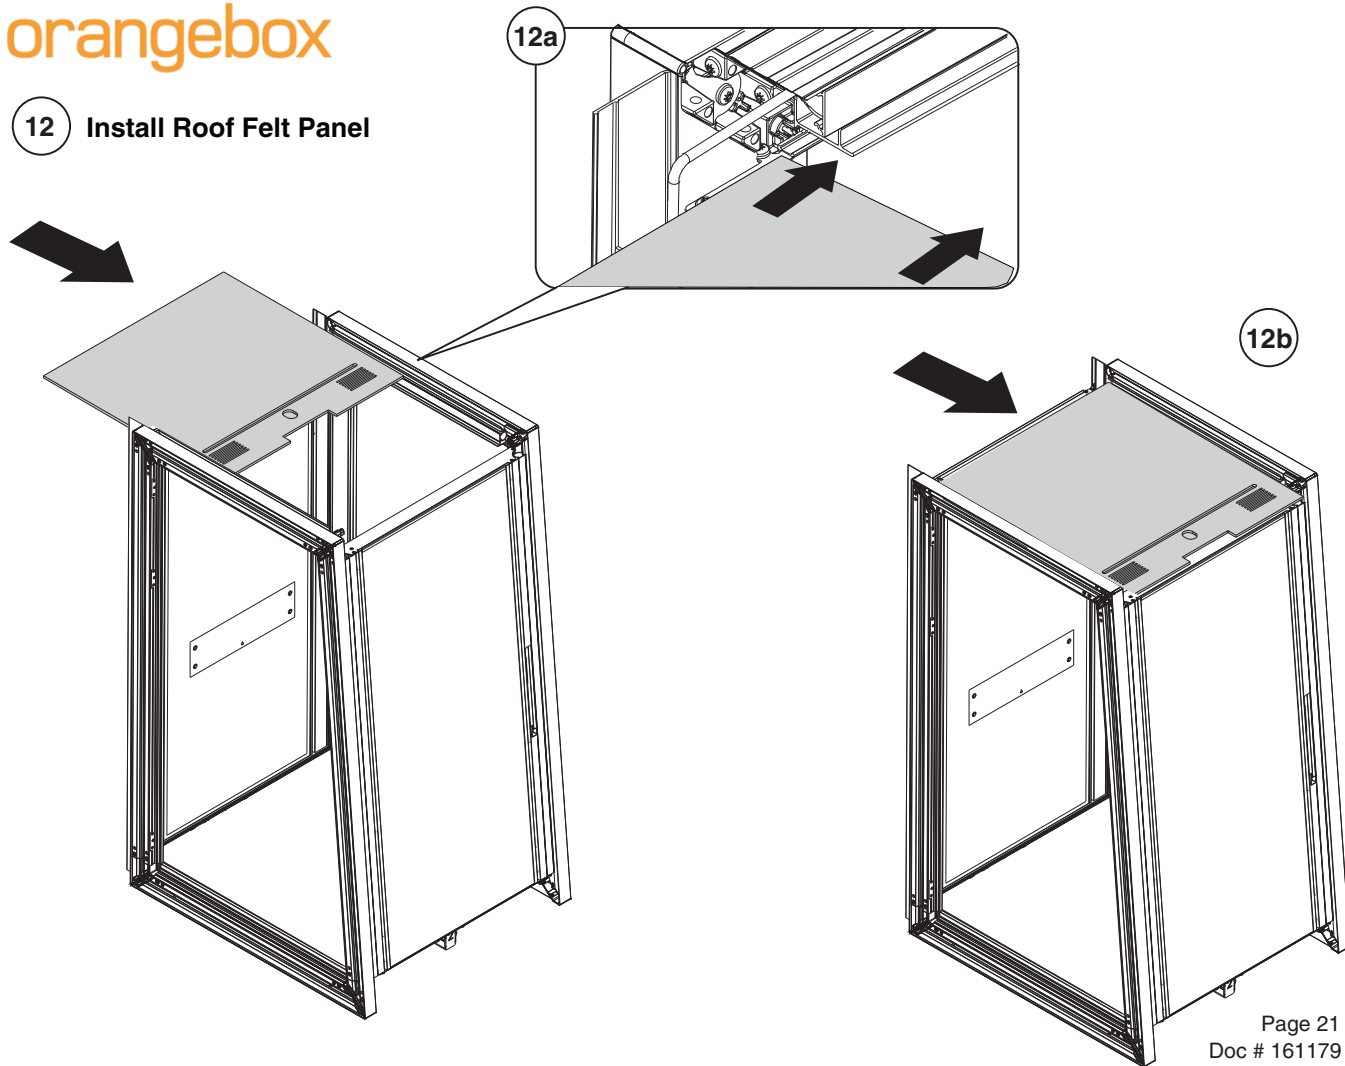


13 Prep Electrical Module Install

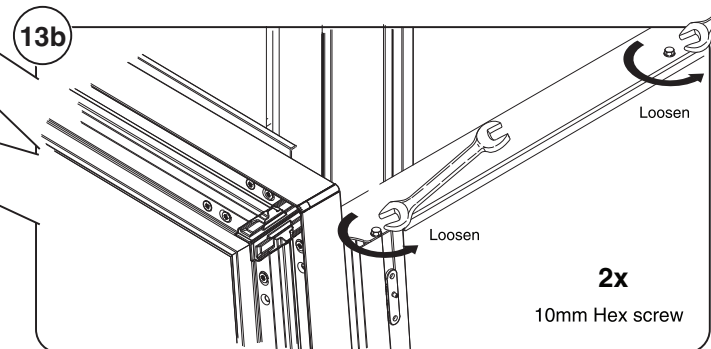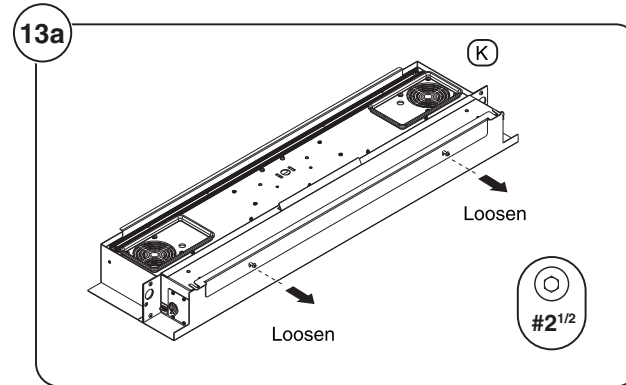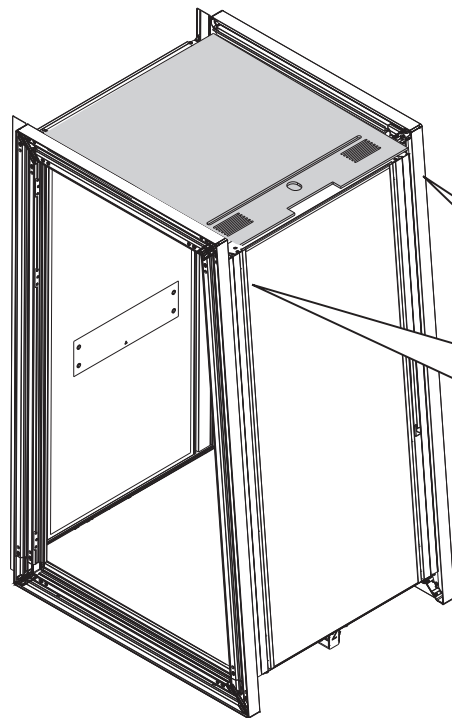

orangebox



14 Plug Cords into Electrical Module (K) (J) (S)

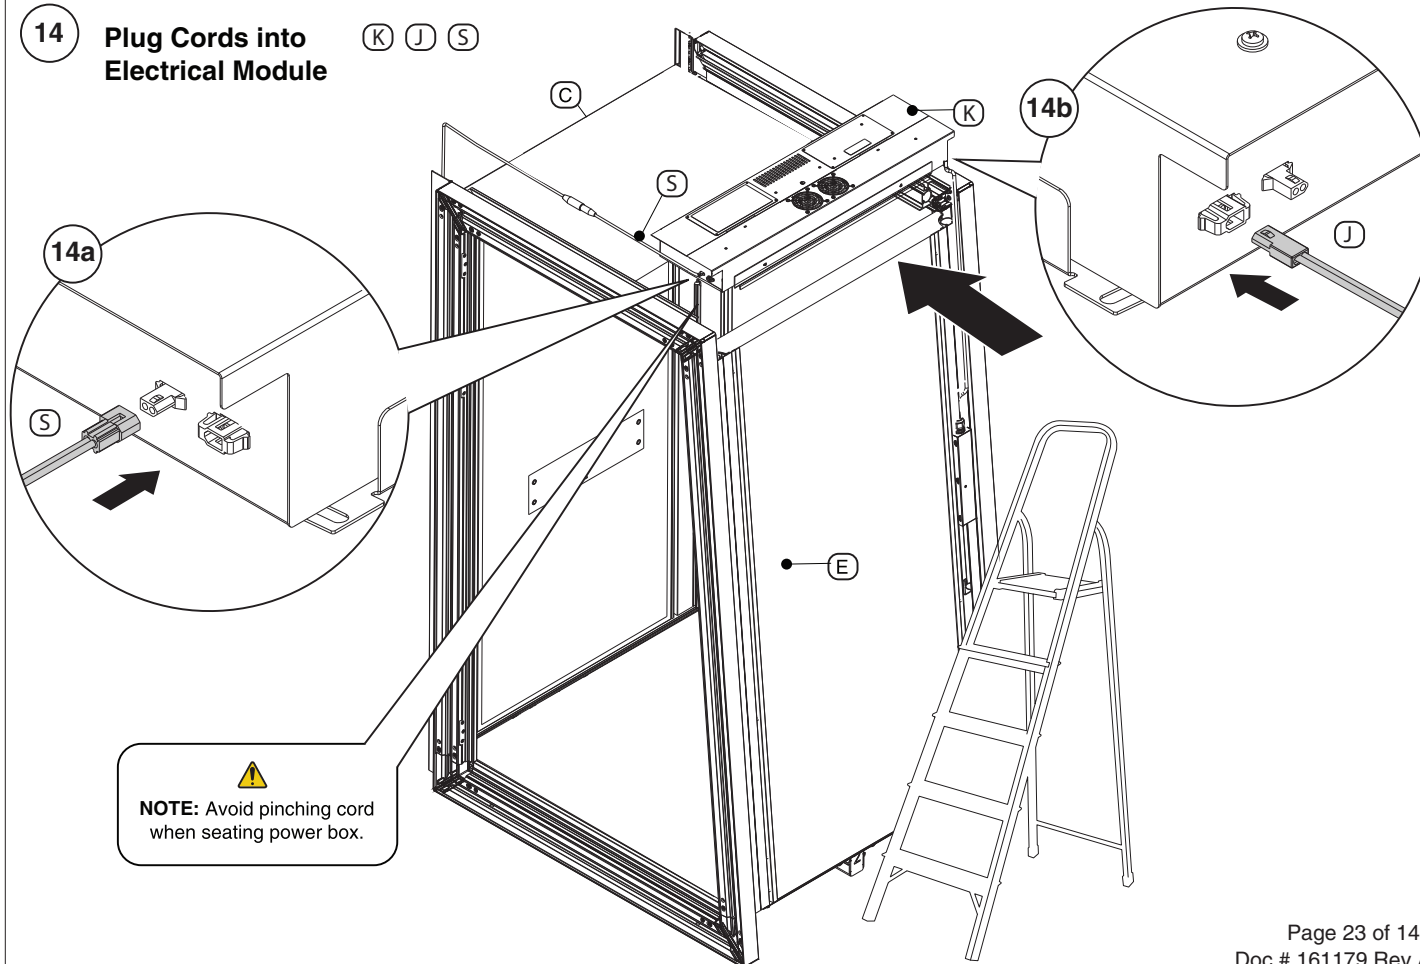

15 Install Electrical Module

15a




Slide Electrical Module Into Place

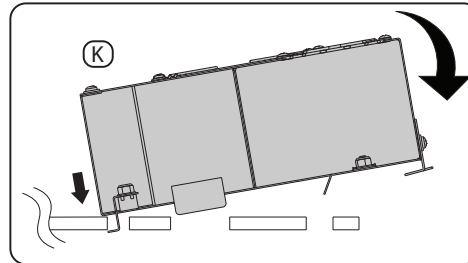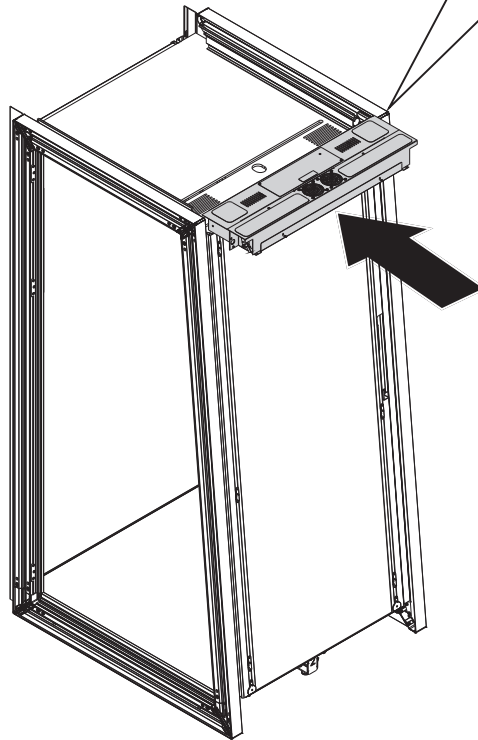

Caution: Careful not to damage roof felt panel.


15b

Hand Tighten Screws

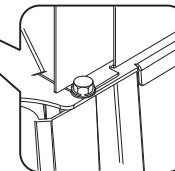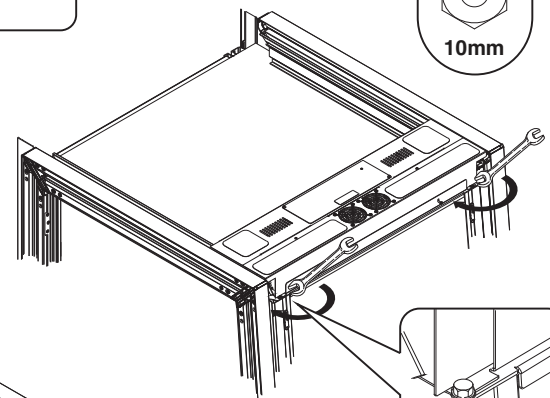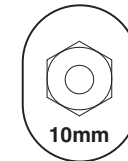


15c



Hand Tighten Screws

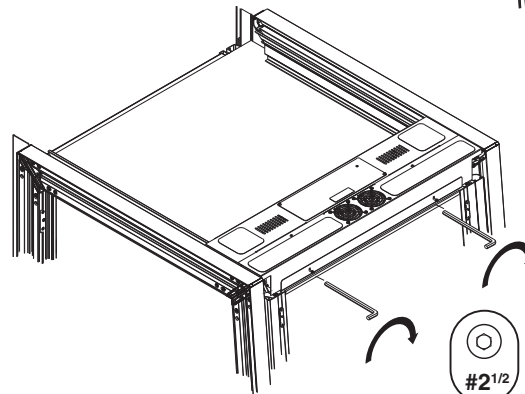

16 Align Roof Panel with Electrical Module

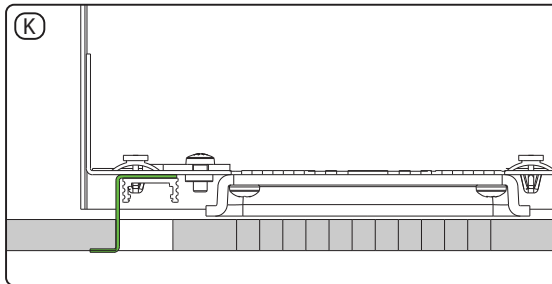


(K)

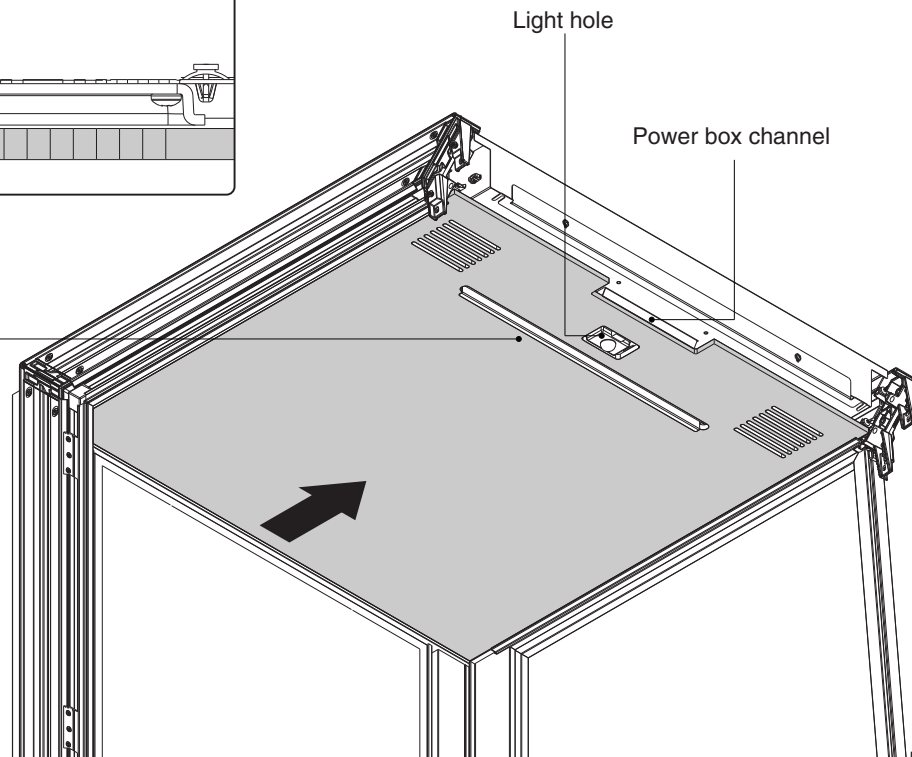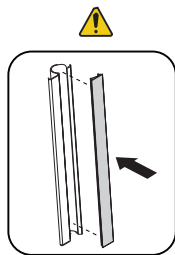

orangebox

17 Install Roof Cassette



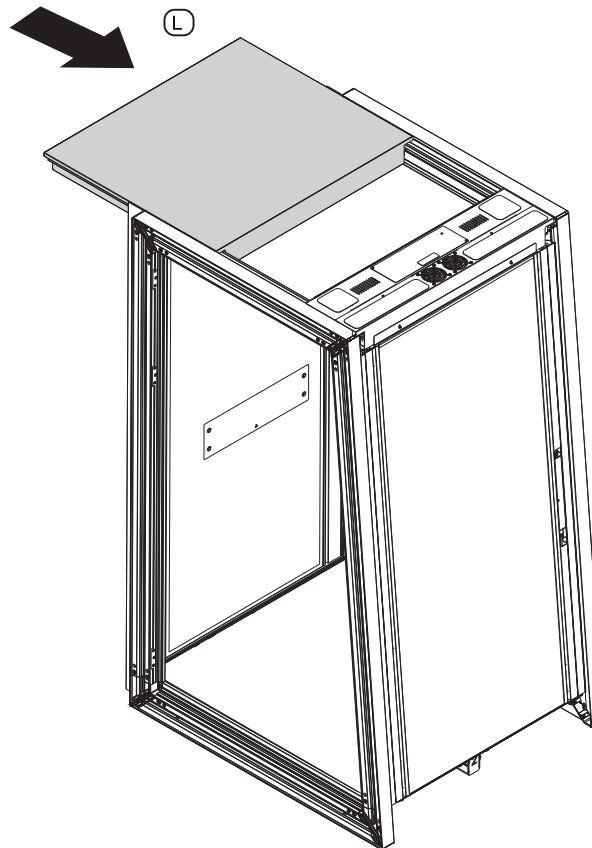


orangebox

18 Sprinkler Location (Option)






4 INCHES FROM ALL INSIDE WALLS

NOTE: Check with the local authorities to ensure product installation meets local requirements

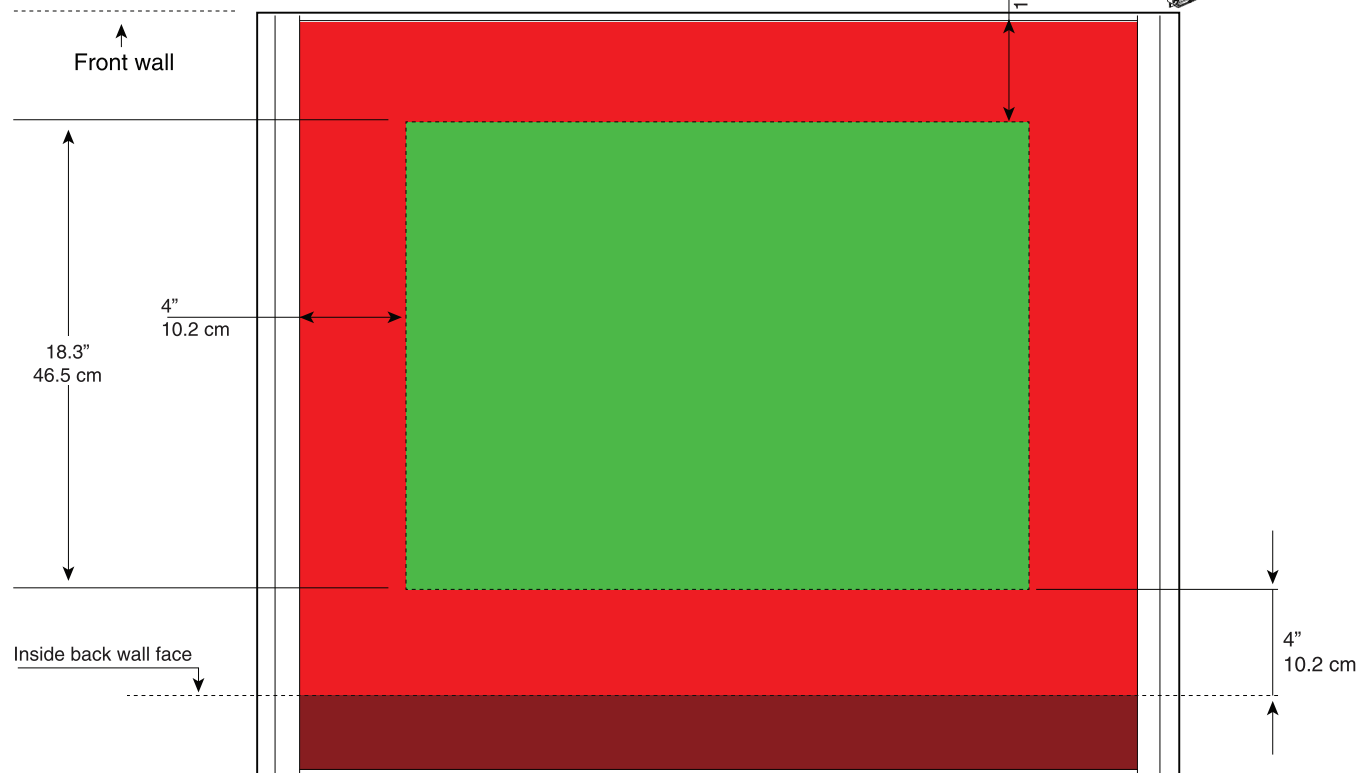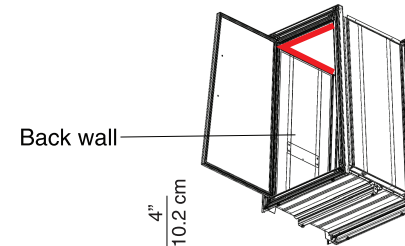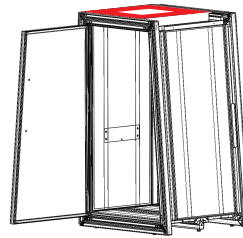

orangebox





19 Install PIR and Outlet Bezel (X) (Y) (Z)

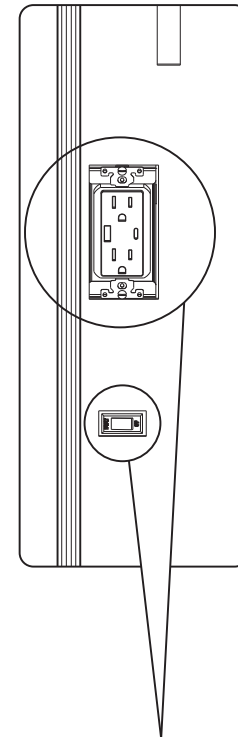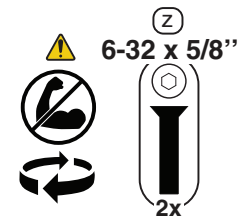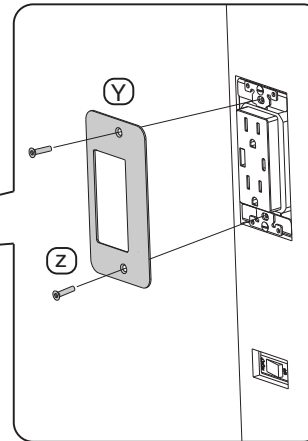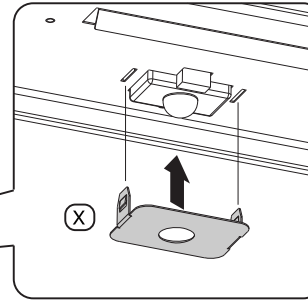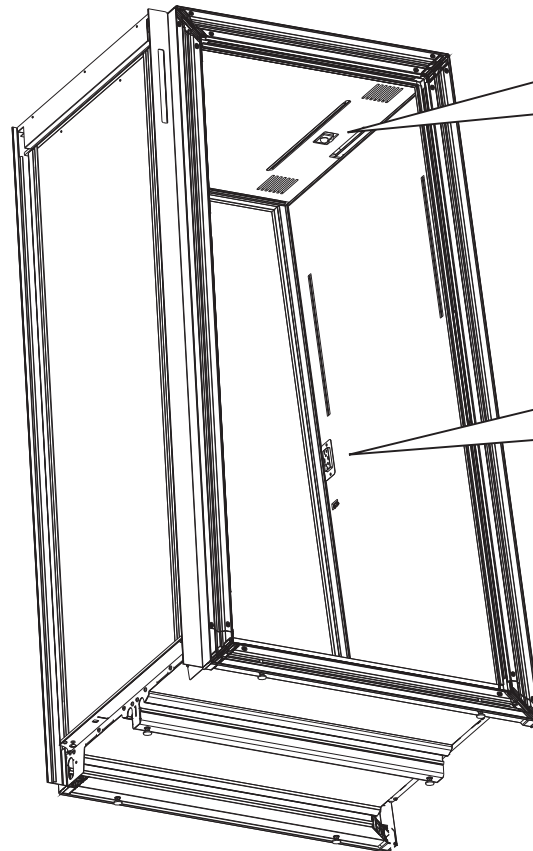

Align Panel Cutouts




orangebox

20 Install Door (M) (Q)

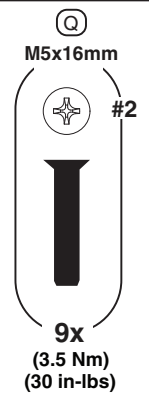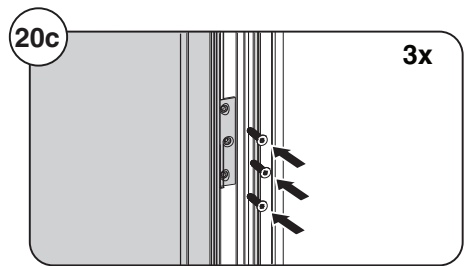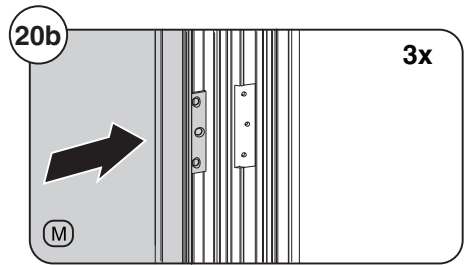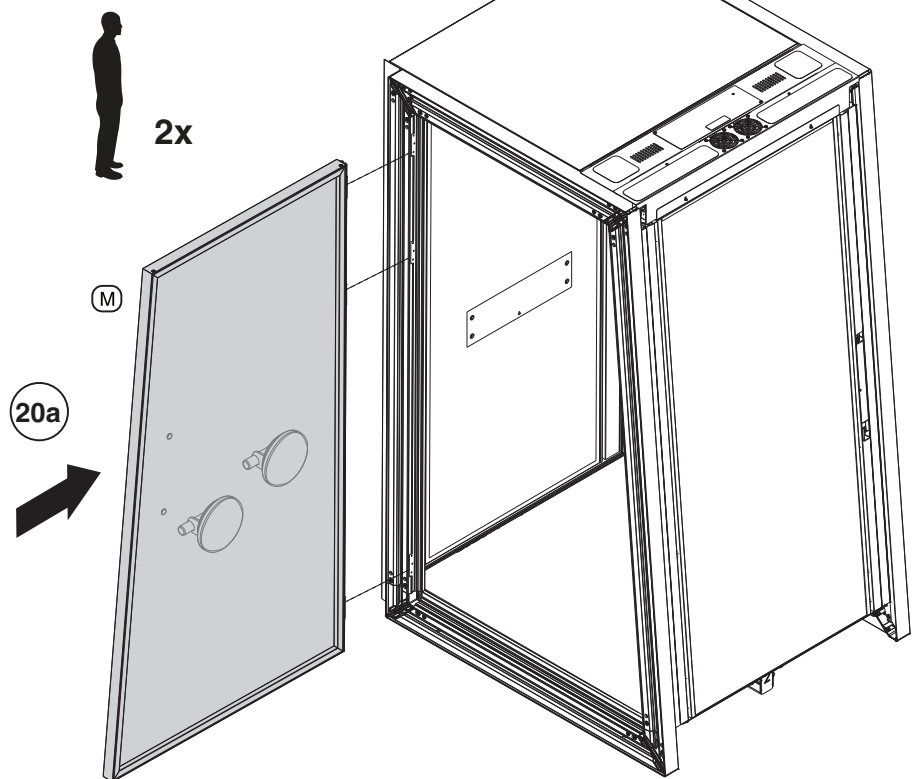

orangebox

21 Install Over Opening Strap (Q)
(W)

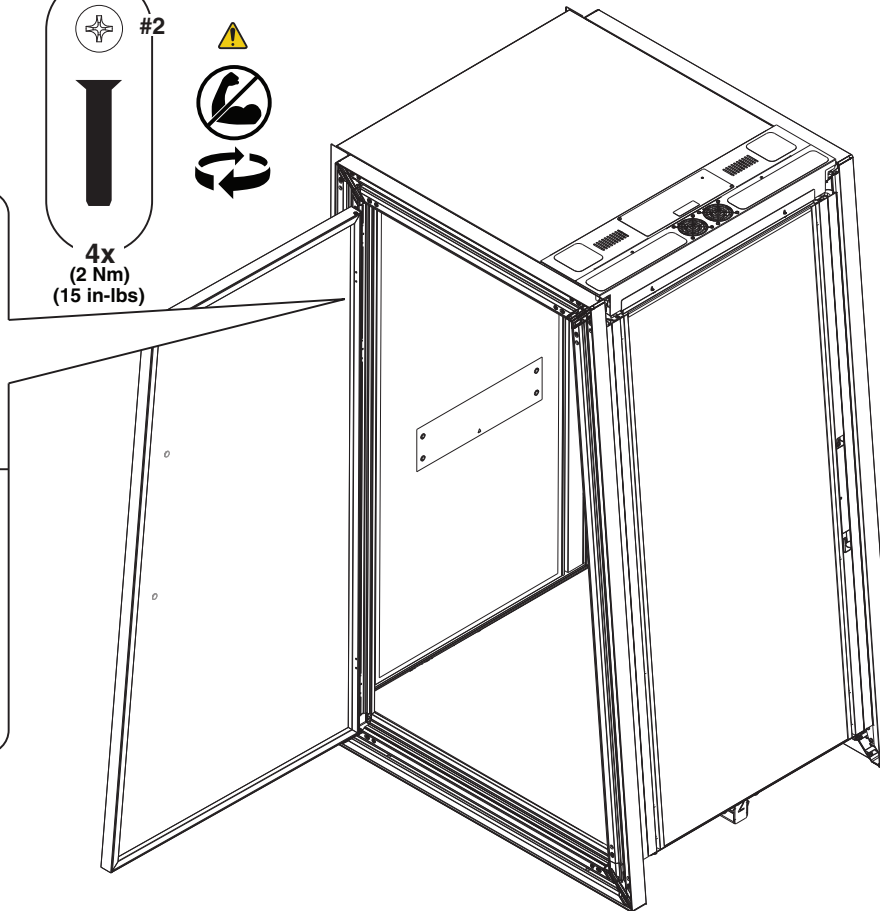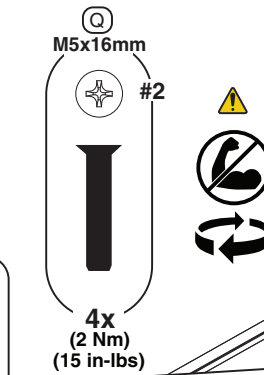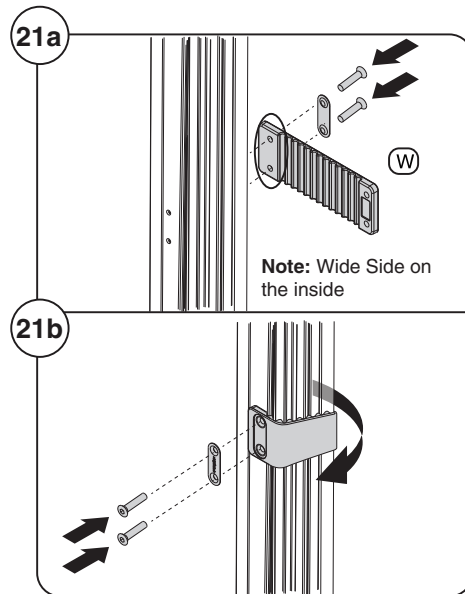


orangebox





22 Install Handle (T) (M) (N)
(OO) (PP) (QQ)



NOTE: If installing manifestations refer to the table of contents before installing handle.

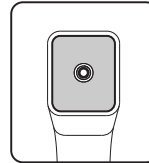


22a Install Gasket to Handles (QQ) (M) (N)

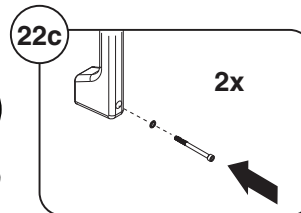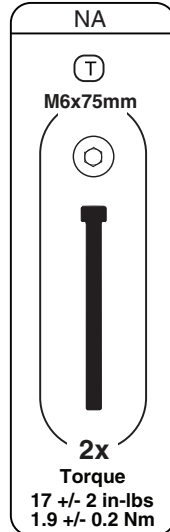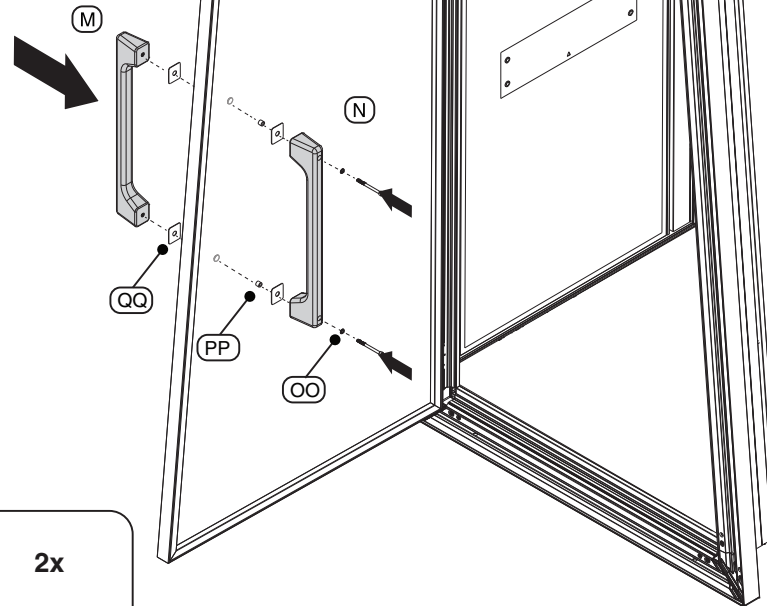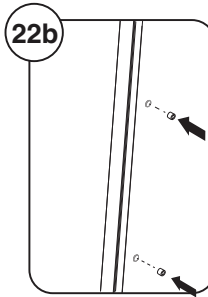

23 Optional Shim Install


NOTE: Proceed if door does not stay shut.

⚠ Caution:
Door should not exceed
15 lbs opening force.

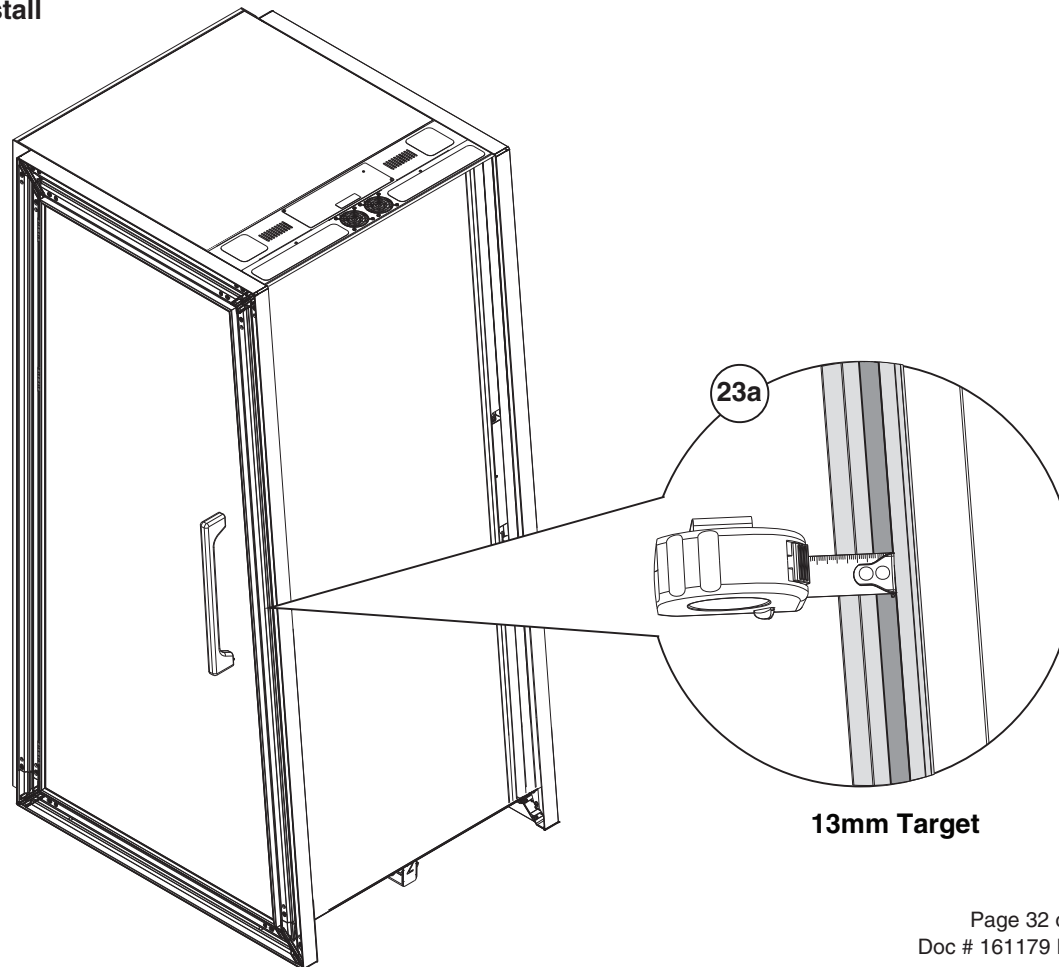


orangebox


Optional Shim Install (continued) TT Q

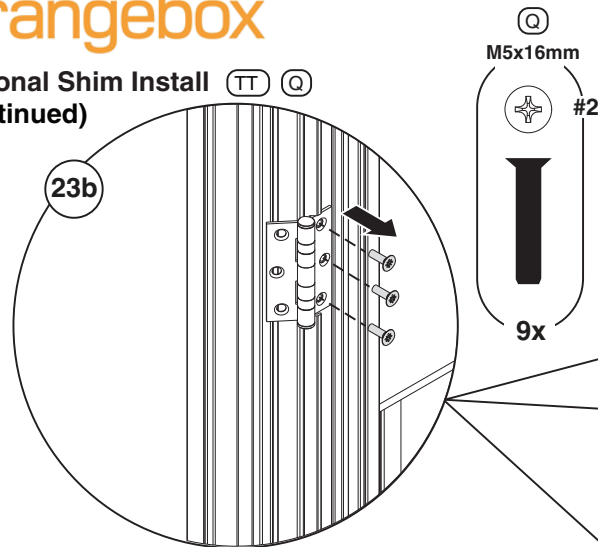

NOTE: Remove screws from one hinge at the time.

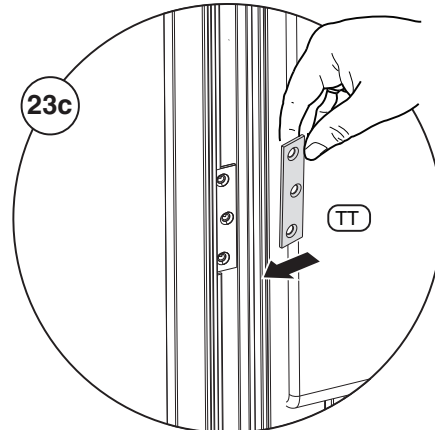


NOTE: Slip shim(s) behind hinge.

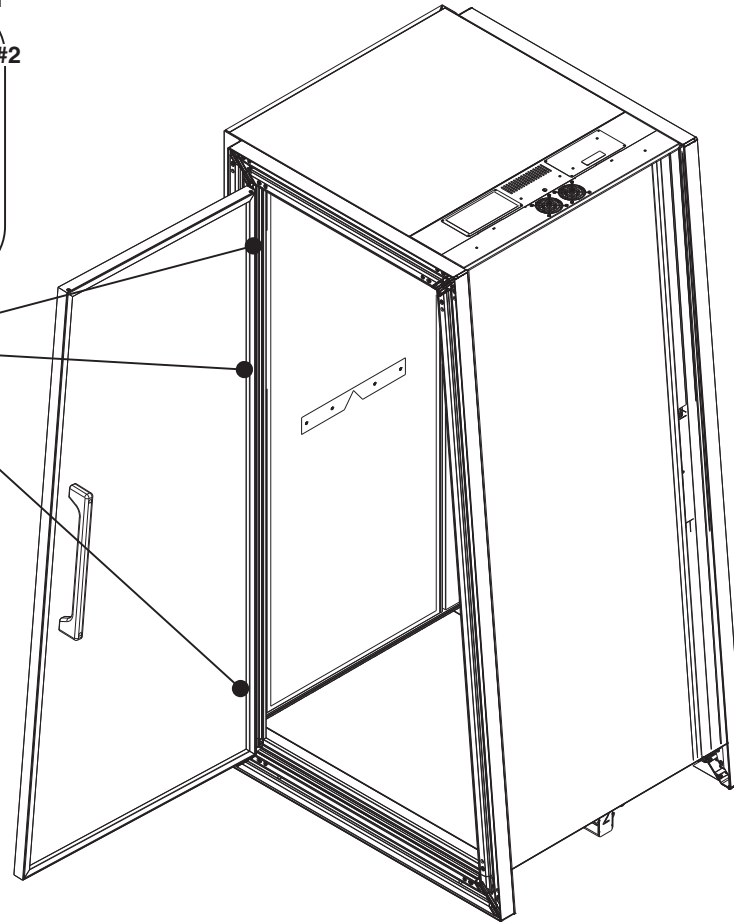





orangebox

Optional Shim Install (Q)
(continued)

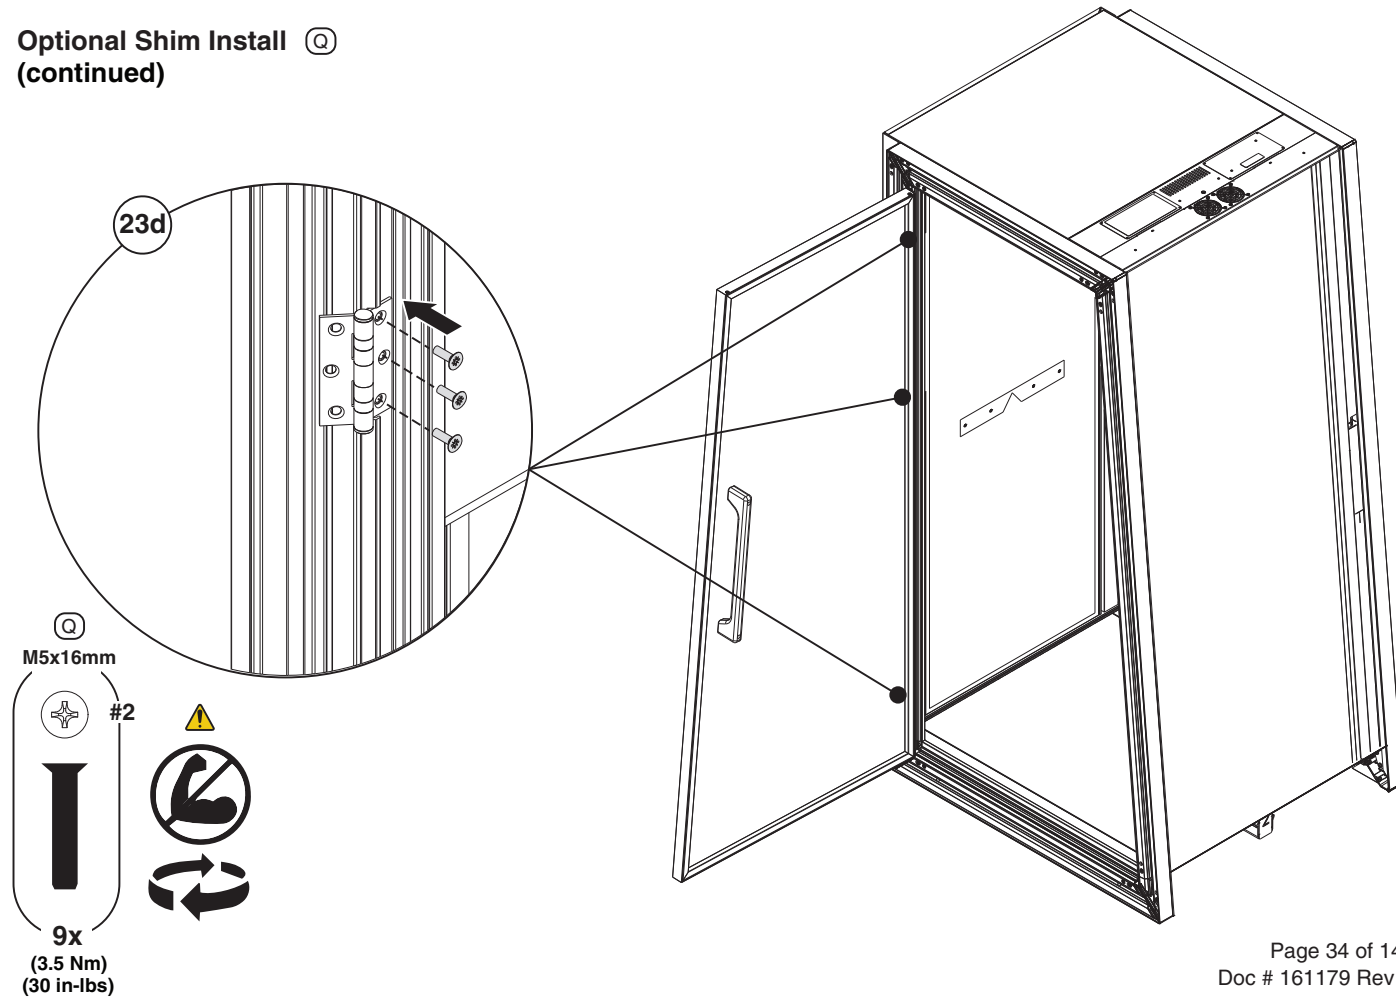

orangebox

24 Install Gap Extrusion (RR) (SS)

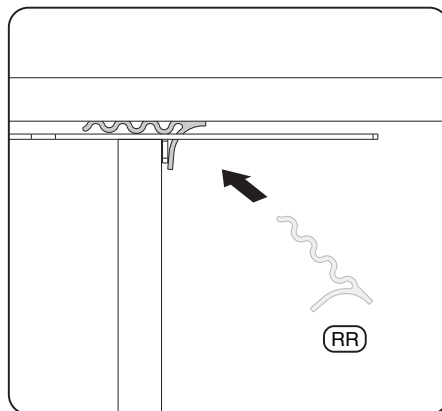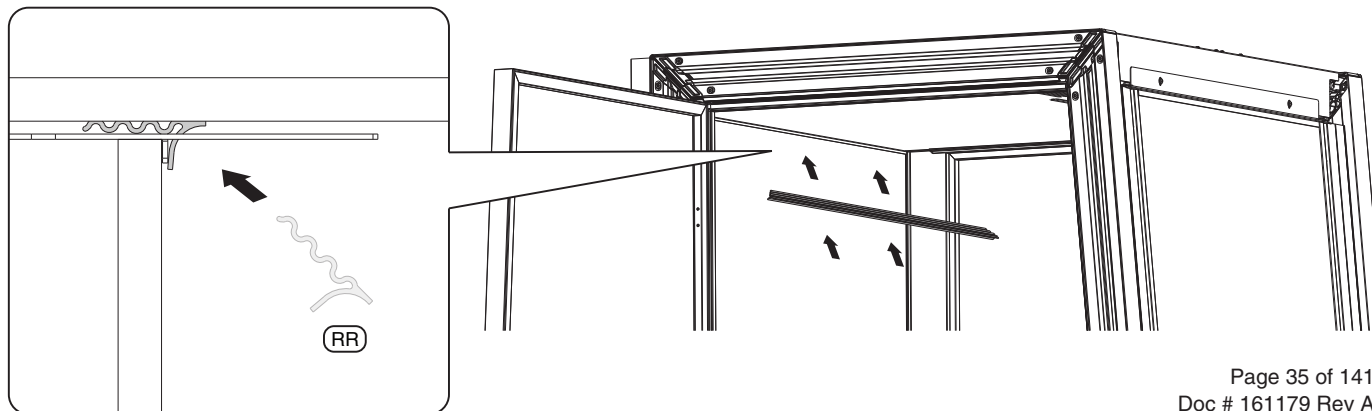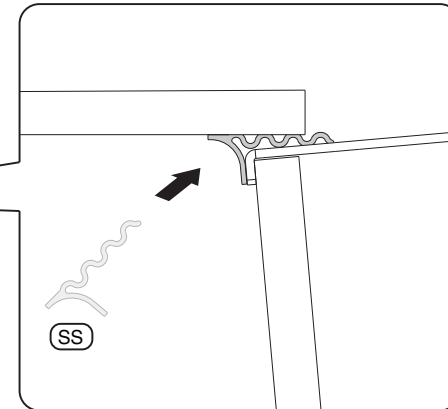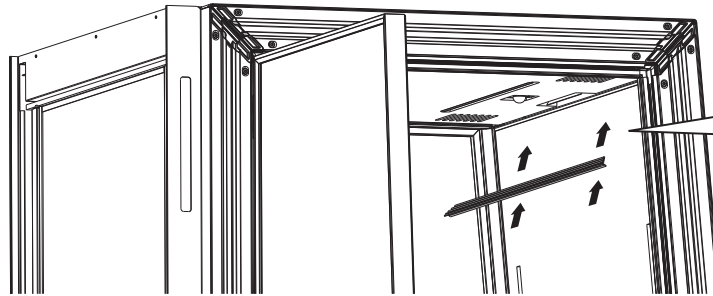

orangebox

Listing Label



 WARNING	 ADVERTENCIA	 AVERTISSEMENT
Risk of Fire, Injury or Electrical Shock. • The roof surface is not load bearing. Do not put any objects on the roof surface. • Do not block or obstruct fan vents and grills. • Do not drill holes in or attempt to hang items on phonebooth. • Operating temperature 10-26 degrees Celsius. • Relocation of booth to be performed only by professional installers trained and certified by Orangebox. DO NOT push the phonebooth to move.	Riesgo de incendio, lesiones o descarga eléctrica. • La superficie del techo no soporta carga. No coloque ningún objeto sobre la superficie del techo. • No bloquee ni obstruya las rejillas y conductos de ventilación de los ventiladores. • No taladre orificios ni intente colgar artículos en la cabina telefónica. • La temperatura de funcionamiento es de 10 a 26 grados Celsius. • La reubicación de la cabina debe ser hecha únicamente por instaladores profesionales capacitados y certificados por Orangebox. NO empuje la cabina telefónica para moverla.	Risque d'incendie, de blessure ou de choc électrique. • La surface du toit ne peut supporter de poids. Ne placez aucun objet sur le toit. • Ne bloquez pas ou n'obstruez pas les sorties des ventilateurs ni les grilles. • Ne percez pas de trous dans la paroi et ne suspendez aucun objet à la cabine téléphonique. • Température de fonctionnement entre 10 et 26 degrés Celsius. • La cabine doit uniquement être déplacée par des installateurs professionnels, formés et certifiés par Orangebox. ÉVITEZ de pousser sur la cabine téléphonique pour la déplacer.

1486194001 rev A



LISTED
E332997

For Commercial Use Only
Solo Para Uso Comercial
À Usage Commercial Uniquement

Conforms to UL Std 962
Certified to CSA C22.2 #68





Assembly Directions at
www.steelcase.com

orangebox®
On the QT™
OB1QT
Acoustic Conference Room


Made in the US with US and imported materials

 WARNING	 ADVERTENCIA	 AVERTISSEMENT
Risk of Fire, Injury or Electrical Shock. • Only qualified electricians are to open covers and make electrical connection from the building to the furniture. • Read instructions before opening covers / making electrical connection. • Isolate mains power before removing access panels & disconnecting electrical components. • This device must be grounded. Products in US & CA Line Voltage - Black Neutral - White Ground - Green 120VAC, 60Hz, 15A Max.	Riesgo de incendio, lesiones o descarga eléctrica. • Solo los electricistas calificados deben abrir las tapas y hacer la conexión eléctrica desde el edificio hasta los muebles. • Lea las instrucciones antes de abrir las tapas / hacer la conexión eléctrica. • Aíse la energía de la red antes de quitar los paneles de acceso y de desconectar los componentes eléctricos. • Este dispositivo debe estar conectado a tierra. Productos en EE. UU. Y CA Voltaje de línea - Negro Neutro - Blanco Tierra - Verde 120VAC, 60Hz, 15A Max.	Risque d'incendie, de blessure ou de choc électrique. • Seul un électricien qualifié peut ouvrir les couvercles pour faire des branchements électriques entre le bâtiment et le mobilier. • Lisez les directives avant d'ouvrir les couvercles ou de faire les branchements. • Coupez l'alimentation électrique avant de retirer les panneaux d'accès et de débrancher les composants électriques. • Cet appareil doit être mis à la terre. Produits É.-U. et CA Tension de ligne - Noir Neutre - Blanc Mise à la terre - Vert 120VAC, 60Hz, 15A Max.

1486195001 rev A


25 Identify Cover Caps

"CODE"	Description	Part Number
TSQTOP	EXTRUSION - HORZ, CAP, COVER, SQR, TALL, LH	1448949001
TREAR	EXTRUSION - VERTICAL, CAP, COVER, TALL	1448949002
TLHTOP	EXTRUSION - TOP, CAP, COVER, TALL, LH	1448949003
TLHBTM	EXTRUSION - BOTTOM, CAP, COVER, TALL, LH	1448949004
TLHFRT	EXTRUSION - ANGLED, CAP, COVER, TALL, LH	1448949005
TRHTOP	EXTRUSION - TOP, CAP, COVER, TALL, RH	1448949006
TRHBTM	EXTRUSION - BOTTOM, CAP, COVER, TALL, RH	1448949007
TRHFRT	EXTRUSION - ANGLED, CAP, COVER, TALL, RH	1448949008
SREAR	EXTRUSION - VERTICAL, CAP, COVER, SHORT	1448949009
SLHTOP	EXTRUSION - TOP, CAP, COVER, SHORT, LH	1448949010
SLHFRT	EXTRUSION - ANGLED, CAP, COVER, SHORT, LH	1448949011
SRHTOP	EXTRUSION - TOP, CAP, COVER, SHORT, RH	1448949012
SRHFRT	EXTRUSION - ANGLED, CAP, COVER, SHORT, RH	1448949013

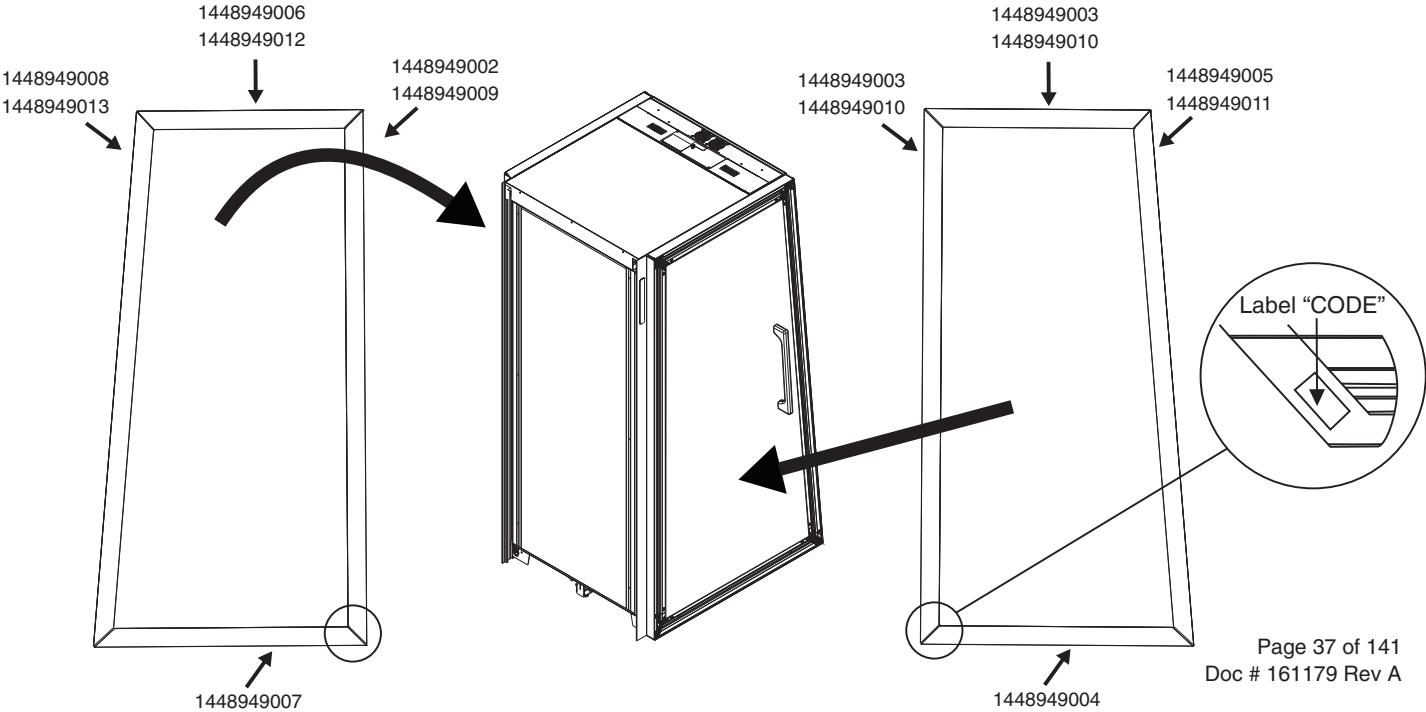


orangebox

26 Install Cover Caps

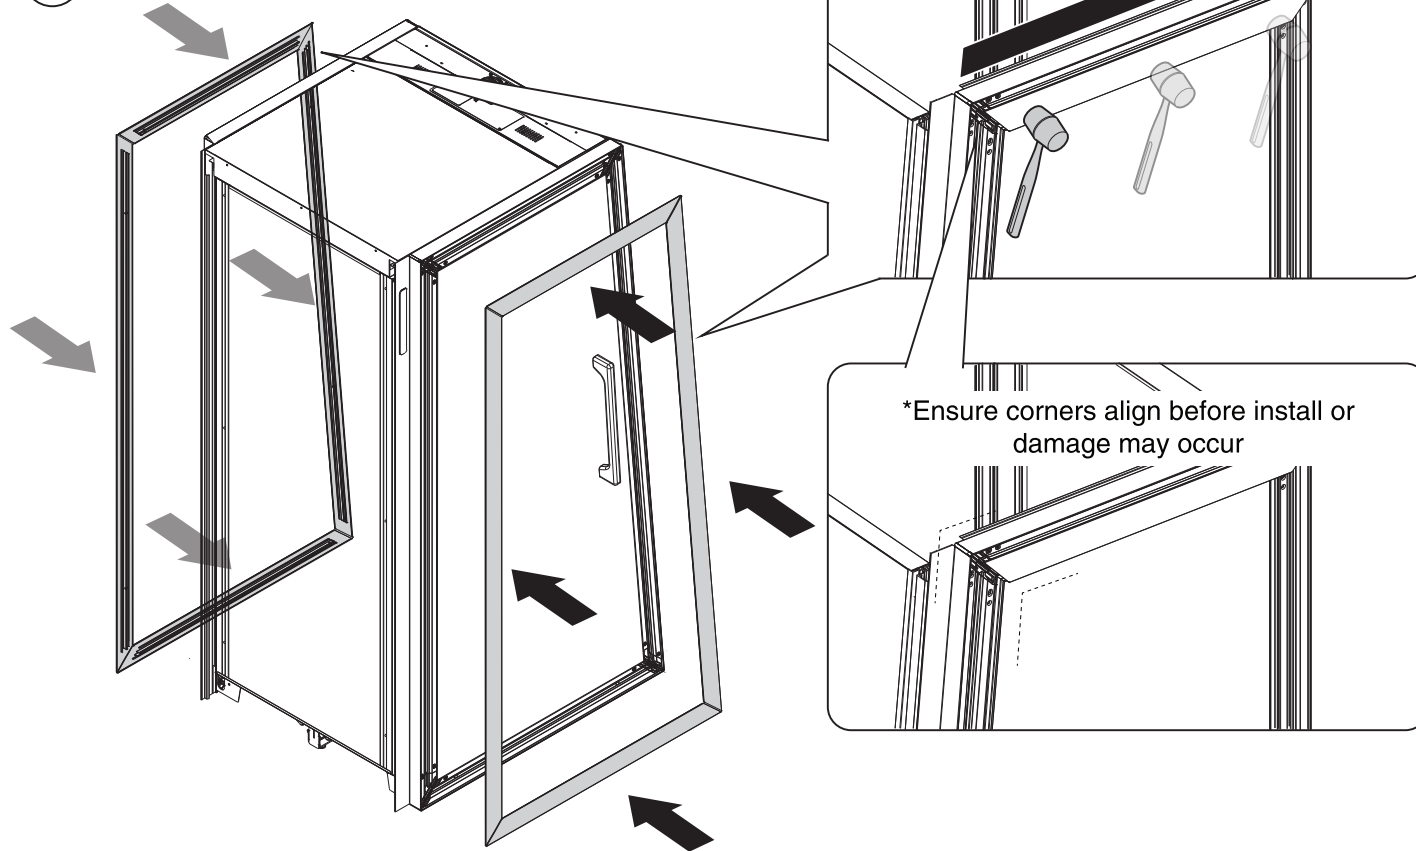


orangebox


Exterior Cladding

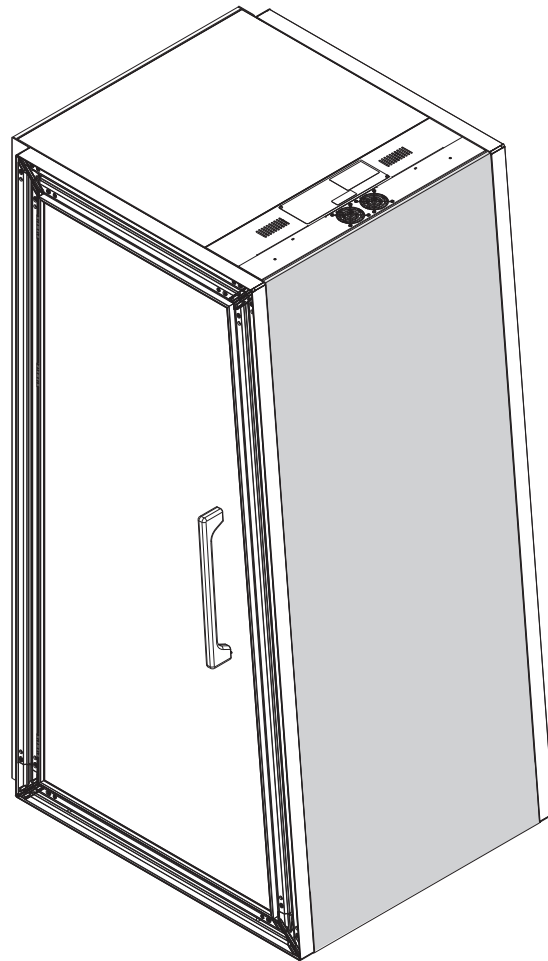


Back Panel

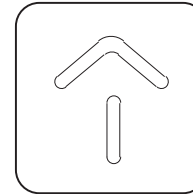


Front Panel

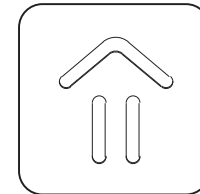





orangebox

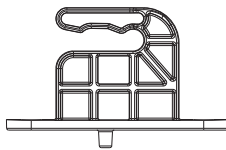


27 Assemble Back Wall Panels

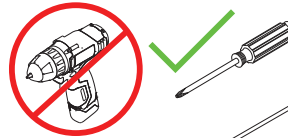




Back Panel

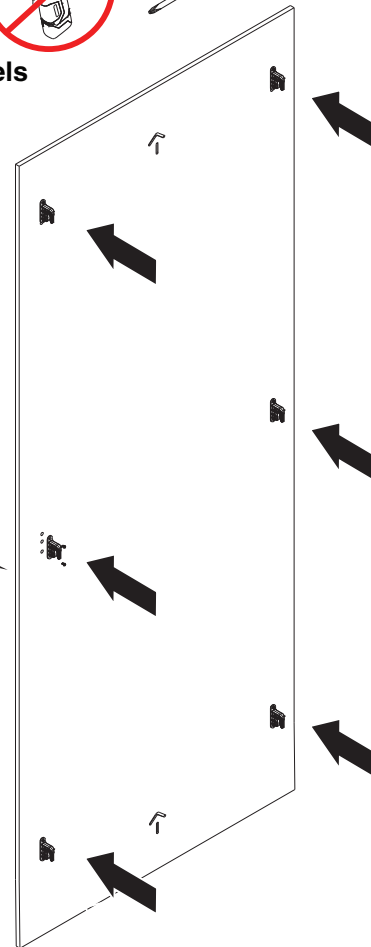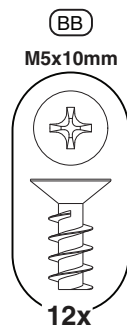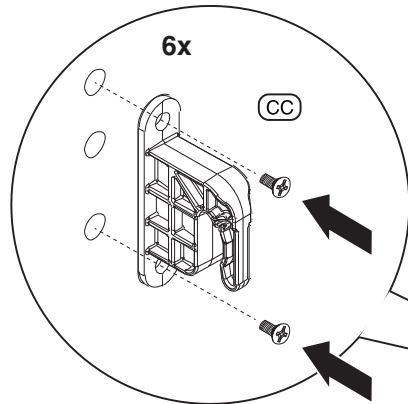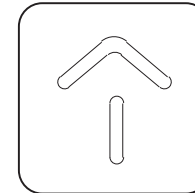


orangebox

 

28 Assemble Front Wall Panels

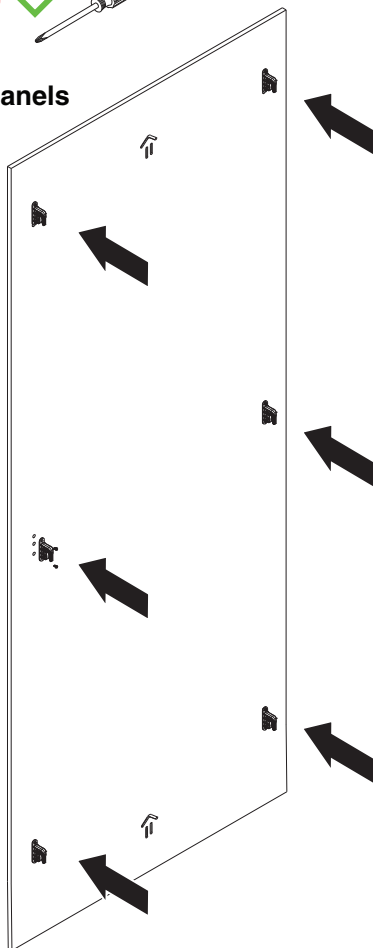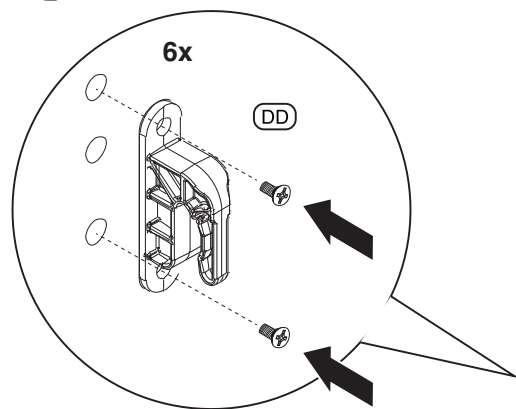
 


Front Panel

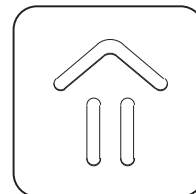


orangebox

29 Install Front Wall Panel

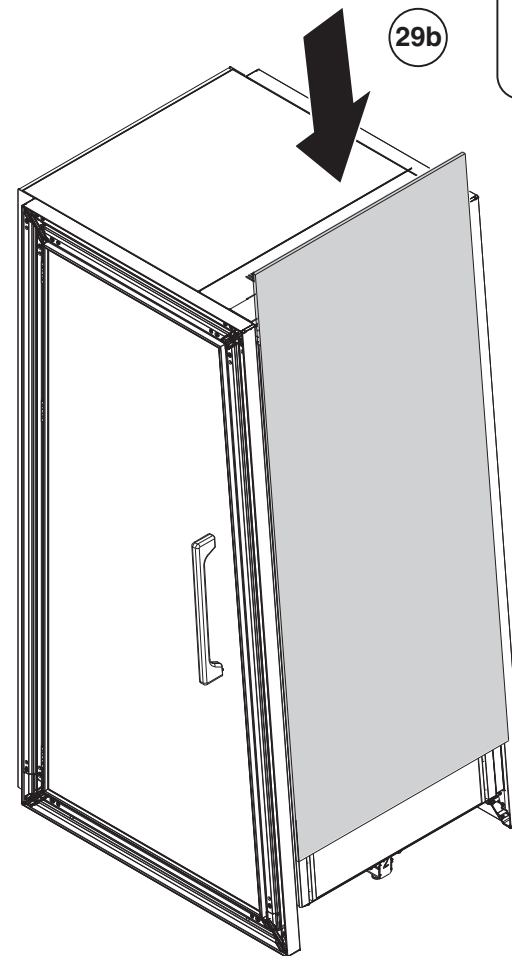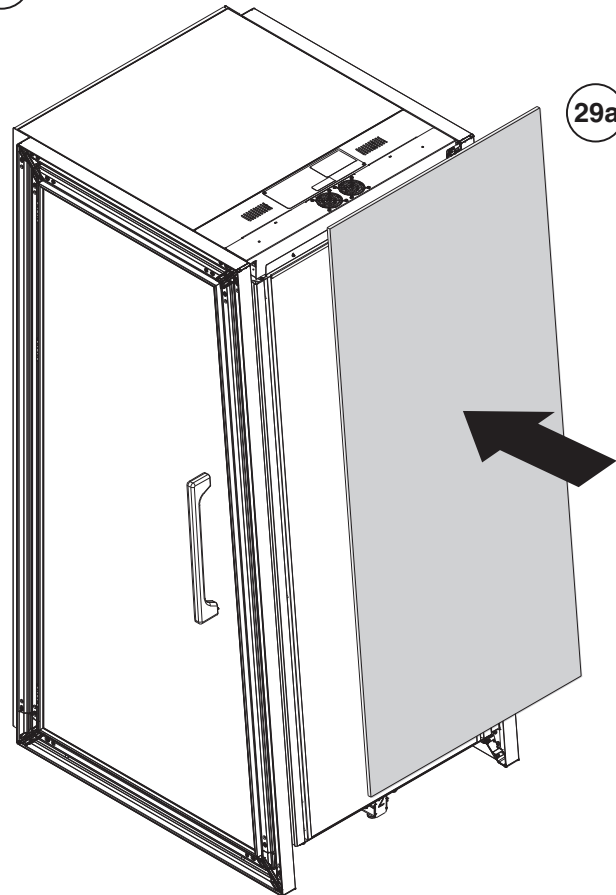


Front Panel

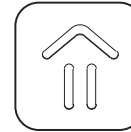


orangebox


30 Install Rear Wall Panel

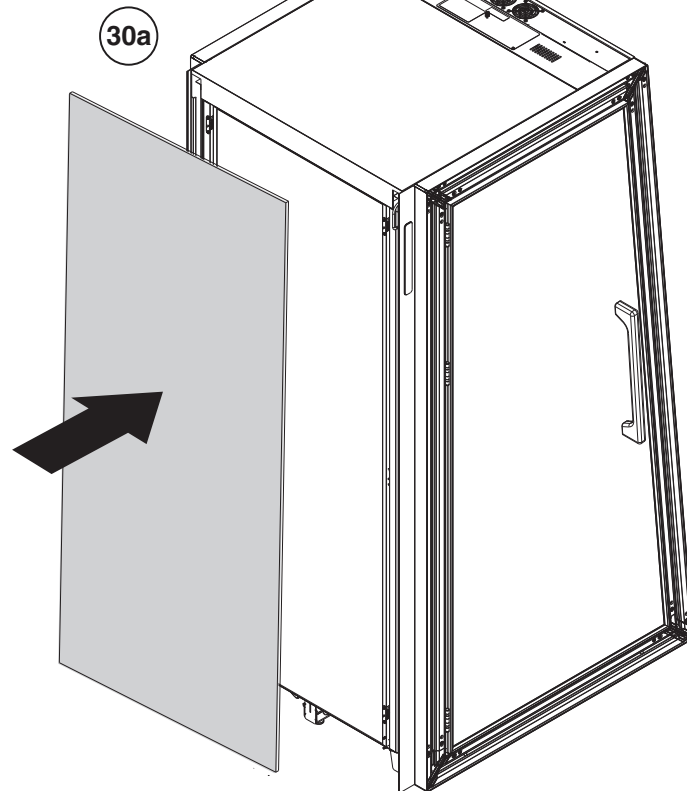

30b

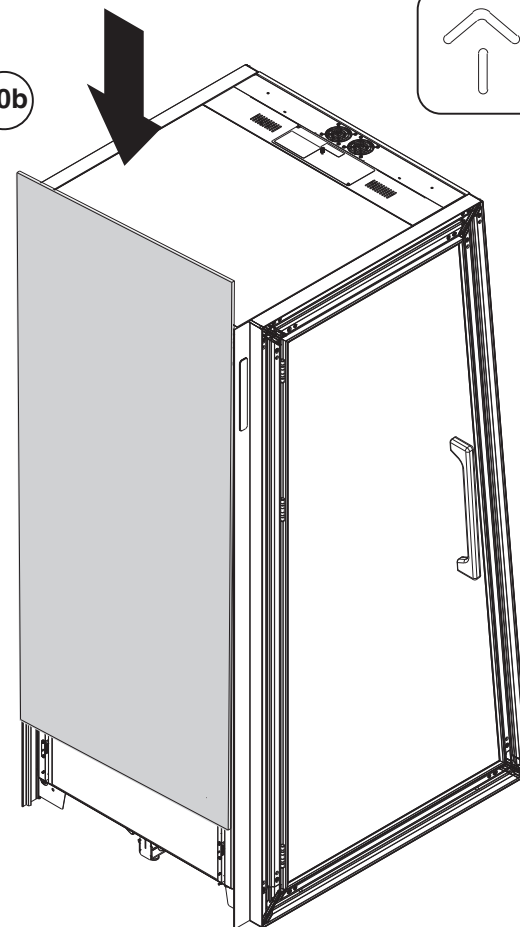

Back Panel

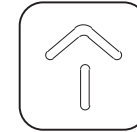





Glass Manifestations Option

NOTE: Top strip should always line up with the top of the baffle.
It's the same on the strips too. The top of the lower strip should
line up with the bottom of the baffle.



TALL

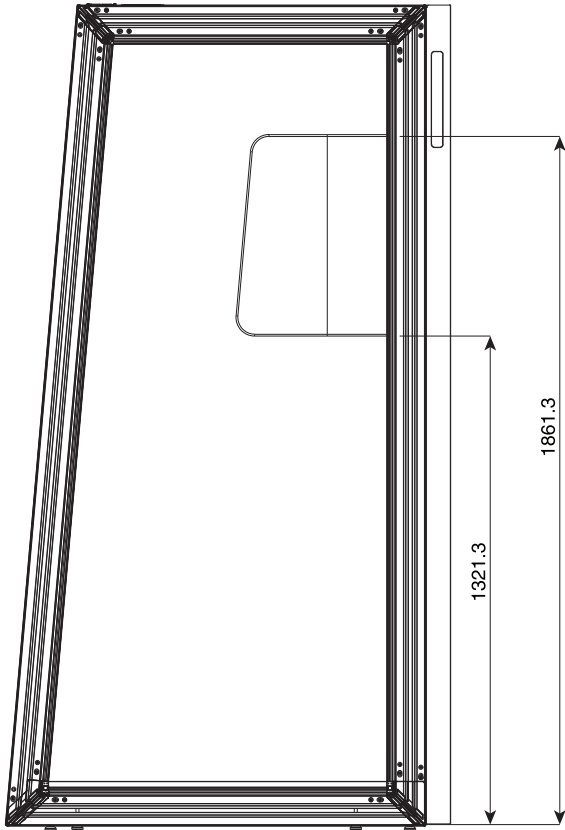

SHORT

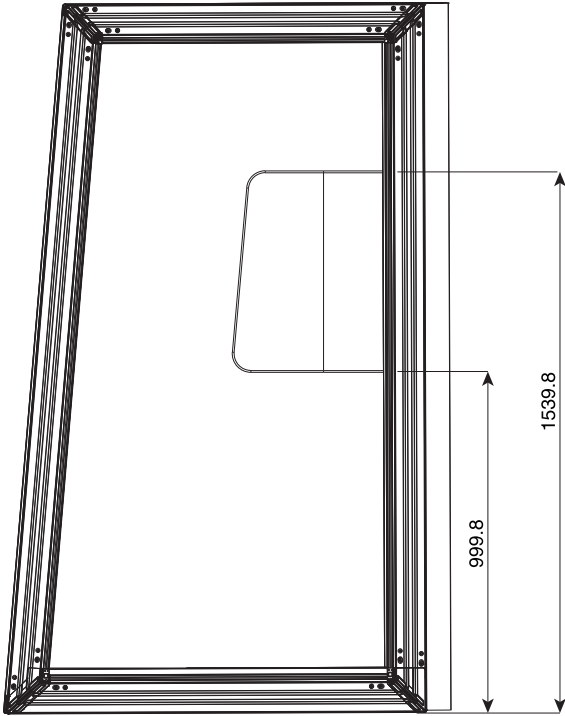




Manifestations (continued)

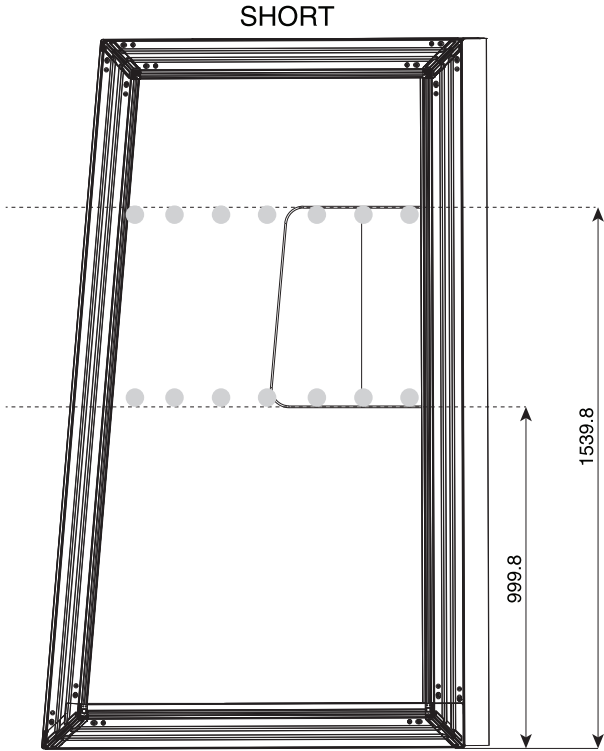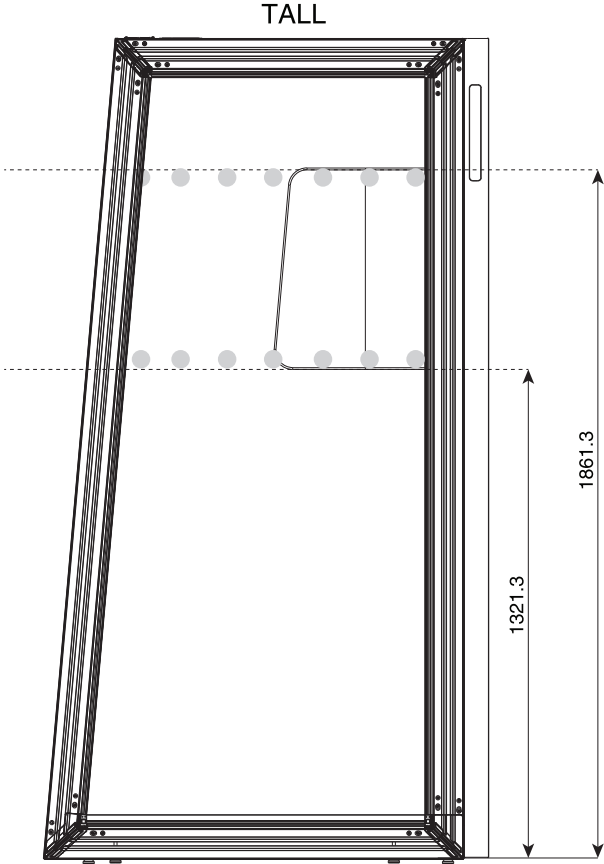

orangebox

Manifestations (continued)
Short

NOTE: Interior accessories
not included in UL 962 listing

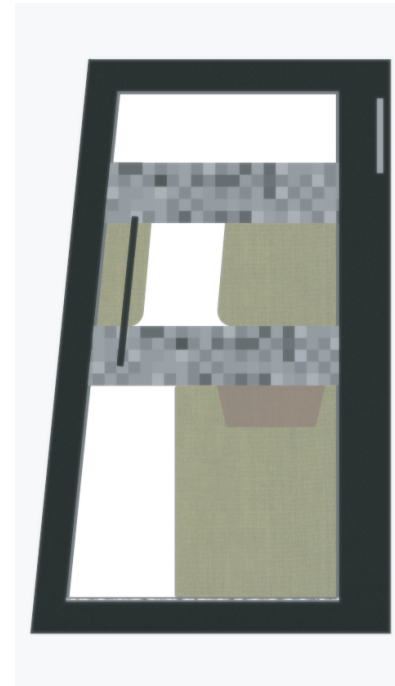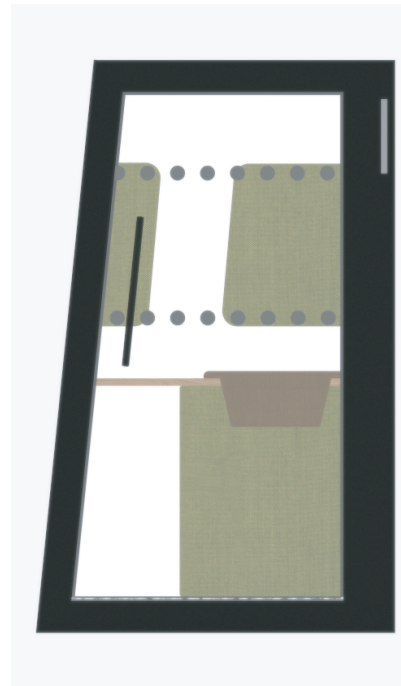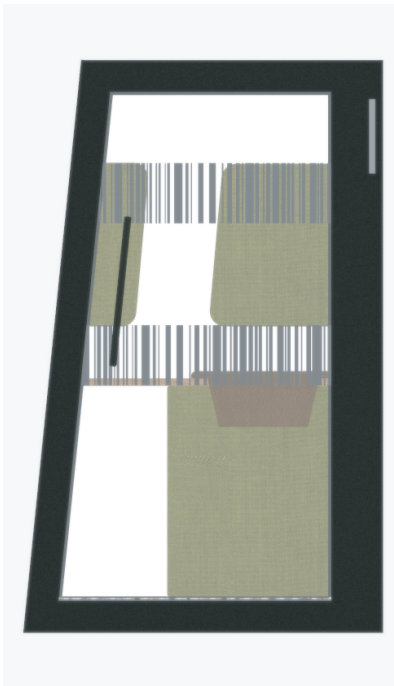

orangebox

Manifestations (continued)
Tall

NOTE: Interior accessories
not included in UL 962 listing

