

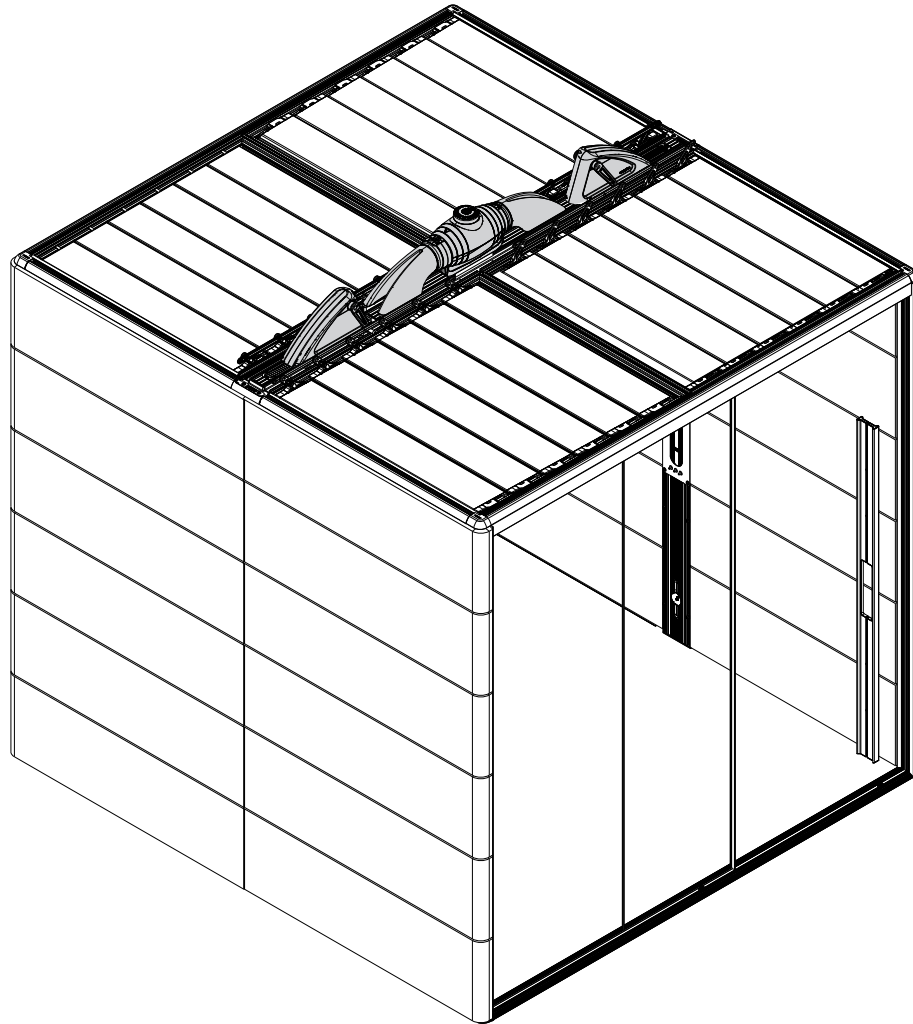
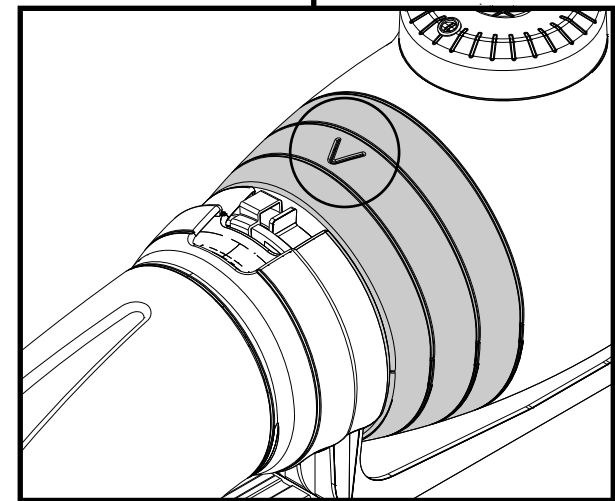


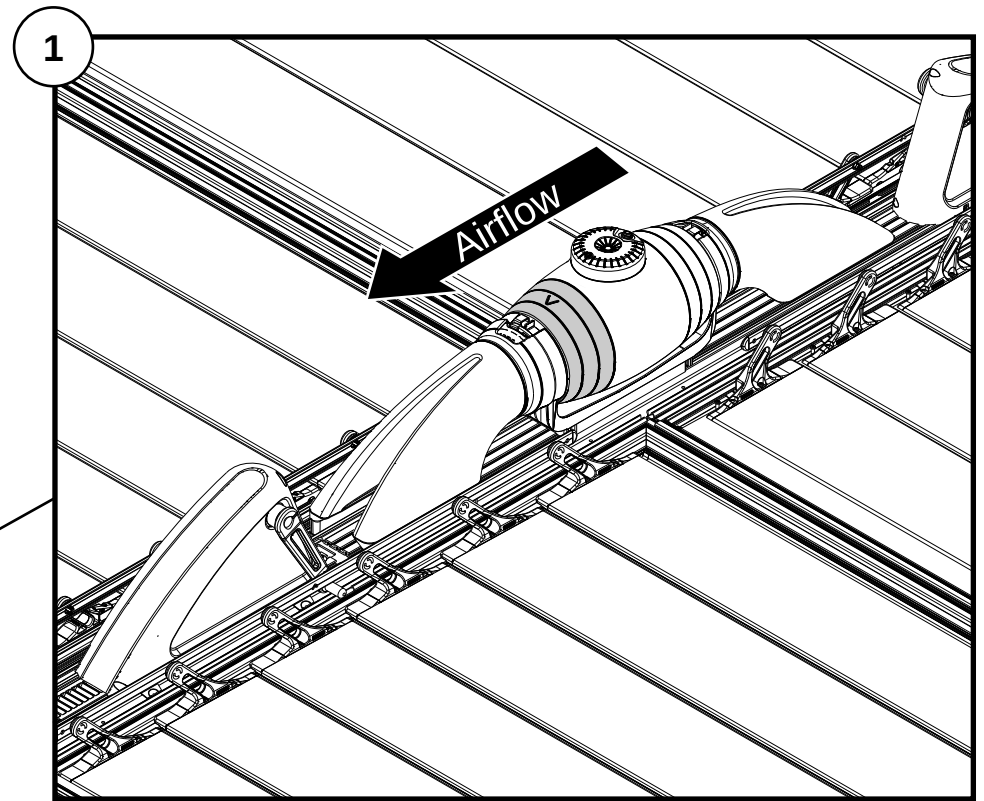


Note: Arrow indicates airflow direction.

M8x110


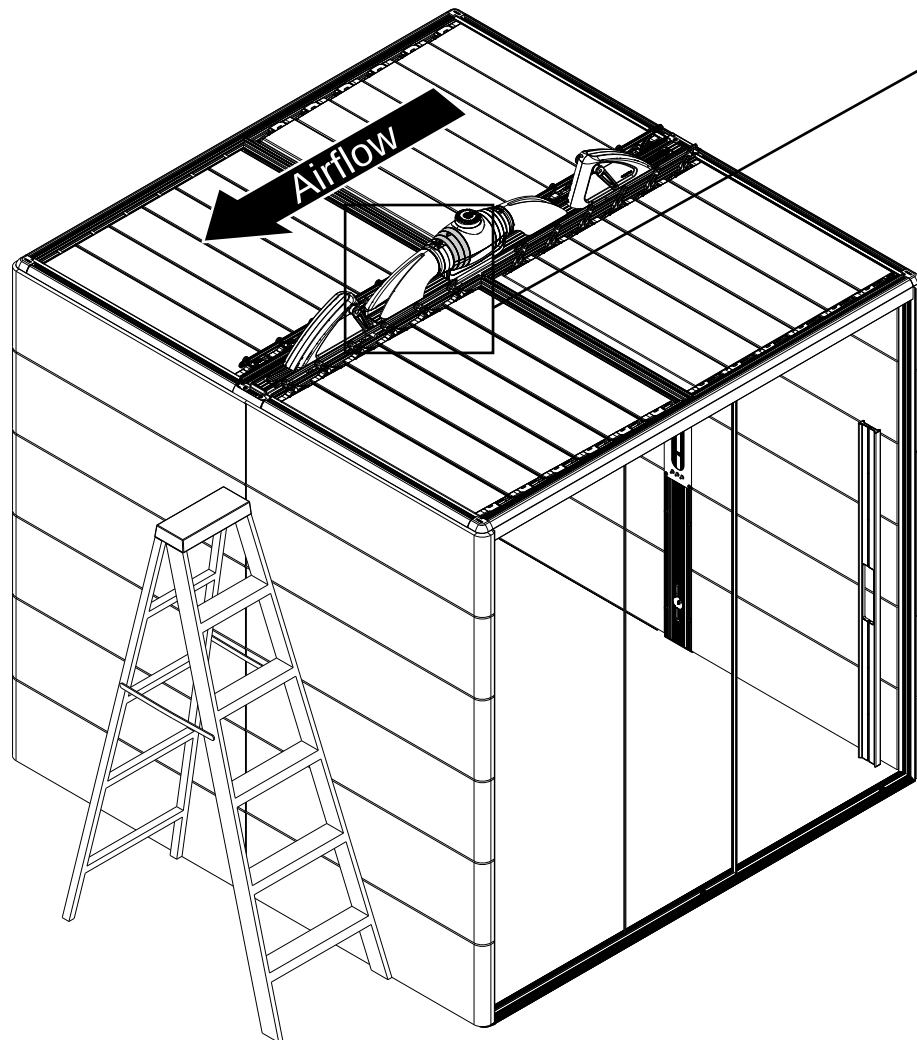


1x


2a

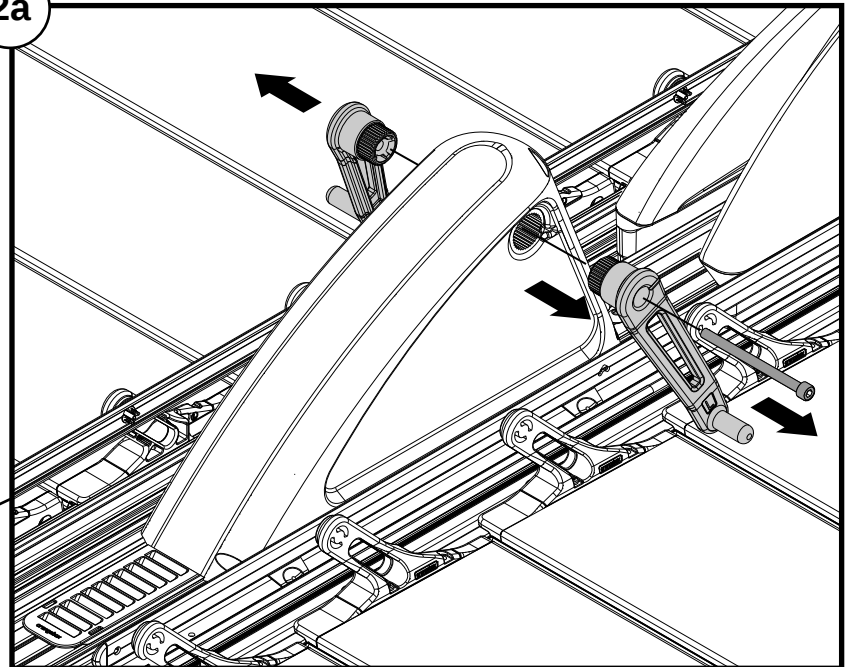


2b

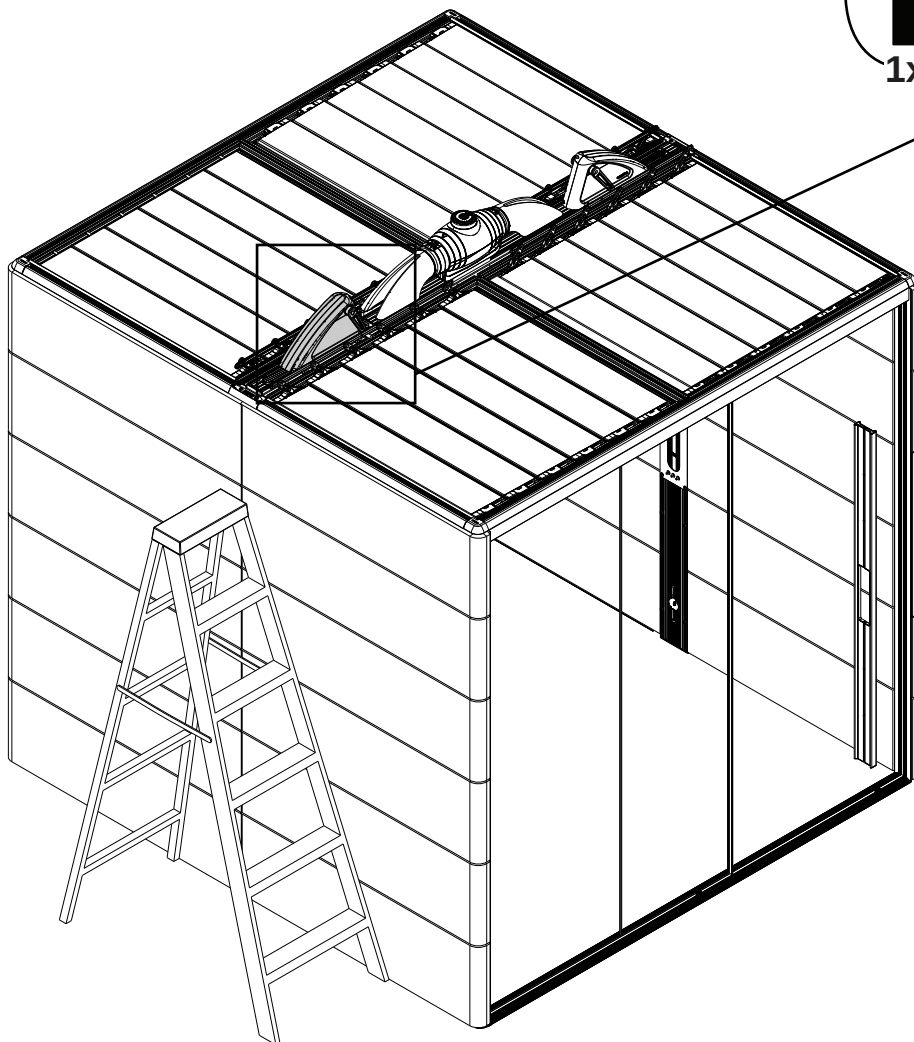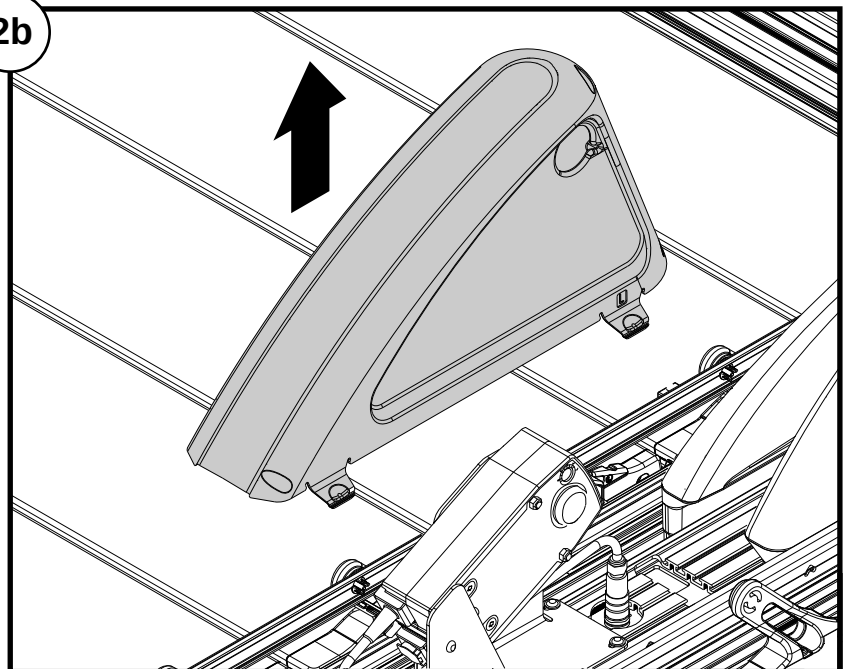



M8x110


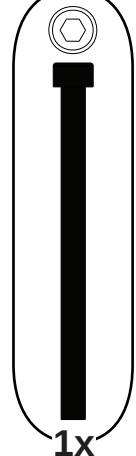


3a

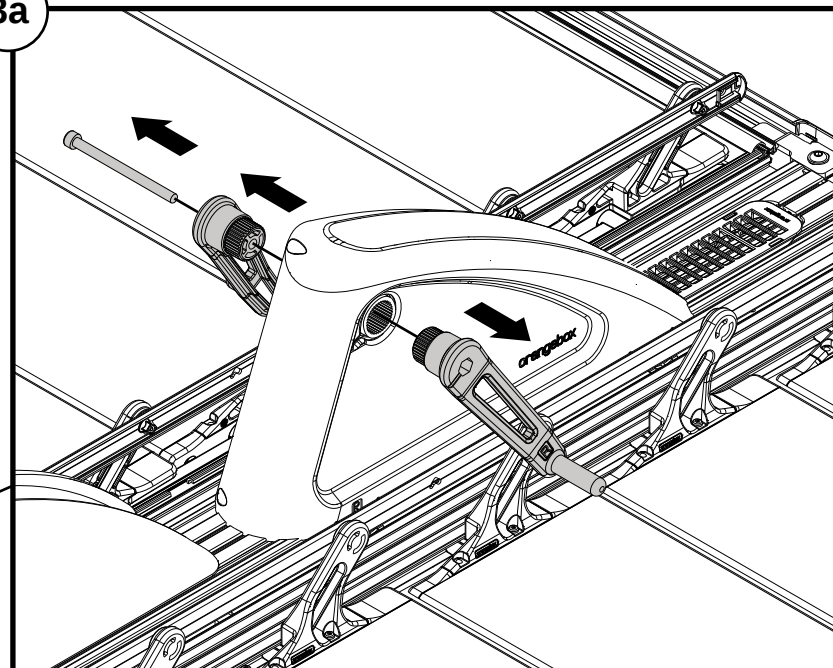

3b

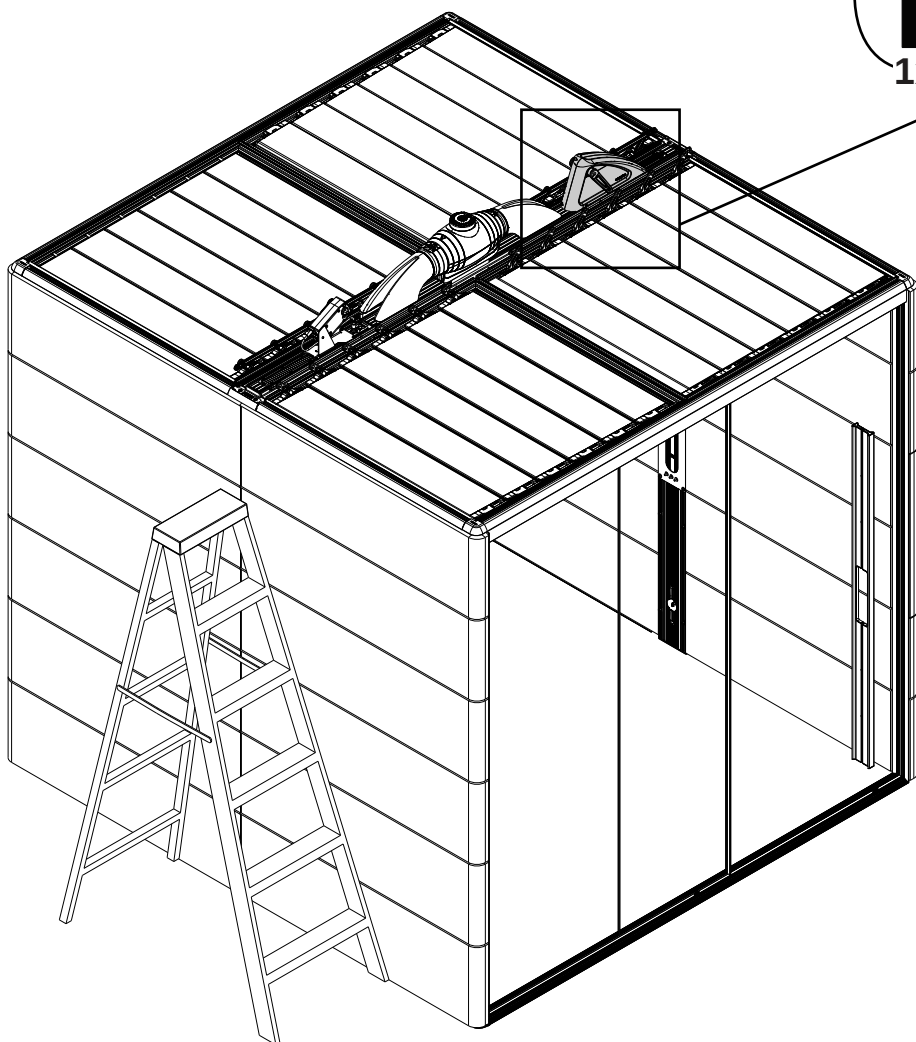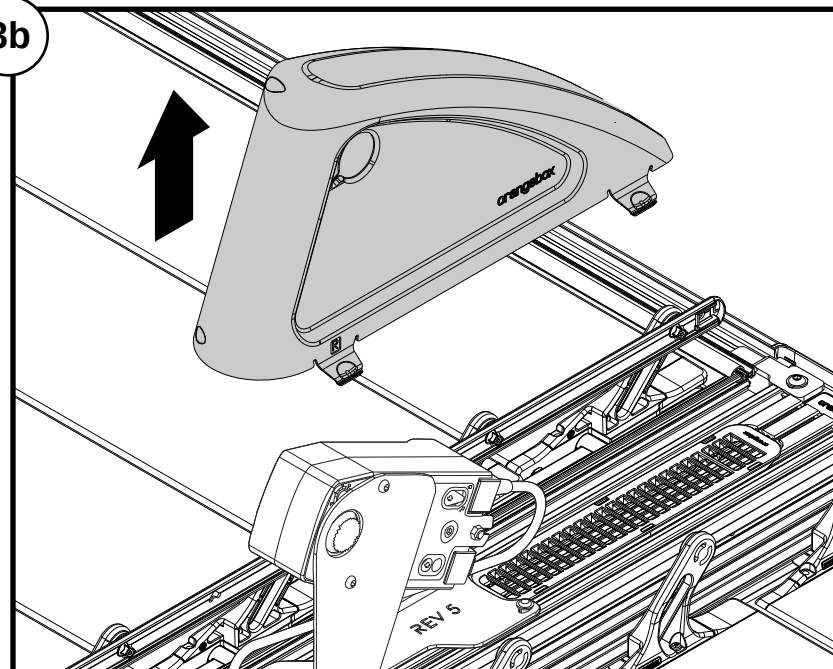

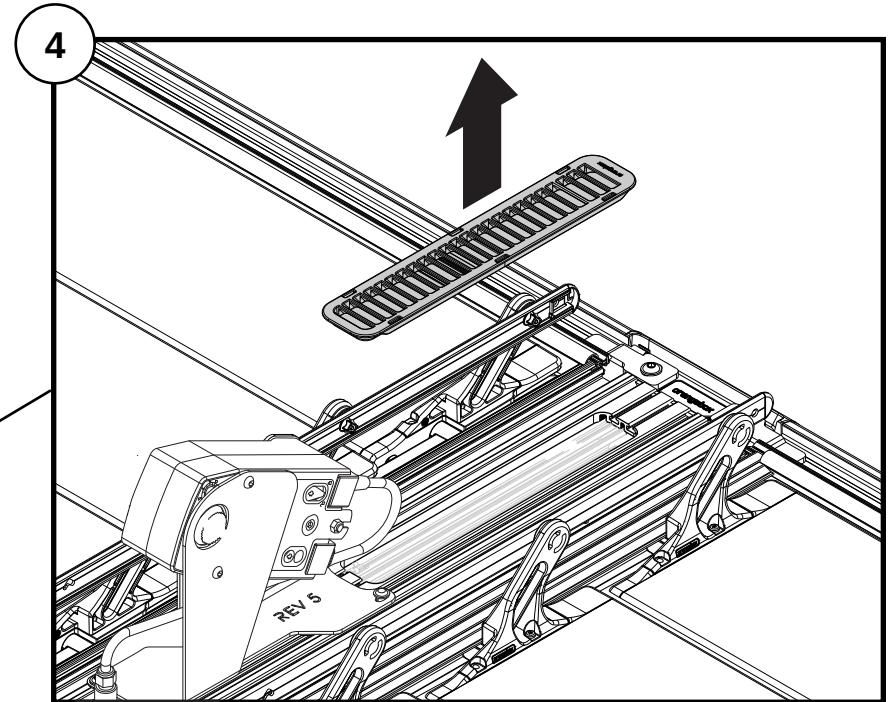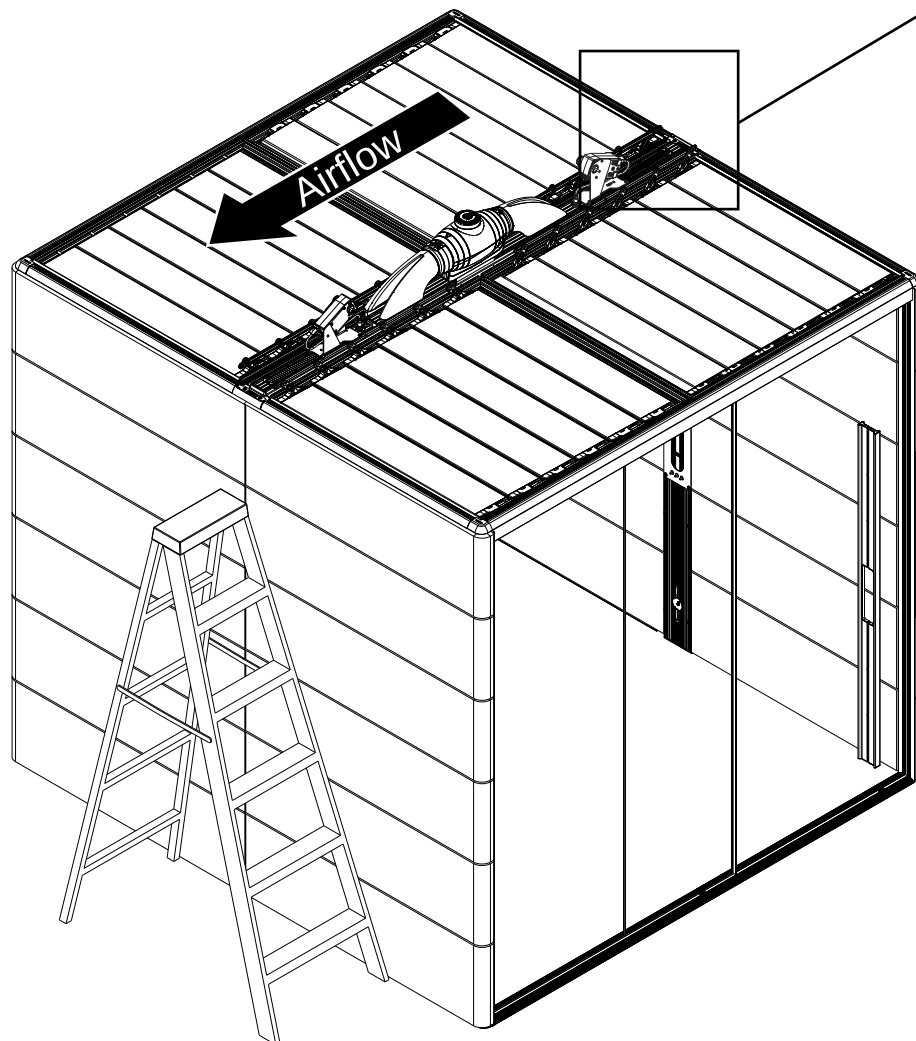


Note: Remove cover opposite to the direction of the airflow

M8x110





1x

5a

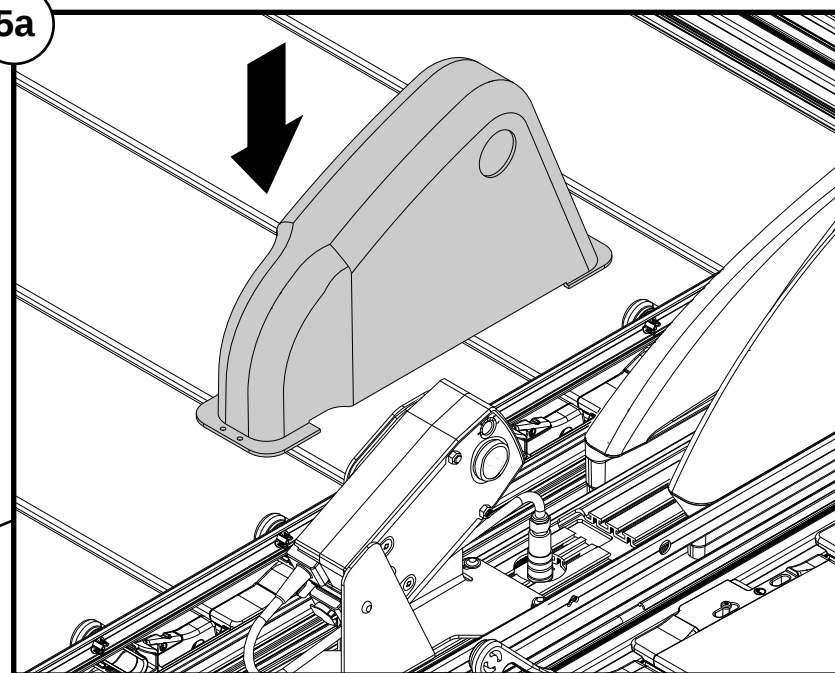


5b

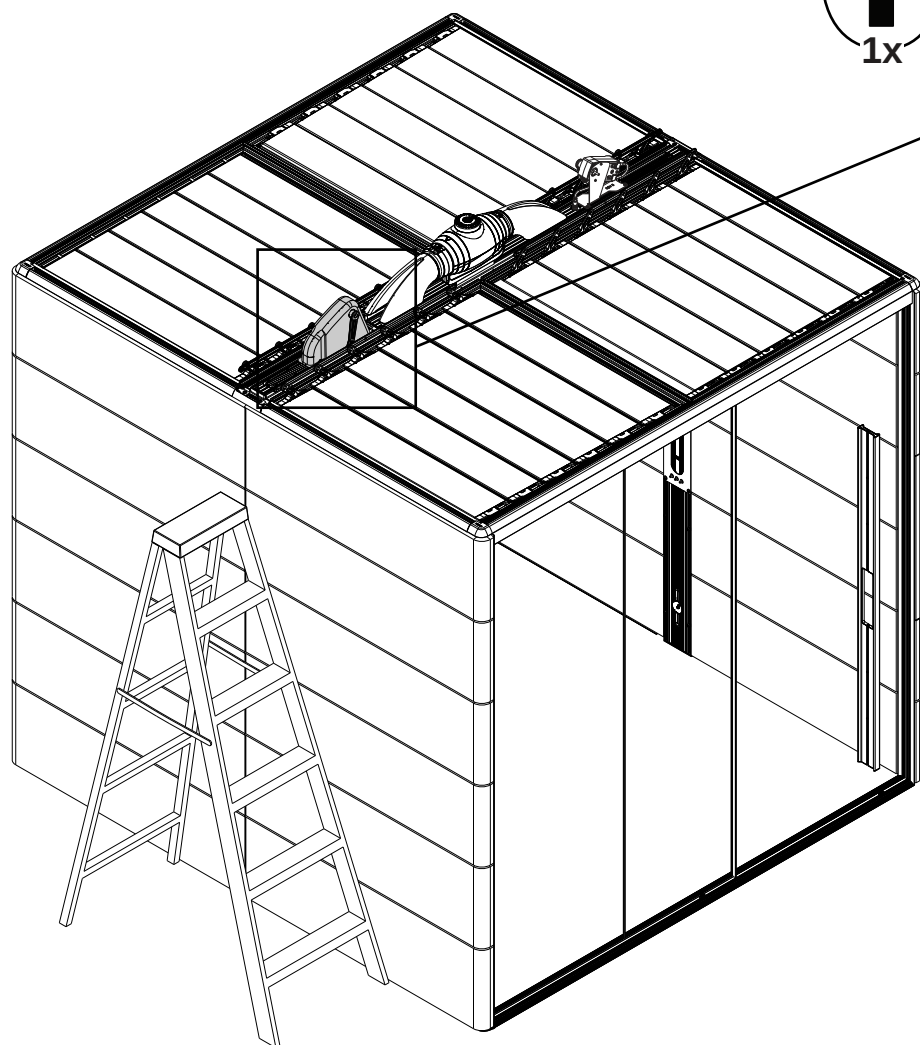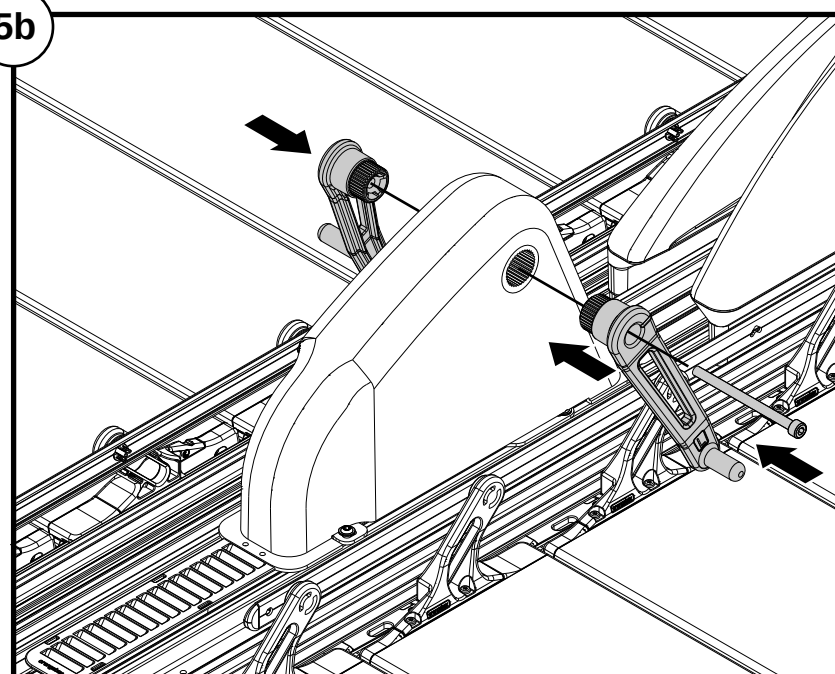



M8x110








6a


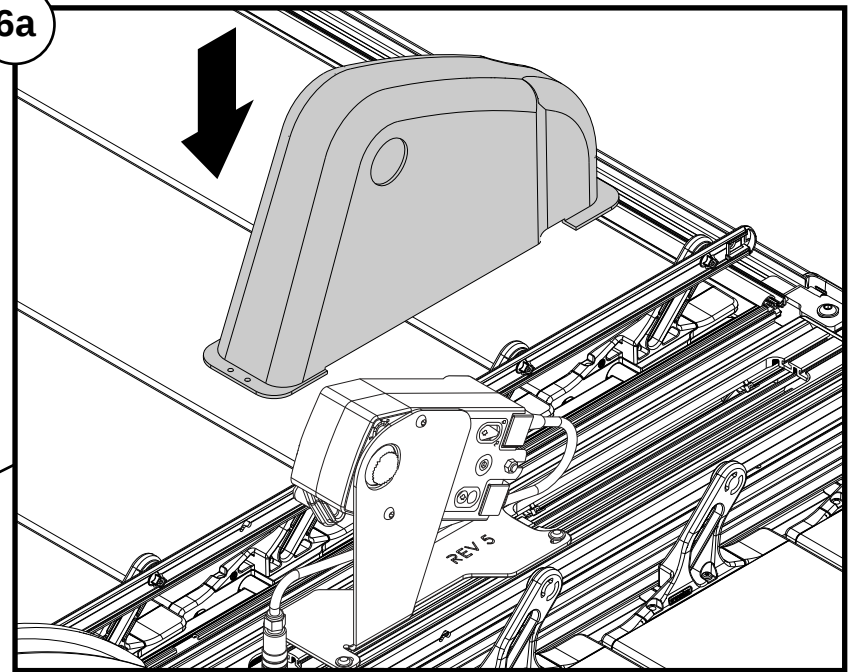


6b


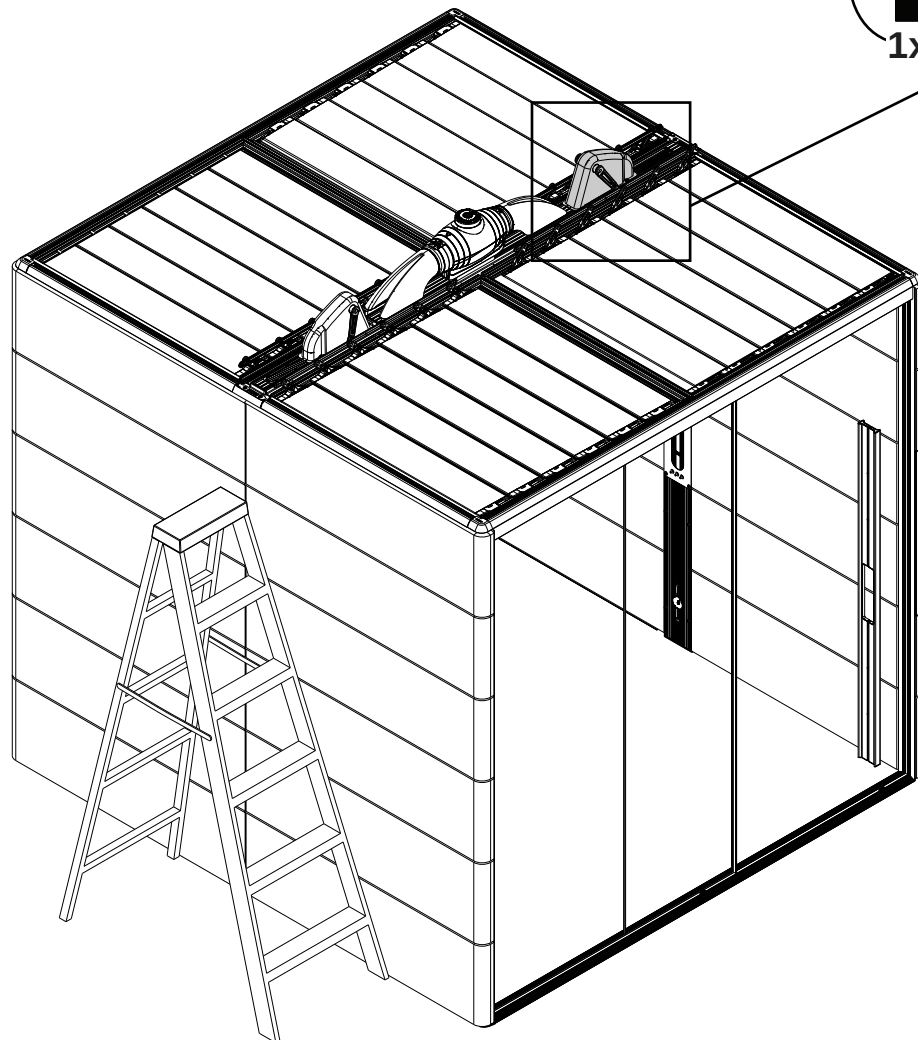
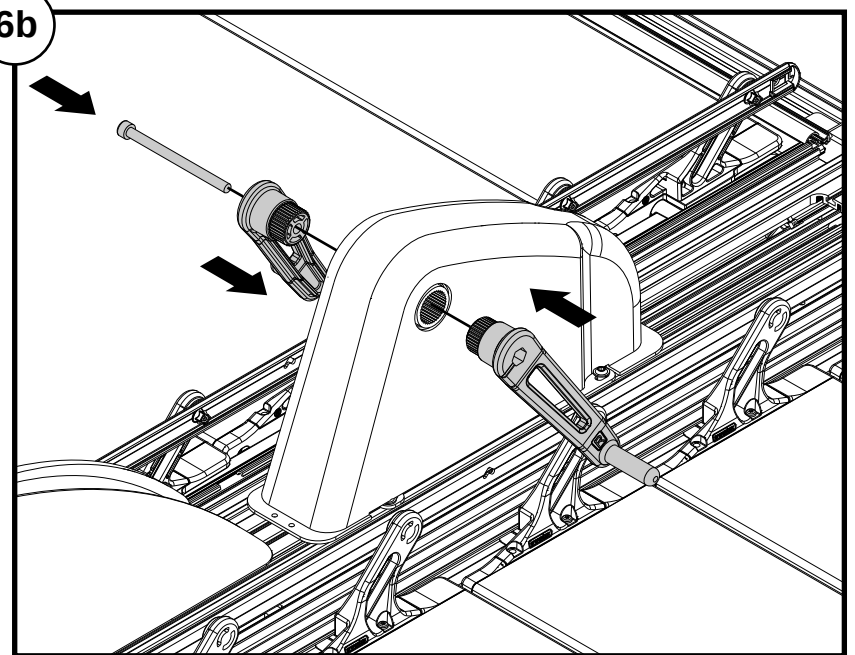


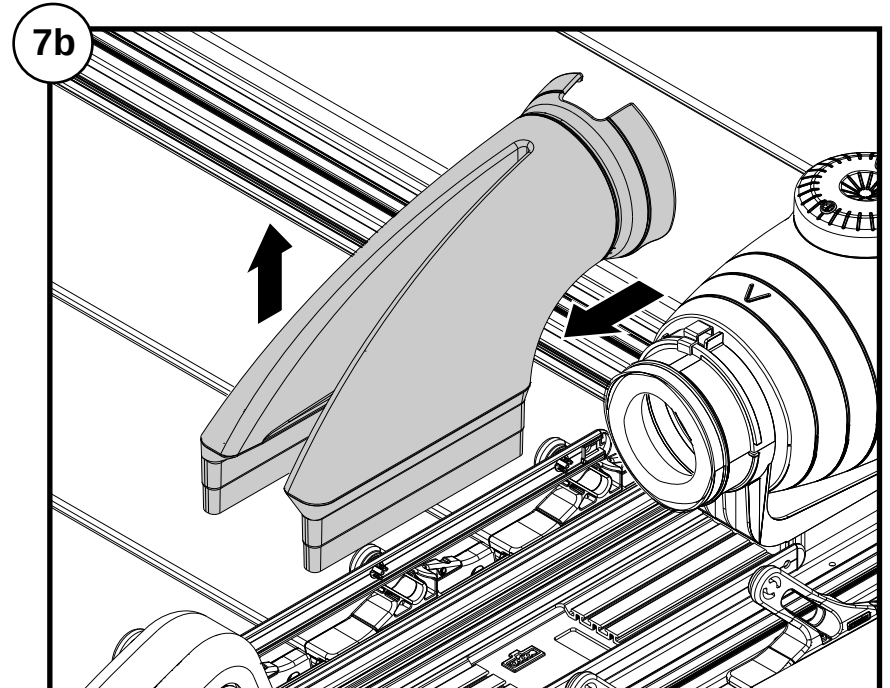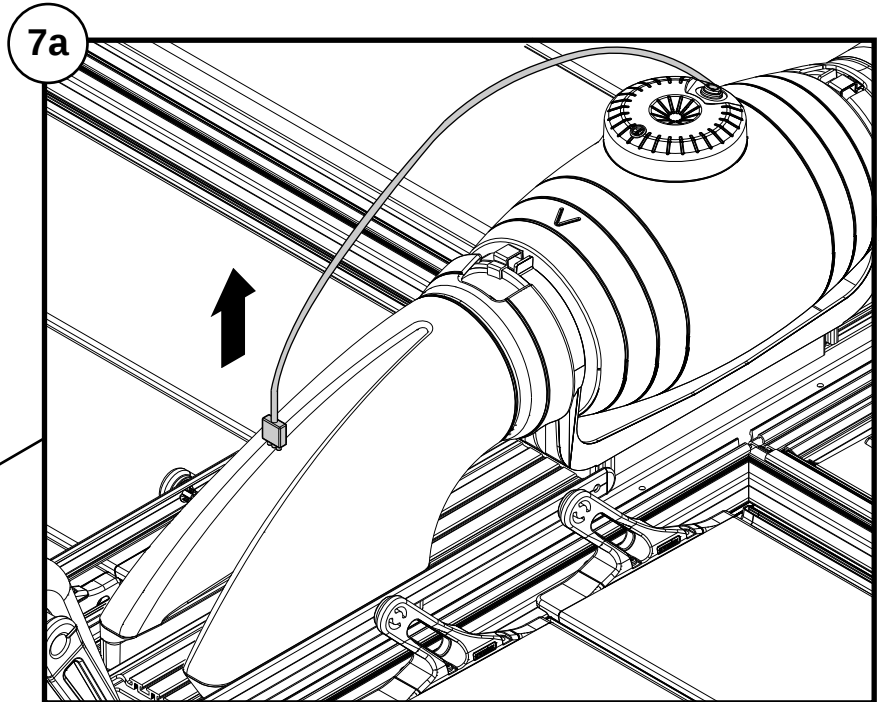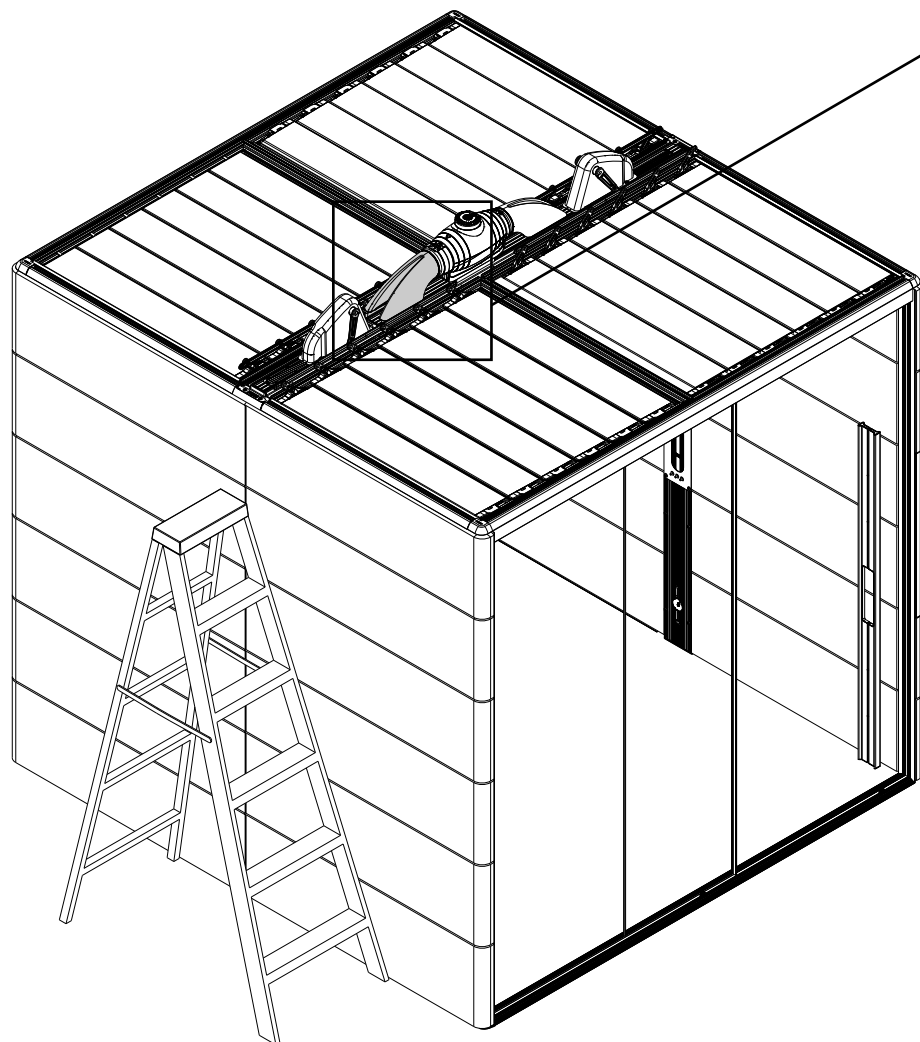

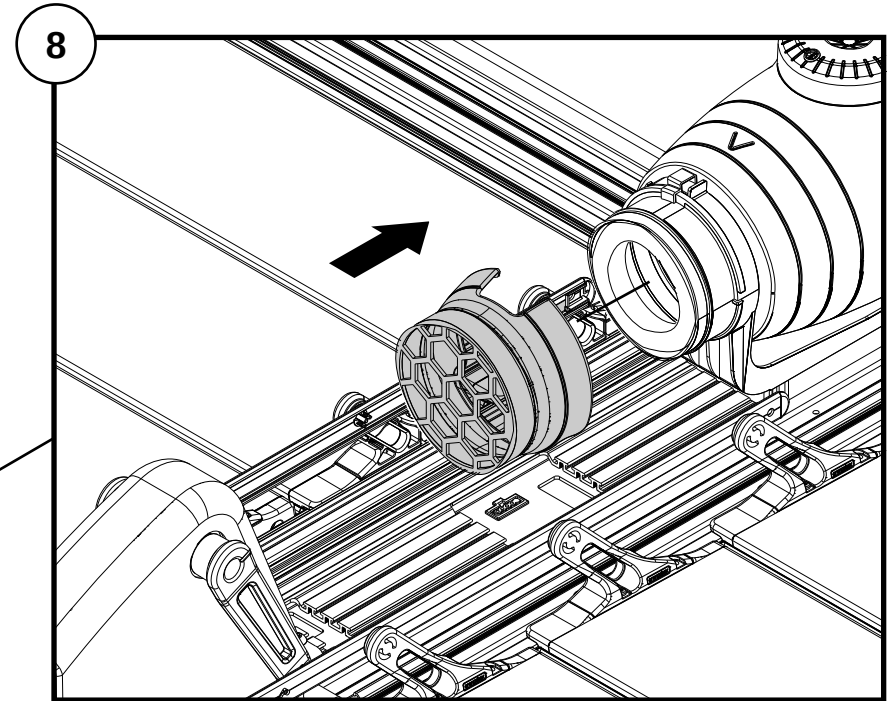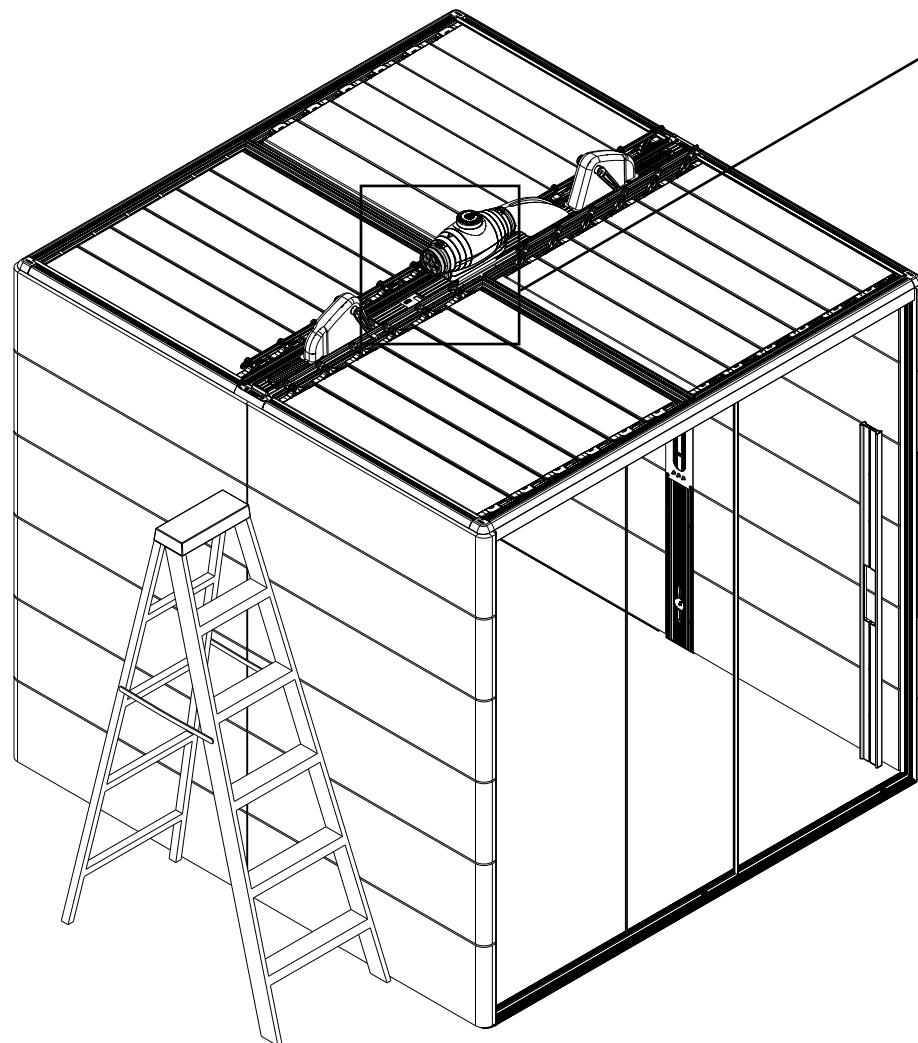


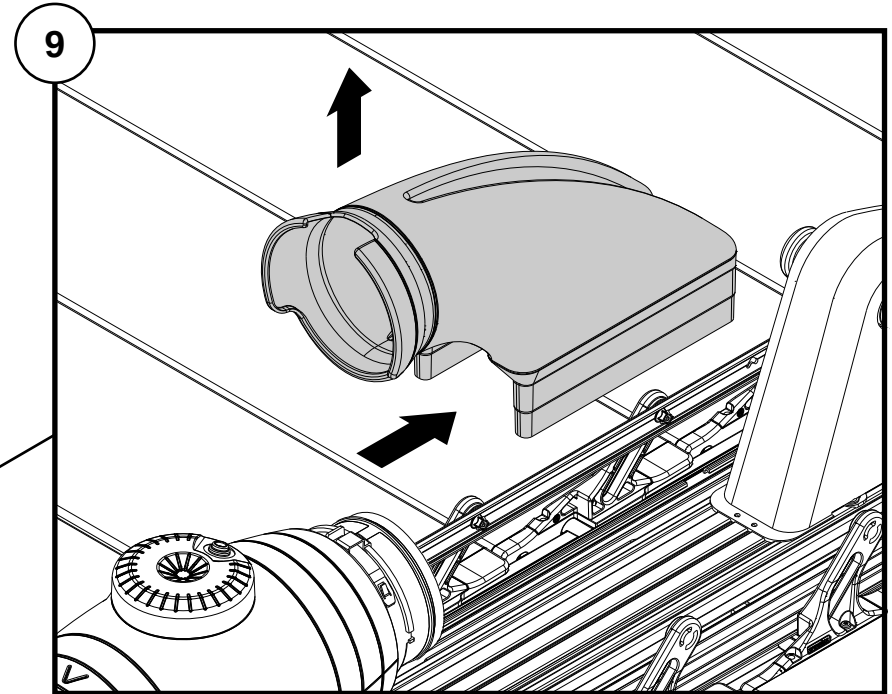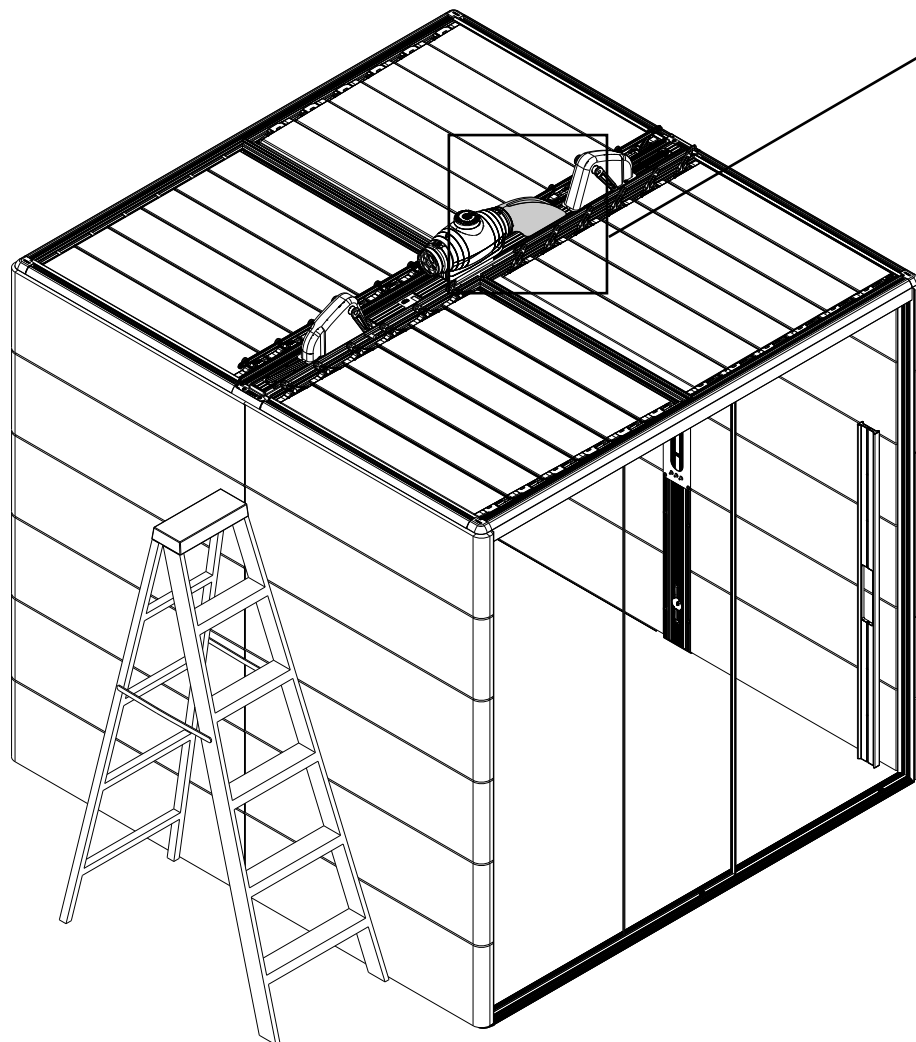




Note: Open hoop channel start by prying from one end to the other.

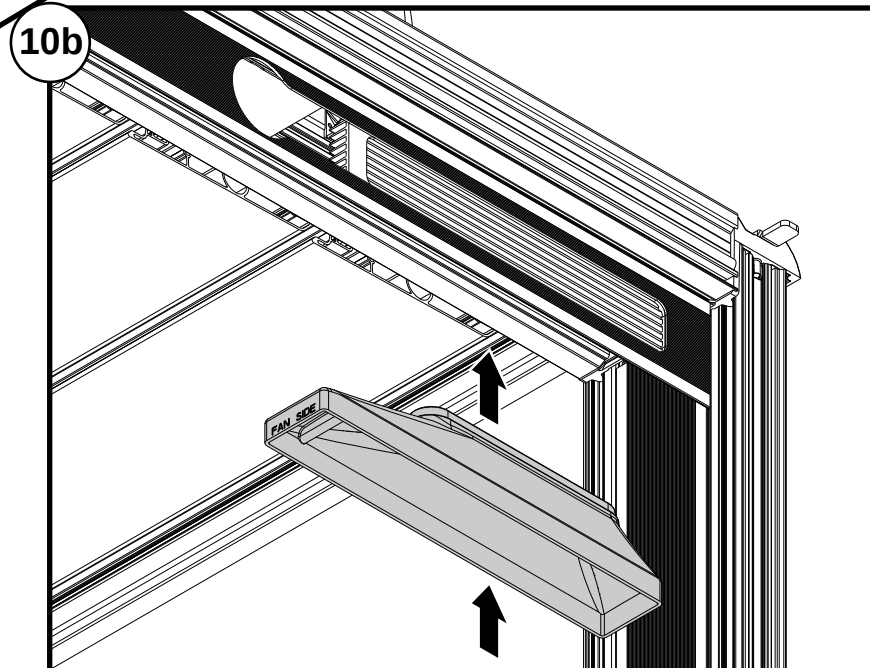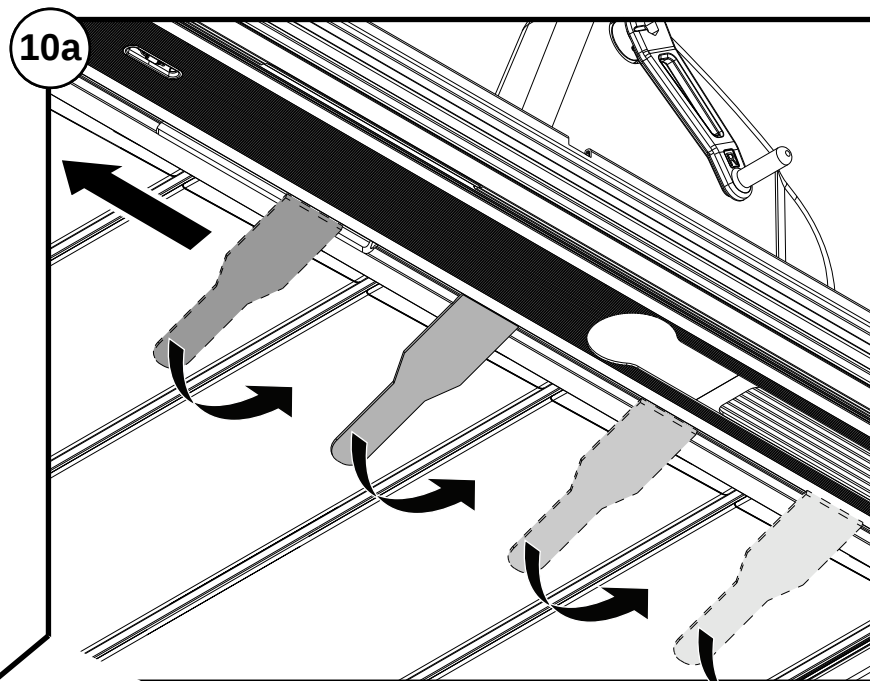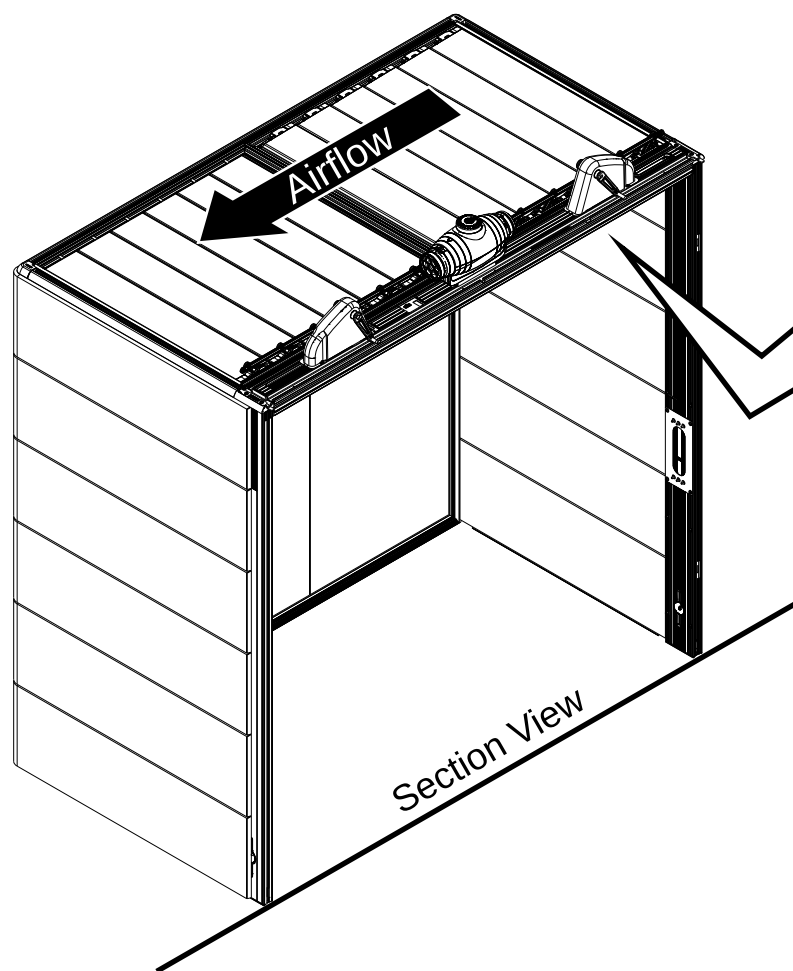




Note: Install foam block to funnel.

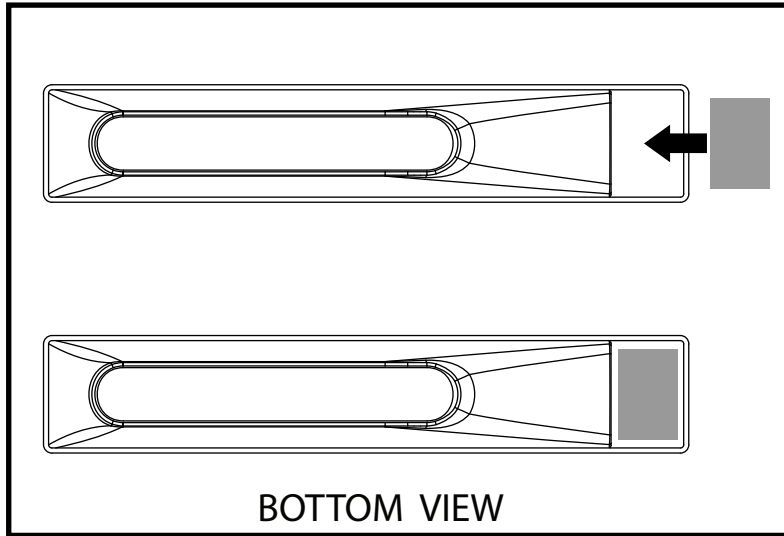


Note: Install soft foam seal.

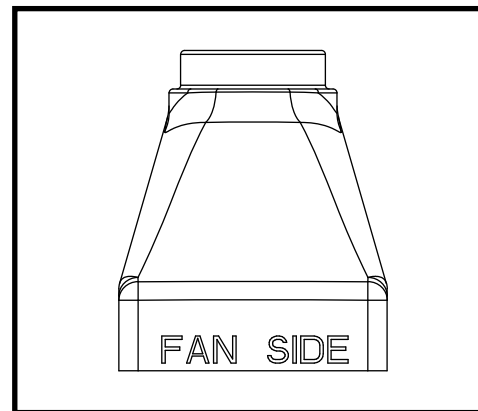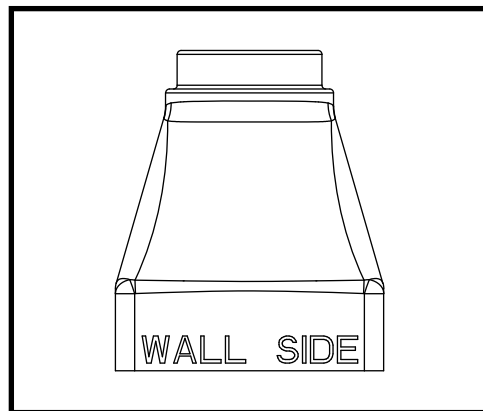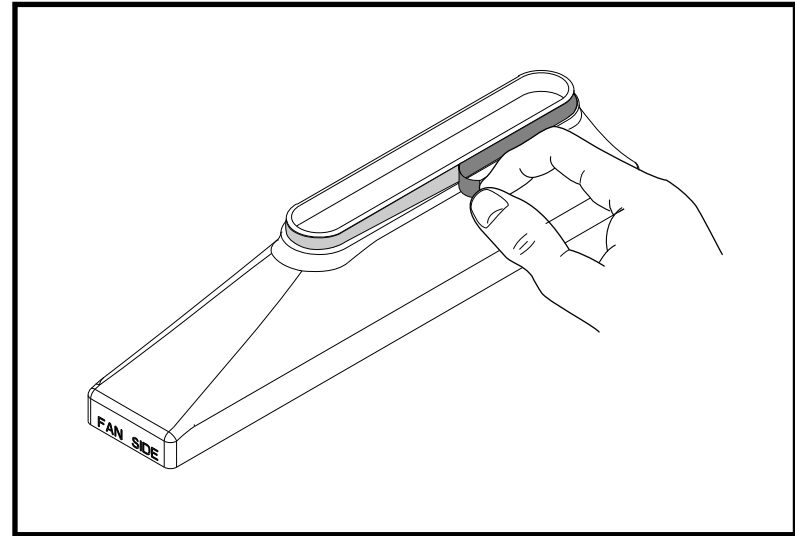



Note: Make sure the “WALL SIDE” is facing the wall, and the “FAN SIDE” is facing the fan when installing.

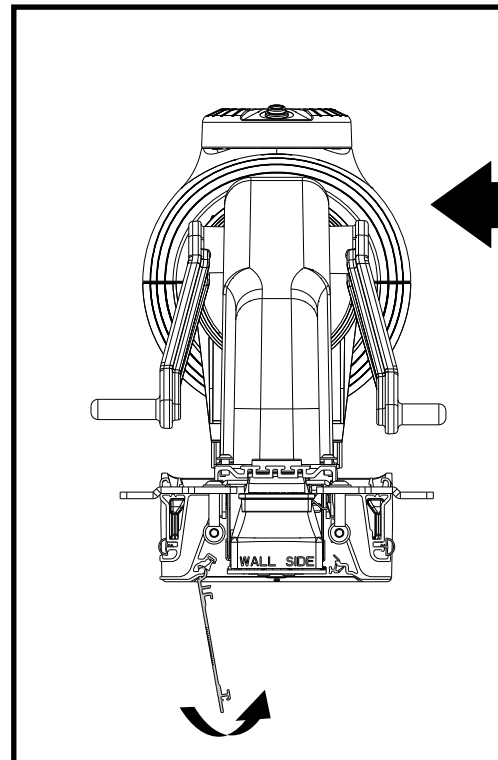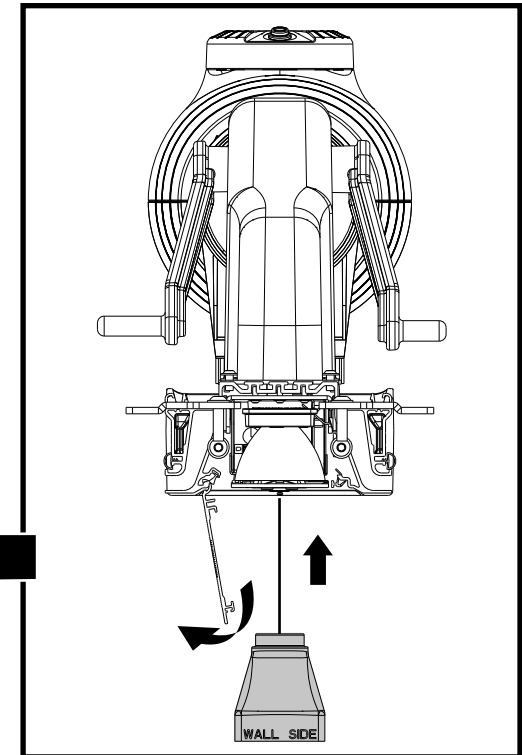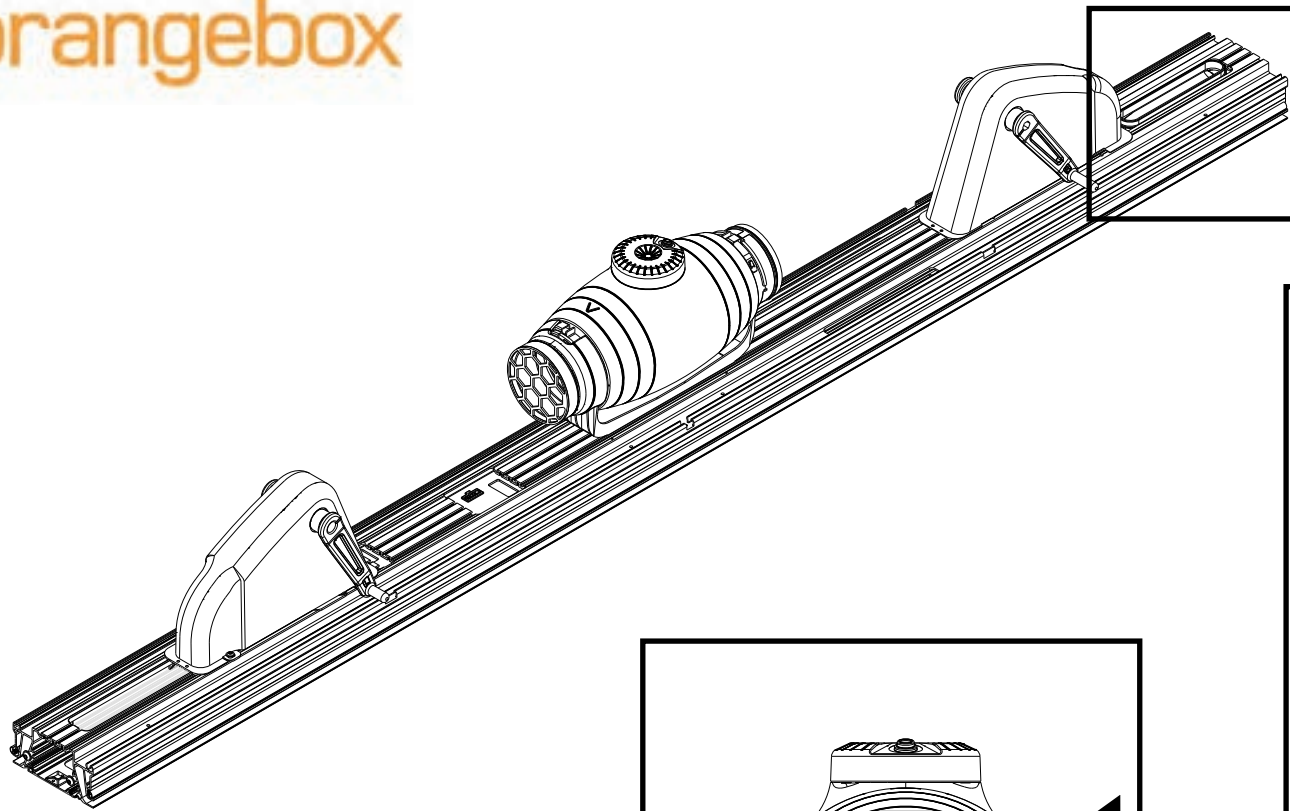

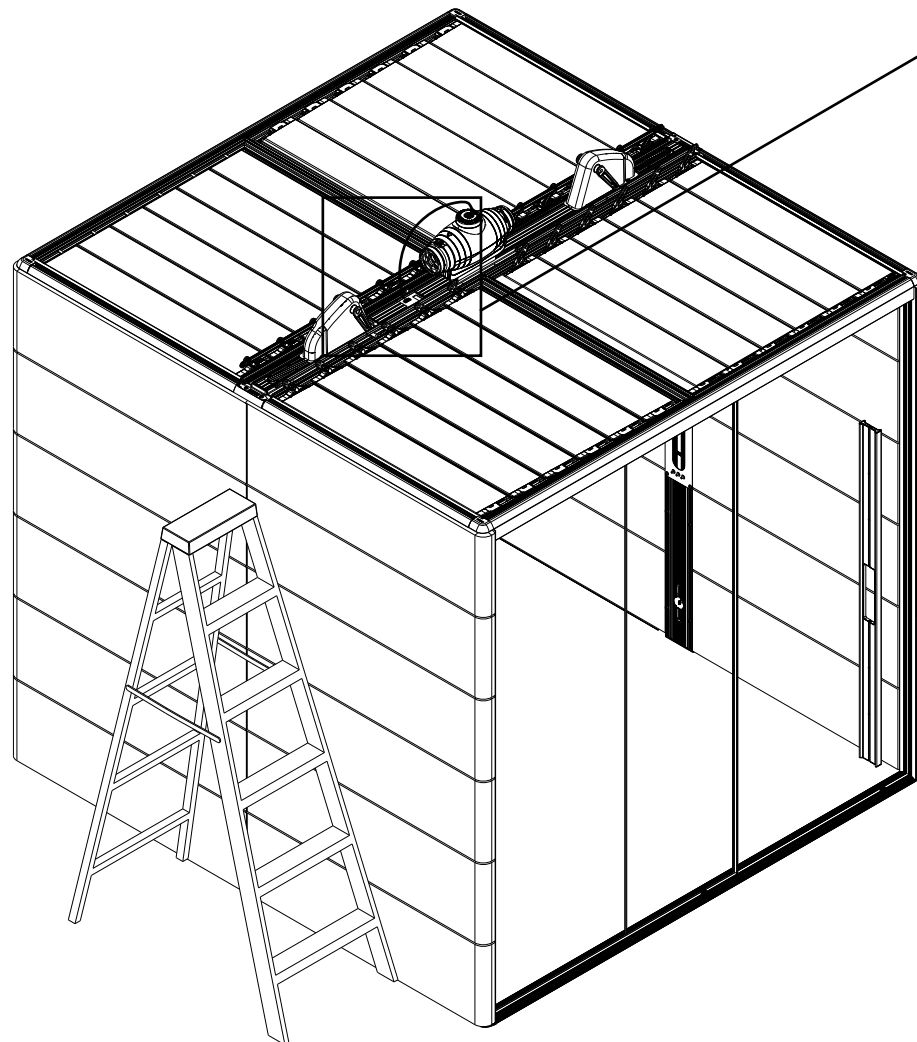

11

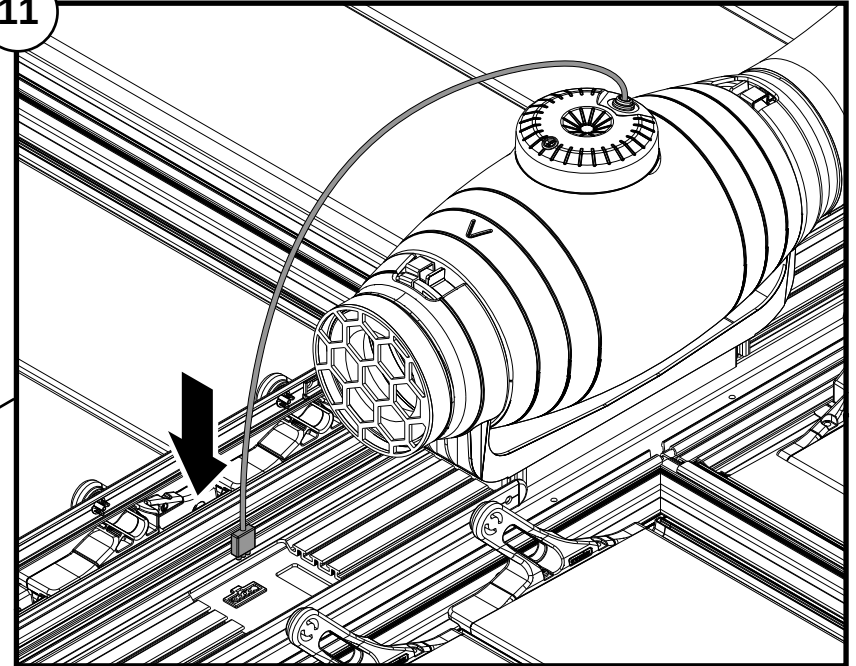

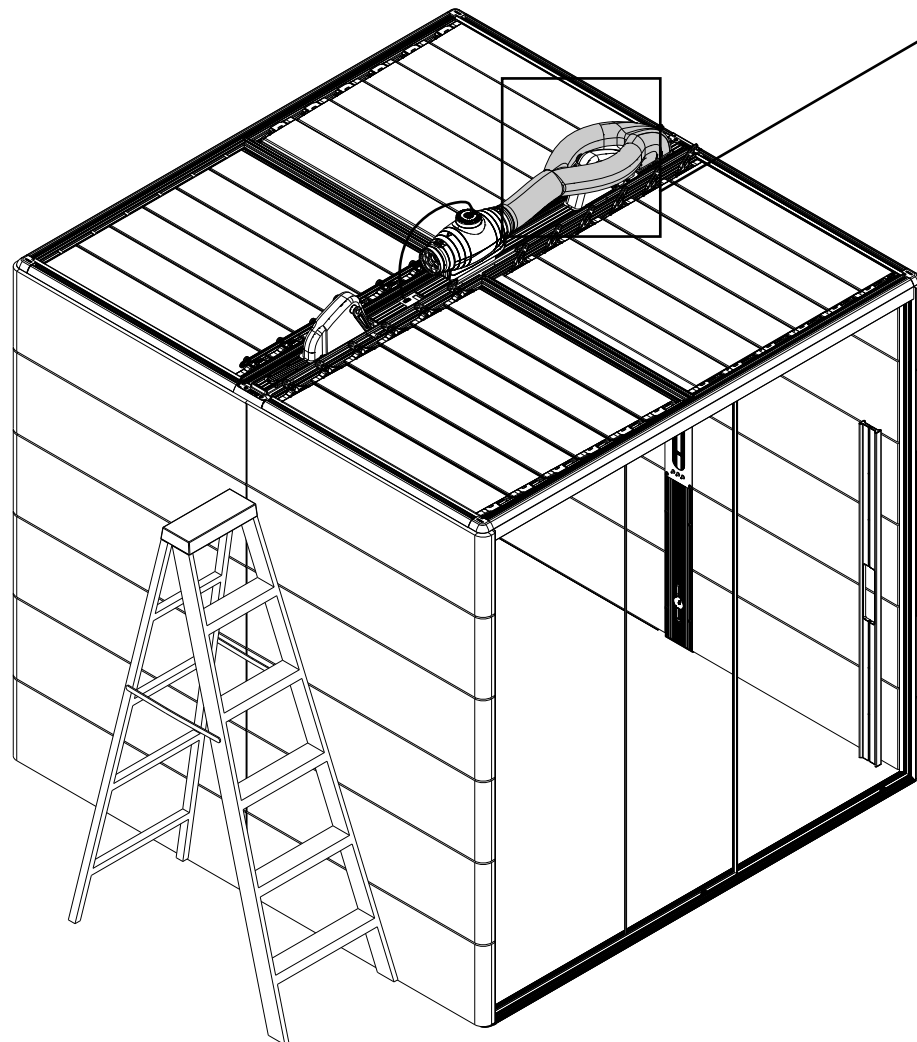

12

