


Instruction for installing 5601P alternative heat detector

1. Remove the current heat base from the Horizontal, do so by loosening 2 screws and freeing the 2-core cable. Once removed tighten back up the screws and set the base aside.




2. Locate the new heat detector and base (5601P), undo the base from the head by twisting, then slide the base over the 2-core cable.

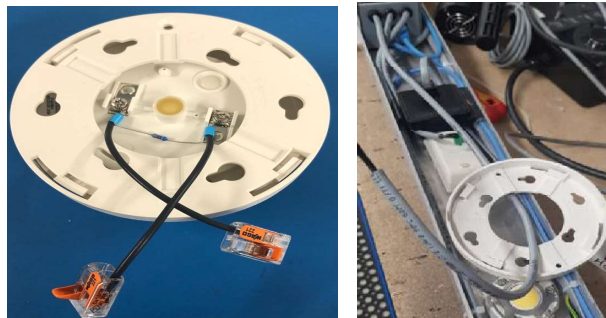

3. Taking the heat head, lift the latch on the empty side of each 2 pole Wago connector. Take the 2-core cable and insert 1 core into each of these (ensure that the strands are fully inserted) snap shut the connector to secure the cable.



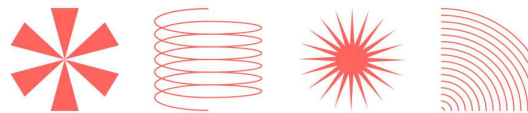

4. Fit the heat detector head back onto the base, do so by twisting clockwise until it clicks into position.



5. Carry out heat test to the current standard.

