



AIR Inner Panels

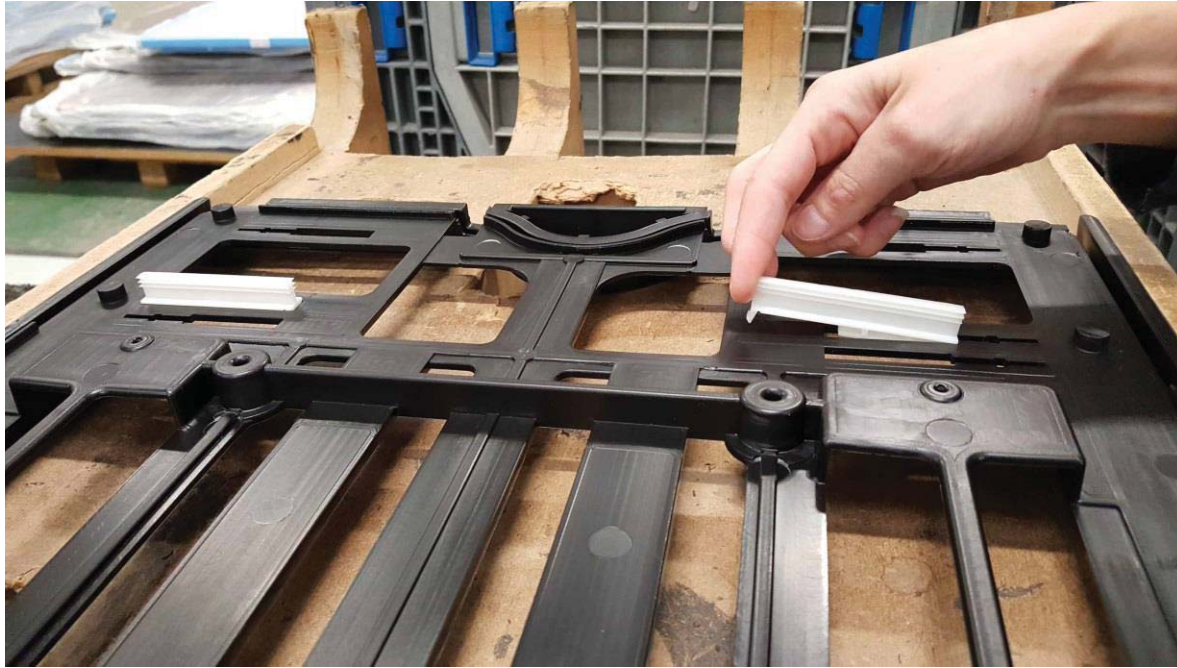


Slot the panel clips in place.

***CRITICAL* THE POSITION OF THE CLIPS HAS TO BE AS SHOWN, FITTED ON THE OUTERMOST EDGE AND MIDDLE.**

Panel is now ready for upholstery.

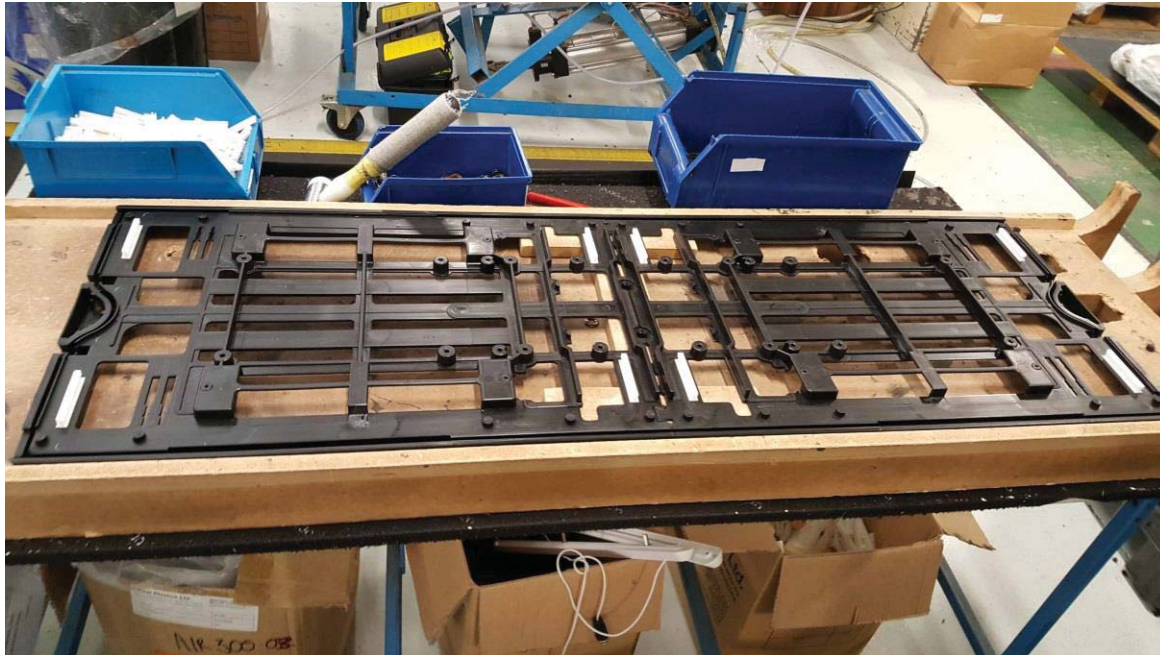

AIR 23 Outer Panels

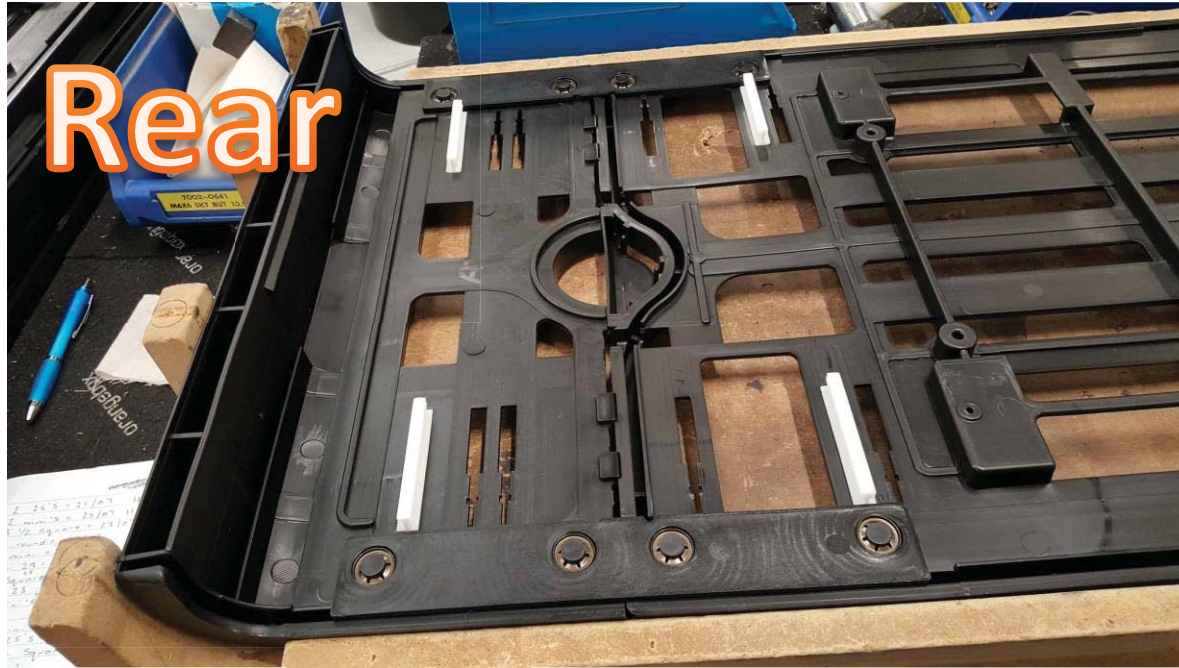

Slot the panel clips in place.

***CRITICAL* THE POSITION OF THE CLIPS HAS TO BE AS SHOWN, FITTED ON THE OUTERMOST EDGE AND FIFTH POSITION ON THE REAR OF THE PANEL, AND AT THE THIRD POSITION ON THE FRONT OF THE PANEL AS SHOWN**

Panel is now ready for upholstery.



AIR 25/27 Outer Panels



Slot the panel clips in place.

***CRITICAL* THE POSITION OF THE CLIPS HAS TO BE AS SHOWN, 3RD POSITION IN ON THE CURVED SIDE, SECOND POSITION IN ON THE FLAT SIDE.**

Panel is now ready for upholstery.

Trim the outermost lugs with a pliers



orangebox AIR 27 Hoop 2 Hoop Panels US Inc.



Slot the panel clips in place.

***CRITICAL* THE POSITION OF THE CLIPS HAS TO BE AS SHOWN, FITTED ON THE SECOND POSITION IN ON EITHER SIDE.**

Panel is now ready for upholstery.



Trim the outermost lugs with a pliers on both sides.